



- Large and clear display with knob for easy program selection
- Same interface as the washer family feeling
- Easy access with user friendly interface
- Language selection
- Drying program packages optimized on Economy, Care and Time.
- Service program for adjustment of the parameters

New Timer — Compass Pro Thinking of your Electrolux



- Replacing Selecta
- Selection of programs through rotary knob
- Quick selection of residual moisture through push-buttons
- Coin variant without knob

New Timer - Compass Pro





- Eco Button Saves 10% more energy than a regular cycle.
- N.B.: cycle is longer (+15 min)
- Care Button Gives a better finish to the linen (less creases and wrinkles). N.B.: cycle is longer
- Speed (default set-up) Gives the shortest possible cycle

