

User friendly control panel with clear icons puts everyone at ease.

*green&clean hood type dishwasher*



The WASH-SAFE CONTROL light turns green to guarantee rinsing has been performed perfectly with a constant temperature over 84°C.



**On /Off button**




**Self cleaning**

Once the tank filter and overflow pipe have been removed, pressing this button will activate the emptying of the wash tank and the wash pump. After that, four rinse cycles will start to sanitize the washing chamber. When completed, the water from rinsing is drained completely to avoid bacteria proliferation.



**Washing Temperature indicator**

When lit, it indicates that the washing cycle is in operation at the temperature shown on the display.

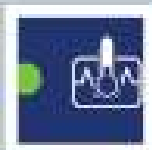

**Rinsing Temperature indicator**

When lit, it indicates that the rinsing cycle is in operation at the temperature shown on the display.



**Hood lift**

Automatic hood movement available in selected models.



*green&clean hood type dishwasher aesthetic double skin insulated hood for a quiet working environment*



**Cycle 1**

Short wash cycle (54 sec) recommended for lightly soiled items and glasses.



**Cycle 2**

Medium wash cycle (90 sec) recommended for medium soiled items.



**Cycle 3**

Long wash cycle (150 sec) recommended for heavily soiled items.



**Infinite**

Infinite wash cycle recommended for soaking heavily soiled items.