



On /Off button



Self cleaning

Once the tank filter and overflow pipe have been removed, pressing this button will activate the emptying of the wash tank and the wash pump. After that, four rinse cycles will start to sanitize the washing chamber. When completed, the water from rinsing is drained completely to avoid bacteria proliferation.



Washing Temperature indicator


When lit, it indicates that the washing cycle is in operation at the temperature shown on the display.



Rinsing Temperature indicator

When lit, it indicates that the rinsing cycle is in operation at the temperature shown on the display.

Hood type dishwasher

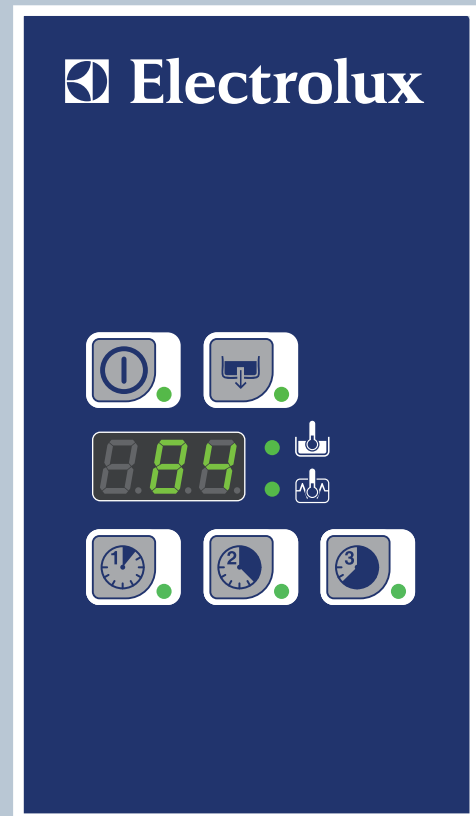

Hood type dishwasher aesthetic



Cycle 1

Short wash cycle (54 sec) recommended for lightly soiled items and glasses.



Cycle 2

Medium wash cycle (90 sec) recommended for medium soiled items.



Cycle 3

Long wash cycle (150 sec) recommended for heavily soiled items.