

2 aesthetics and 27 models to suit all your needs

User friendly control panel with clear icons puts everyone at ease.

green&clean undercounter dishwasher



The WASH•SAFE CONTROL light turns green to guarantee rinsing has been performed perfectly with a constant temperature over 84°C.



Self cleaning

Once the tank filter and overflow pipe have been removed, pressing this button will activate the emptying of the wash tank and the wash pump. After that, four rinse cycles will start to sanitize the washing chamber. When completed, the water from rinsing is drained completely to avoid bacteria proliferation.



On /Off button



Washing Temperature indicator

When lit, it indicates that the washing cycle is in operation at the temperature shown on the display.



Rinsing Temperature indicator

When lit, it indicates that the rinsing cycle is in operation at the temperature shown on the display.



Cycle 1

Short wash cycle (90 sec) recommended for lightly soiled items and glasses.



Cycle 2

Medium wash cycle (120 sec) recommended for medium soiled items.



Cycle 3

Long wash cycle (240 sec) recommended for heavily soiled items.



green&clean undercounter dishwasher aesthetic

double skin insulated wall for a quiet working environment