



# FISH KEEPERS

MANUAL OF INSTRUCTIONS FOR USE AND INSTALLATION





# FISH KEEPERS

## OPERATING INSTRUCTIONS

1. Always connect to a three pin earthed electricity point - 220/230v a/c 50Hz unless otherwise stated
2. Set thermostat to number 3 or 4 setting and leave to run for at least 12 hours (ideally 24hrs) before loading
3. Check Temperature, this should be between -1 to +3 Celsius. To obtain a colder temperature move the thermostat to a higher setting. For a warmer temperature move to a lower number setting
4. To minimise dehydration if fish is to be stored for more than 24hrs it is advisable to cover the tray with polythene or grease proof paper. This will also reduce the ice build up in the refrigerator and thus prolong the time between defrost cycles.
5. Defrosting should be done weekly, sometimes twice weekly may be necessary in hot weather and heavy usage EG: frequent door opening.

### TO DEFROST:

Empty the top tray and switch off, put a shallow dish under the drain until the thaw is complete, **DO NOT HACK AT THE ICE!** This may result in damage to the refrigeration system and an expensive repair may be necessary

6. The fish cabinet is constructed from high grade AISI 304 stainless steel and therefore any cleaning method may be used with detriment. In cleaning the cabinet, please remember there are electrical parts so the use of a hosepipe is only recommended if great care is taken and the cabinet is disconnected from the mains supply. A wipe down with a clean damp cloth should suffice as the fish liquor is confined to the trays
7. The drain is only for cleaning and defrosting.

