 
 

## **Double Contact Grill**









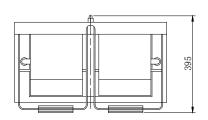

## **IMPORTANT - SEASONING THE COOKING SURFACES BEFORE USE**

The cooking surfaces need to be seasoned before using for the first time.

- 1. Ensure the cooking surfaces are clean.
- 2. Brush the surfaces with cooking oil.
- 3. Set the thermostat to 110°C and turn the appliance on. The power indicator light turns on.
- 4. Once the appliance reaches temperature the power indicator light turns off.
- 5. Turn the appliance off and allow it to cool before wiping away any excess oil.
- 6. The appliance is now ready to use.

FEATURES
Stainless steel construction
Ribbed or smooth bottom plate options
Supplied with wire cleaning brush
Cast iron plates
Counter balanced top plates
Removable drip tray

TECHNICAL SPECIFICATIONS				
Controller:	Manual thermostat			
Temperature Range:	+50°C ~ +300°C			
Power Consumption:	1800+1800W			
Power Supply:	2x 13amp			

MODEL	FINISH	EXTERNAL DIMENSIONS (H x W x D mm)	WEIGHT (kg)	RRP
BRSCG2	Top ribbed, bottom smooth	210 x 570 x 395	30	
BRRCG2	Top ribbed, bottom ribbed	210 x 570 x 395	30	





