



V. How to Clean

- 1). Unplug and wait until the cooker is cooled down completely. Clean the cooker after using each time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).

TROUBLESHOOTING

Error Message	Cause	Solution
E0	No pan or unsuitable pan	Suitable pan
E1	Temperature of IGBT is too high or temperature testing circuit failure.	Clear/unblock ventilation slots. Let the device cool off for a few minutes. The device is ready for the error message remains indicated in the display after the device has cooled off . Contact retailer
E2	Heating empty pan, temperature of pan is too high or temperature testing circuit of pan is fail.	Remove the cookware from the hob. Let the device cool off for a few minutes .The device is ready for operation afterwards
E3	Voltage is unusual.	Let the device cool off for a few minutes. The device is ready for operation afterwards

Induction Cooker



MODEL : BSPIH



I .Specification

- 1). Item No.: BSPIH
- 2). Power Rate: 3100W
- 3). Voltage: 220-240V~ 50/60Hz
- 4). Temperature: 60°C-240°C

II . Cautions


Please read carefully the following instructions before using the induction cooker.

- 1). Do not plug with wet hands in order to avoid getting electric shock.
 - 2). Do not plug into a socket where several other appliances are plugged in.
 - 3). Do not use if the power cord is damaged or the plug does not fit the socket safely.
 - 4). Do not open the cooker to replace spare parts by yourself.
 - 5). Do not use the cooker closed to flame or wet places.
 - 6). Do not use where children can easily touch the cooker, or allow children to use the cooker by themselves.
 - 7). Do not place on unstable surfaces.
 - 8). Do not move the cooker together with a pot.
 - 9). Do not heat a pot empty or overheat to avoid dry boiling.
 - 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
 - 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
 - 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
 - 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
 - 14). If the surface is cracked, switch off and take to the service center immediately.
 - 15). Do not block air intake or exhaust vent.
 - 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
 - 17). Do not place the cooker close to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards or cassette tapes.
 - 18). The power cord must be replaced by qualified technicians.
 - 19). Stands for the surface is liable to get hot during use.
 - 20). This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Seek medical advice before use if fitted with a pacemaker or similar medical device.



- 21). Non-ionizing electromagnetic radiation, be careful.
- 22). Dangerous voltage, be careful about the high voltage.

III.How to Use

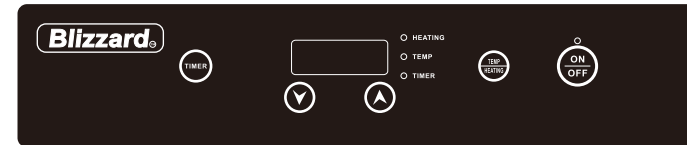

- 1). Please put suitable cookware onto the plate of induction cooker, and connect the plug to suitable socket. After connected, the light of Power will shine, indicating that the power is connected normally.
- 2). Pressing ON/OFF, the light of Heating will shine, indicating that the induction cooker is entering the state of heating, the default power of level is 2000W. Adjust the power rate from level 3100W.
- 3). Pressing Heat/Keep button, the light of Keep temp will shine, indicating the induction cooker is entering the state of keeping temperature, the default temperature is 100°C, Adjust the temperature from 60°C to 240°C.
- 4). Adjust the time from 0 minute to 180 minutes by “▲” or “▼” at the state of Time.
- 5). When pressing ON/OFF during the working state, the induction cooker will stop working immediately. After stopping working, the fan will cool the induction cooker for one minute, then will be off.
- 6). After pressing ON/OFF, the induction cooker will shut off automatically if there is no any operation within 2 hours.

.Usable and Non-usable Utensils

1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 17 to 34cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

