



Exploded diagram and spare parts list - CE208

Machine	Explode	Code	Description
CE208 Buffalo Induction Hob - 3kW	1	AD150	Ceramic Glass
CE208 Buffalo Induction Hob - 3kW	2		Insulation Sticker
CE208 Buffalo Induction Hob - 3kW	3		Knob
CE208 Buffalo Induction Hob - 3kW	4	AD153	Control Panel
CE208 Buffalo Induction Hob - 3kW	5	AG085	Display PCB From PO197945
CE208 Buffalo Induction Hob - 3kW	6	AD156	Control Panel Sticker
CE208 Buffalo Induction Hob - 3kW	7		Collision Avoidance Part
CE208 Buffalo Induction Hob - 3kW	8		S/S Body
CE208 Buffalo Induction Hob - 3kW	9		Sensor
CE208 Buffalo Induction Hob - 3kW	10	AG086	Coil From PO197945
CE208 Buffalo Induction Hob - 3kW	11	AG087	Mainboard From PO197945
CE208 Buffalo Induction Hob - 3kW	12		Inner Plastic Box
CE208 Buffalo Induction Hob - 3kW	13		Power Cord
CE208 Buffalo Induction Hob - 3kW	14	AG088	Fan From PO197945
CE208 Buffalo Induction Hob - 3kW	15		Power Cord Clasp
CE208 Buffalo Induction Hob - 3kW	16		Bottom
CE208 Buffalo Induction Hob - 3kW	17		Foot
CE208 Buffalo Induction Hob - 3kW	18		Earth Wire
CE208 Buffalo Induction Hob - 3kW	19		Air Filter