












| Machine                                | Explode | Code  | Description            |
|--|---------|---|------------------------|
| CH171 - Rowlett Premier 6 Slot Toaster | 1       |    | Pre-6 Body             |
| CH171 - Rowlett Premier 6 Slot Toaster | 2       |    | End Plate              |
| CH171 - Rowlett Premier 6 Slot Toaster | 3       |    | Inner Assy/P6          |
| CH171 - Rowlett Premier 6 Slot Toaster | 4       |    | Heat Shield Assy/P6    |
| CH171 - Rowlett Premier 6 Slot Toaster | 5       |    | Finger Bar-6P          |
| CH171 - Rowlett Premier 6 Slot Toaster | 6       |    | Adapter Plate/P6       |
| CH171 - Rowlett Premier 6 Slot Toaster | 7       |    | Fixed Plate/P6         |
| CH171 - Rowlett Premier 6 Slot Toaster | 8       | AK221   | Power Cord UK          |
| CH171 - Rowlett Premier 6 Slot Toaster | 9       |   | Power Cord Buckle      |
| CH171 - Rowlett Premier 6 Slot Toaster | 10      |    | Wire Bushing           |
| CH171 - Rowlett Premier 6 Slot Toaster | 11      | AK222   | Fuse Holder            |
| CH171 - Rowlett Premier 6 Slot Toaster | 12      |   | Fuse                   |
| CH171 - Rowlett Premier 6 Slot Toaster | 13      | AK223   | Thermostat Cut Out     |
| CH171 - Rowlett Premier 6 Slot Toaster | 14      | AK224   | Position Selector      |
| CH171 - Rowlett Premier 6 Slot Toaster | 15      | AK225   | Indicator              |
| CH171 - Rowlett Premier 6 Slot Toaster | 16      | AK226   | Selector Knob          |
| CH171 - Rowlett Premier 6 Slot Toaster | 17      | AK239   | Timer                  |
| CH171 - Rowlett Premier 6 Slot Toaster | 18      | AK240   | Timer Knob             |
| CH171 - Rowlett Premier 6 Slot Toaster | 19      |    | Screw/Nut              |
| CH171 - Rowlett Premier 6 Slot Toaster | 20      | AK229   | Feet (set 4)           |
| CH171 - Rowlett Premier 6 Slot Toaster | 21      | AK230   | Nut                    |
| CH171 - Rowlett Premier 6 Slot Toaster | 22      |   | Spring                 |
| CH171 - Rowlett Premier 6 Slot Toaster | 23      |   | Ejectorbar             |
| CH171 - Rowlett Premier 6 Slot Toaster | 24      |   | Sphere Knob            |
| CH171 - Rowlett Premier 6 Slot Toaster | 25      |  | Guard Wire             |
| CH171 - Rowlett Premier 6 Slot Toaster | 26      | AK231   | End Element 310W       |
| CH171 - Rowlett Premier 6 Slot Toaster | 27      | AK232   | Middle Element 400W    |
| CH171 - Rowlett Premier 6 Slot Toaster | 28      | AK233   | Element Link           |
| CH171 - Rowlett Premier 6 Slot Toaster | 29      |  | Base Plate/P6          |
| CH171 - Rowlett Premier 6 Slot Toaster | 30      | AK238   | Crumb Tray/P6          |
| CH171 - Rowlett Premier 6 Slot Toaster | N/A     | AL994   | Side & Middle Elements |