



CATER-COOK

CK0079/ CK0089

USER MANUAL

*Please read this manual carefully prior to use
& keep it in a convenient place for future reference.*



CATER-KWIK

CATER KWIK, The Lakeland Catering Centre, Newland, Ulverston, Cumbria, LA12 7QQ
Tel: 01229 480001 | E-mail: INFO@CATERKWIK.CO.UK

CONTENTS

Thank you for purchasing the Cater-Cook toaster. In order to ensure safe operation, you are advised to read to this manual carefully, before installation & use to fully understand the features, installation & operational details of this equipment.

Contents:

FEATURES	3
STRUCTURE	4
ELECTRICS	5
NOTES	6

FEATURES



Before using the toaster keep these instructions for future reference. Correct maintenance of this machine provides the best possible performance of your cater-cook toaster.

Pack Contents

- Toaster.
- User manual.

Features

- This product has a robust stainless steel construction.
- Attractive design with rounded sides.
- Adjustable timer to ensure that bread is browned to perfection.
- Removable crumb tray.
- Manual uplift bar.
- Energy efficient operation.
- Slot selection.

Type	CK0079	CK0089
Model	4 slot toaster	6 slot toaster
Rated load (V)	220-240V/50-60Hz	220-240V/50-60Hz
Rated power	1.8 (1.1/1.8)KW	1.8 (1.1/1.8/2.5)KW
Time of work	0-5 minutes	0.5 minutes
Dimensions	330 x 285 x 250mm	465 x 285 x 250mm

STRUCTURE

1. Wide slots.
2. Slot selection.
3. ON/OFF indicator light.
4. The temperature control with timing function.
5. Oven body.
6. Crumb tray.
7. Manual uplift bar.


Operation

- Connect the appliance to the mains power.
- Insert desired pieces of bread.
- Select the number of pieces of bread using the slot selection.
- Adjust the timer to desired time. The ON/OFF indicator will now light up.
- Pull the lever up to lower the bread into the toaster.

Maintaining your Toaster

- The power must be turned off when maintaining the machine.
- The exterior of the toaster can be cleaned with soft cloth. DO NOT USE CORROSIVE CLEANING PRODUCTS ON THIS MACHINE.
- Dry thoroughly after cleaning before use.
- Empty the crumb tray regularly by sliding out and sliding back in once empty.
- A qualified technician should carry out any repairs on your Cater-Cook toaster.

ELECTRICS

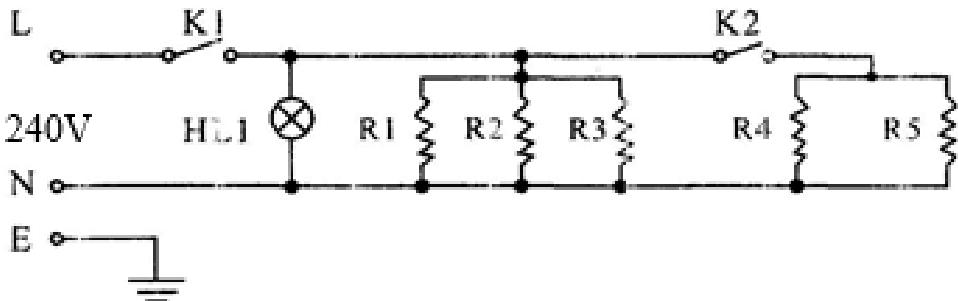

K1 - The on-off timing

HL1 - The indicator light for power

K2 - The on-off of alternative

R1-R5-The electric thermal plate

- This appliance is supplied with a 13Amp BS1363 standard fused plug, that should be connected to a suitable mains socket.
- The appliance is wired with a live wire (brown), a neutral wire (blue) and an earth wire (green/ yellow).
- To prevent from electric shock do not immerse any part of this product in water or other liquid
- Bread may burn therefore toasters must not be used near or below curtains and other combustible materials.
- **When toasting do not leave appliance unattended**
- Do not attempt to dislodge bread when the toaster is plugged in
- Do not allow the cable to touch hot surfaces, or to hang over the edge of a table.
- Do not operate this appliance if the cord or plug is damaged
- Do not use outdoors
- Accessible surfaces of the toaster may get hot during use

NOTES