



CATER-COOK CK0223

HEAT LAMP

MANUAL

*Please read this manual carefully prior to use
& keep it in a convenient place for future reference.*



CATER KWIK, The Lakeland Catering Centre, Newlands, Ulverston, Cumbria, LA12 7QQ
Tel: 01229 480001 | E-mail: INFO@CATERKWIK.CO.UK

CATER-KWIK

Contents

Thank you for purchasing a Cater-Cook machine. In order to ensure safe operation, you are advised to read to this manual carefully to fully understand the features, operating instructions & maintenance details of this equipment.

	Page
<u>Contents:</u>	2
<u>Important Information</u>	3
<u>Assembly & Operation</u>	4
<u>Maintenance</u>	5
<u>Notes</u>	6




Important Information

When using this electrical appliance, the following safety instructions should be followed:

1. Read all instructions before using this appliance.
2. To protect against risk of electric shock, avoid use if this has had any liquid spilt on this.
3. Children should be supervised when near this machine.
4. Unplug the power cord from the wall before cleaning.
5. Do not touch the hot lamp when switched on.
6. If the cord or plug has been damaged, do not use until this has been repaired by a qualified engineer.
7. Do not let the power cord hang over the edge of the table or counter.
8. Never clean the lamp with a wet cloth.
9. The product should be placed on a stable surface.
10. Do not use outdoors.

Assembly & Operating

1. Put the lamp base (1) on a flat surface.
2. Insert the middle lamp (2) into the aluminium tube (3) of the base frame.
3. Insert the upper lamp (4) into the middle frame and fix them by screw(5).
4. Adjust the total height of the warmer and tighten by screwing (6).
5. Place the food tray in place(7).
6. Plug the power cord in and turn on.

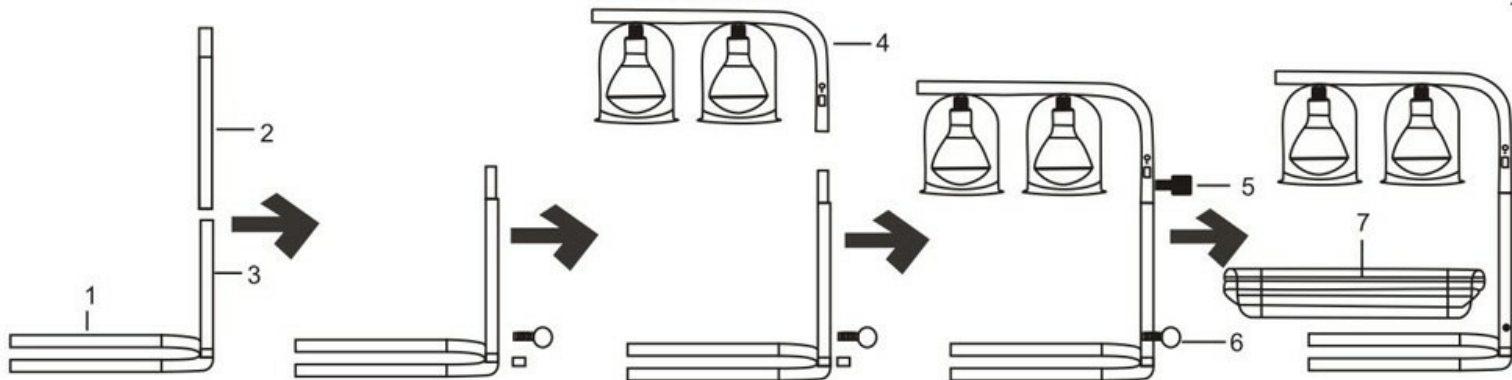

Operating Instructions

Put the food into the heat preservation tray.

Plug in the power cord and turn on the switch.

Adjust the height to a suitable level, to maintain the temperature of the food.

Specification

Model	CK 0224
Voltage/Frequency	240V 50Hz
Power	2x 275W max
Weight	4.5KG
Cord Length	2M
Dimension	490 x 355 x 610mm

Maintenance

If the bulb fails to work:

Check the power plug is properly connected and switched on.

Check the bulb has not been damaged.

Caution unplug before changing the bulb.

How to clean:

- Unplug the power cord before doing the cleaning.
- Clean the food tray by water or detergent.
- Clean other parts except the lamp shade with a damp cloth before wiping dry with a soft cloth.
- Clean the lamp shade with a dry cloth.

