

SETTINGS FOR DIXELL XR03CX CONTROLLER

PRESS SET AND DOWN ARROW FOR 3 SECS - HY COMES UP- SET TO 2 OR 3

PRESS SET AND DOWN ARROW FOR 7 SECS - "HT" COMES UP

PRESS UPWARD ARROW OR DOWNWARD ARROW TO 3 THEN PRESS SET

PRESS UPWARD ARROW TO "LS" AND PRESS SET, USE ARROWS TO 3 THEN PRESS SET

PRESS UPWARD ARROW TO "US" AND PRESS SET, USE ARROWS TO 8 THEN PRESS SET

PRESS UPWARD ARROW TO "OT" AND PRESS SET, PRESS UP OR DOWN ARROW TO SET TO 0 (ZERO) AND PRESS SET

PRESS SET AGAIN TO GO TO "FS"

PRESS SET AGAIN TO GO TO "AL"

PRESS SET AGAIN TO GO TO "OD" - SHOULD BE 0 (ZERO)

PRESS SET AGAIN TO GO TO "AC" AND PRESS SET WHEN AT 3 (MINS)

PRESS SET AGAIN TO GO TO "CY"

PRESS SET AGAIN TO GO TO "DY" - 0 (ZERO)

PRESS SET AGAIN TO GO TO "ID" - SHOULD BE 8

PRESS SET AGAIN TO GO TO "ND" - SHOULD BE 20

PRESS SET AGAIN TO GO TO "EF"

PRESS SET AGAIN TO GO TO "AV" - SHOULD BE 99

PRESS SET AGAIN TO GO TO "AL" - SHOULD BE -55

PRESS SET AGAIN TO GO TO "AD" - SHOULD BE 15

PRESS SET AGAIN TO GO TO "DA" - SHOULD BE 90

PRESS SET AGAIN TO GO TO "IP"

PRESS SET AGAIN TO GO TO "CL"

PRESS SET AGAIN TO GO TO "DI" - SHOULD BE 5

PRESS SET AGAIN TO GO TO "RL" - SHOULD BE 8.2

PRESS SET AGAIN TO GO TO "PT"

PRESS SET AGAIN TO GO TO "RL"

PRESS SET AGAIN TAKES YOU BACK TO "HY" (BEGINNING)