

**CATER-BREW**

# Manual Fill Water Boiler - Instruction Manual

Models: CK1507, CK1510, CK2522



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.

## Caterkwik Ltd

The Lakeland Catering Centre  
Newlands  
Ulverston  
Cumbria  
LA12 7QQ

01229 480001

[info@caterkwik.co.uk](mailto:info@caterkwik.co.uk)

CE





## Instructions

For correct operation of the water boiler, please follow these instructions carefully.

### First Use.

1. Place the water boiler on a flat, smooth, dry and stable table, then pour in water to clean the inner tank for the first time. The water level should not be less than the **MIN** fill line, or above the **FULL** fill line.
2. Connect the plug to a suitable power socket.
3. Once connected, press the ON button, and turn the temperature dial clockwise to 100°C. The red indicator lamp will light up and the boiler will begin heating the water.
4. Once the boiler has reached the desired temperature, the yellow indicator light will light up and the water will be ready to use, and will enter **KEEP WARM** mode.
5. If the boiler continues to boil the water, check the temperature dial is at the correct setting, and turn it anti-clockwise until it stops heating.
6. When the boiler is in **KEEP WARM** mode, you may switch the thermostat to a higher required temperature using the temperature knob. The red indicator lamp will light up and the water will resume boiling.



# Manual Fill Water Boiler - Instruction Manual

## Repair & Maintenance

Cleaning of the boiler should be done regularly to ensure it is kept in great condition and working order.

1. To clean any limescale from the boiler, fill it with a mix of clean water and vinegar (**7 parts water, 3 parts vinegar**)
2. Allow the solution to remain heated at 90°C for no less than 2 hours.
3. Once finished, empty the boiler and rinse with fresh clean water.
4. In cases of heavier limescale, fill the boiler with clean water and add 5g of citric acid. Boil the solution for 1 hour, remove the scale and solution and rinse once more.
5. To clean the exterior surfaces. Firstly, ensure the boiler is switched off and disconnected from the power supply. Wipe with a soft damp cloth. Do not rinse or spray cleaning products directly onto the boiler.
6. If the boiler is not being used for a long duration, it should be cleaned, dried, packed away in the original box and stored in a dry place.
7. After use for a significant period of time the container may fade due to the oxidation of iron from running water. Handle it as follows:
  - Use a damp cloth wrapped around 1/4 lemon and place in the boiler.
  - Pour water into the boiler to the "FULL" fill line. Heat to 90°C for the duration of one hour.
  - Empty the water from the boiler and wash out the boiler using a nylon brush. This will remove the fading.
  - If you need to reduce the smell of lemons, boil fresh water in the tank and pour out once again.



# Manual Fill Water Boiler - Instruction Manual

## Safety Notices


1. Carefully read all instructions before operating your new product.
2. Do not immerse the product in water for cleaning, It must only be wiped with a dry cloth.
3. Should leakage be found from the water boiler, isolate the power immediately and call Caterkwik service on 01229 480001.
4. Do not position the boiler near flammable or explosive objects, or use it in an environment where corrosive chemicals are used.
5. Keep the water boiler away from children to avoid injuries. The surface will become very hot during operation. Avoid touching any metal surface during operation.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
7. Before operating the boiler, fill with the correct amount of water, then connect to the power supply. Dry burning the boiler will cause the overheat protection system to activate and could reduce the life of the heating element.
8. Ensure the product is grounded correctly before operating.
9. Do not fill the boiler past the **FULL** fill line, or under the **MIN** fill line.
10. If the supply cord is damaged, it must be replaced by the manufacturer.
11. If the boiler is dry-burning, switch off the power. Fill once it has cooled, and turn back on. If it fails to work, notify the Caterkwik service department on **01229 480001**
12. Do not move the boiler with the handles, if they break you risk spilling hot water. Lock the cover before moving the boiler. Only move the boiler when it is off, and after any water has been drained.

## Manual Fill Water Boiler - Instruction Manual

### Technical Specification



1. Touch handle.
2. Handle.
3. Water level guage.
4. Tap.
5. Indicator lamp.
6. ON/OFF switch.
7. Thermostat.
8. Body.
9. Lid.
10. Base.
11. Fixing base.

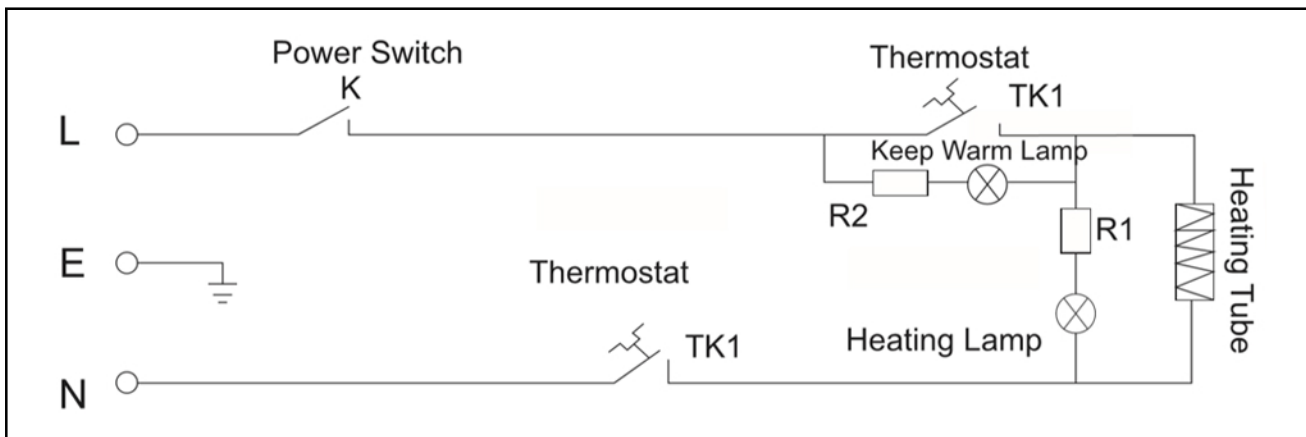

The WEEE symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way, when it becomes of no further use or has worn out. Please contact your local authority for details of where to take the item for recycling.