

**CATER-COOK**

# Electric Kebab Knife - Instruction Manual

Model: CK1964



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.



## Caterkwik Ltd

The Lakeland Catering Centre  
Newlands  
Ulverston  
Cumbria  
LA12 7QQ

01229 480001

[info@caterkwik.co.uk](mailto:info@caterkwik.co.uk)

CE





# Electric Kebab Knife - Instruction Manual

## Introduction

Thank you for purchasing the Cater-Cook electric kebab knife. For optimum performance and longevity of your equipment, carefully read and adhere to the included instructions.

Before first time and every day use, the below safety precautions **MUST** be followed.

### Safety Precautions

- Do not use the knife in damp or wet areas.
- Do not immerse the knife or transformer in water.
- Always disconnect the knife from the power supply before cleaning or blade maintenance.
- Do not disassemble the knife or transformer.
- Always handle the knife with care as the blade is extremely sharp.



## Electric Kebab Knife - Instruction Manual

### Introduction

#### Contents

Upon opening your Cater-Cook kebab knife, you should receive the following items in the box.

Please check that all items are accounted for before assembling.





### Assembly

#### Setup & Assembly

1. Unpack your kebab knife and connect the female end of the power cord to the kebab knife. There is a small notch in the socket to help you align the pins.

Once attached, screw tightly together.




2. Attach the male end of the power cord into the transformer. Ensure that it clicks when installed for a secure fit.



3. Connect the 13A plug end of the transformer to a suitable power socket and switch the unit on.

Your kebab knife is now ready to use.

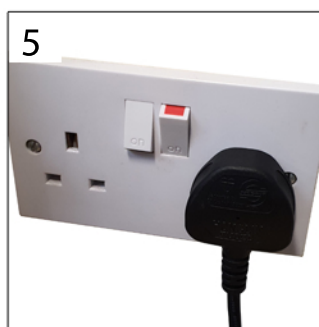

When using the knife, use arm action rather than wrist action. Put the knife against the kebab and slice in a downward motion using your arm. Repeat as needed.



# Electric Kebab Knife - Instruction Manual


## Maintenance

### **WARNING!**

Before attempting any cleaning or maintenance of your kebab knife you must **FULLY** disconnect it from the power supply.

### **Cleaning**

Remove the blade cover by removing both thumb screws located on the underside of cover. Then remove the blade itself using the provided hex key.

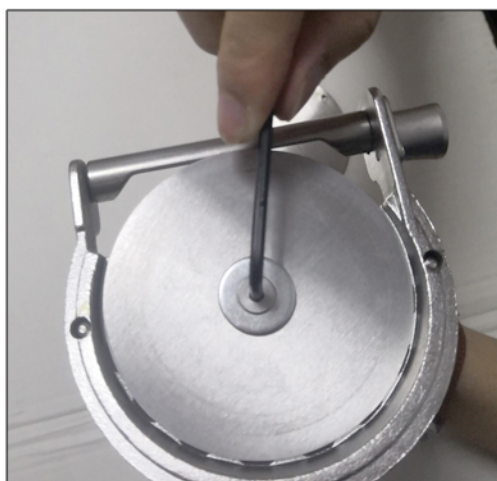

Wash the housing of the head unit and blade thoroughly using hot water and a mild cleaning detergent.

### **WARNING!**

**DO NOT** wash the body of the knife using water, only use a damp cloth.

Once clean, dry the blade and housing using a clean cloth, then reassemble the knife, making sure to fully tighten the blade and blade cover.




## WARNING!

Take extra care when sharpening the blade, protective gloves should be worn to help prevent any injury to the user.

### Sharpening

Always ensure the blade is both clean & dry before sharpening.

To sharpen the blade, hold the included sharpening tool parallel to the blades edge with the bevelled side facing down.

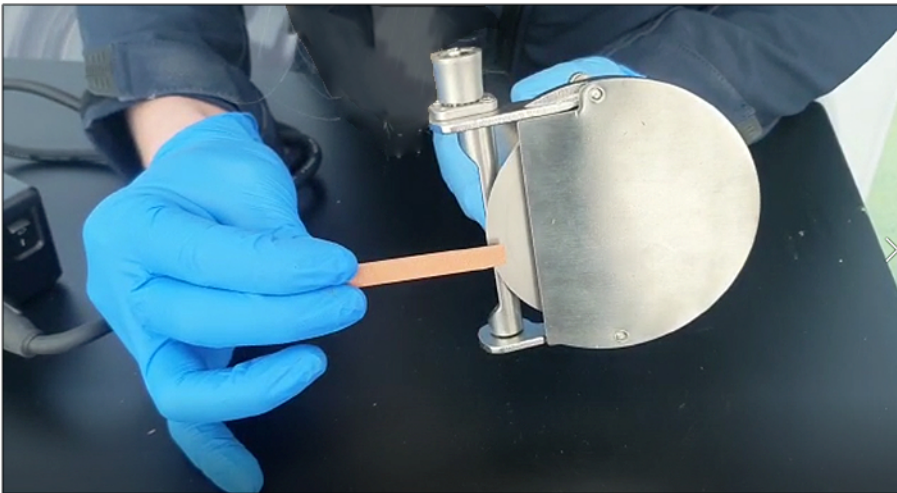

Turn the kebab knife on and allow the blade to spin. Apply light pressure to the top edge of the blade with the tool until sufficient sharpness is achieved.

Once you have finished sharpening the blade, fully disconnect the kebab knife from the power supply and wipe the blade with a clean damp cloth.



# Electric Kebab Knife - Instruction Manual

## Maintenance

### **WARNING!**

Any cutting thickness adjustments should only be made with the kebab knife completely disconnected from the power supply.

### **Cutting thickness**

The kebab knife allows the user to adjust the thickness of the cut to suit their preference. This knife is equipped with 9 different settings for thickness adjustment.

To adjust thickness, use the large knob on the side of the knife.

While holding the body of the knife with one hand, use the other hand to pull this knob outwards. You can then turn this knob to alter the thickness of the cut.

Once the desired setting is reached, simply push the knob back in to its original place.





# Electric Kebab Knife - Instruction Manual

## Troubleshooting

Everyday maintenance of your kebab knife is as simple as regular cleaning and sharpening of the blade itself. Any other maintenance work pertaining to the function of the kebab knife should only be carried out by Cater-Kwik service.

If you experience a fault with your kebab knife - Please contact Cater-Kwik Service via

**01229 480001**

### Troubleshooting

Fault	Resolution
The transformer cuts out while the kebab knife is operational.	The blade may be too blunt, forcing the transformer to exceed it's max electrical load.  Sharpen or change the blade.
Power light on the transformer is not illuminated while connected to the power supply.	Check the 13A plug fuse - If replacing the fuse does not fix the issue.  Contact Cater-Kwik Service. <b>01229 480001</b>
Smoke visible from the transformer.  or accidental liquid spillage on the transformer.	Unplug from the power immediately.  Contact Cater-Kwik Service. <b>01229 480001</b>