



# Double Door Display - Instruction Manual

Models: CK2001 & CK2002



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before the unit is installed and used for the first time.



## Caterkwik Ltd

The Lakeland Catering Centre  
Newlands  
Ulverston  
Cumbria  
LA12 7QQ

01229 480001

[info@caterkwik.co.uk](mailto:info@caterkwik.co.uk)

- Introduction.....P1
- Safety Precautions....P2
- Installation.....P3
- Opertion.....P4
- Cleaning.....P5
- Trouble Shooting.....P6





## Double Door Display Cooler - Instruction Manual

### Introduction

Thank you for choosing the Cater-Cool Upright Double Door Display Cooler.

Please read the following instruction manual clearly before use, and refer back to it for both cleaning and safety instructions.



**In the event of any damage to the cooler, it must be turned off immediately and disconnected from the electricity supply by removing the attached plug or manually tripping the circuit breaker.**

#### WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.


#### ◆ PRECAUTIONS FOR USE

#### WARNING




DONT TAMPER

All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

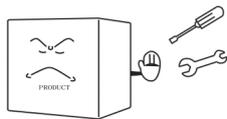


ELECTRICAL SHOCK HAZARDS

Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

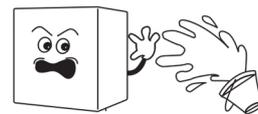

DANGER OF EXPLOSION

Never put flammable or volatile substances into the unit as this could result in a fire or an explosion.

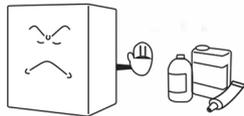


PROHIBITED

Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it, possibly resulting in an electrical shock or fire.




PROHIBITED


Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in an electrical shock, overheating and a fire.

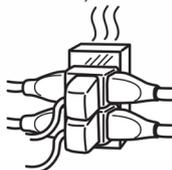

FLAMMABLE

Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

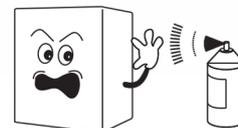


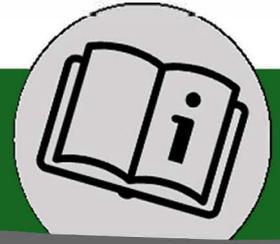

### Safety Precautions


#### ⚠ WARNING

Please make sure to leave at least 10cm between the cooler and wall for ventilation. If there is not enough adequate airflow, this will lower the cabinets cooling capacity.

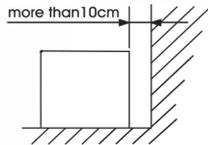


**DANGER OF ELECTRICAL SHOCK**

If it is unavoidable to install the cooler in a damp location, you will also need to install an electrical leakage circuit breaker. Without this, this could result in electrical shock.

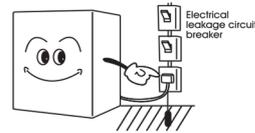


PROHIBITED

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause damage and/or injury.

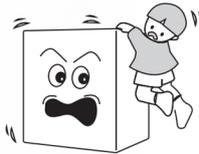

**DISCONNECT POWER CORD PLUG FROM WALL OUTLET**

Before moving the equipment, disconnect the unit from the wall outlet and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

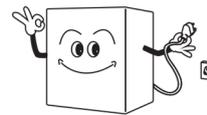

**DON'T PINCH FINGERS**

Remember to use the handle when closing or opening the unit. Holding from other positions could lead to pinched fingers and injury.




**Do not touch**


Do not push your hand or apply excessive force against the unit's glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, hold from the base of the plug. Pulling the cord could cause damage to the wire and possibly resulting in overheating and fire.

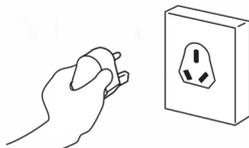

Take care when moving the unit to prevent tipping or falling. A falling unit could cause serious injury.

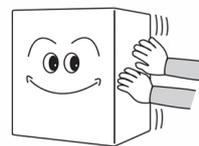


PROHIBITED

Do not throw items onto the shelves or place items totaling more than 30kg on each shelf. The shelf could damage and possibly cause injury.



Make sure when moving or replacing shelves that they are correctly placed and secure. An incorrectly placed shelf could fall and cause injury.

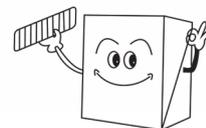



### Installation

#### BEFORE USE

- Remove all packaging & tape and leave the doors open to vent.
- The unit is cleaned before shipment. However, please clean the interior before use.
- Please insert power supply plug into the wall outlet.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

#### WAIT ATLEAST 5 MINUTES BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker. The compressor may be overloaded, and/or other damage may occur.

#### TEMPERATURE ADJUSTMENT

- The thermostat has already set to factory standard. To cool the cooler, turn dial to the right and raise the temperature, turn left. Excessive refrigeration will increase electricity consumption unnecessarily.

#### DRIP TRAY

- Defrosting is performed automatically and waste water is collected in the drip tray.
- Water in the drip tray is evaporated automatically. When in humid conditions, they may be more water in the drip tray, so this will have to be emptied manually once a day.

#### EFFICIENT USE

For better efficiency, please follow the instructions below:

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Install the unit in a well ventilated environment.

#### SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.



### Operation

#### PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
  - Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
  - Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.

#### THERMOSTAT INSTRUCTION


##### Operation

###### Control Panel

The control panel is located below the doors on the front of the appliance.

###### Turn On

1. Turn the Power switch On.
1. Set the temperature to the desired setting (see below).
2. Close the door of the appliance.
3. Connect the appliance to a mains power supply.

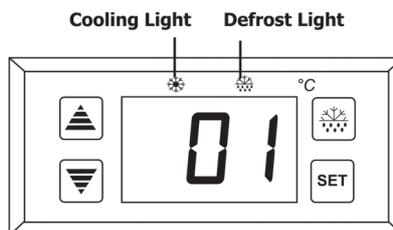

**Note: The Cooling Light is illuminated when the appliance is chilling the interior cabinet.**

4. Turn light switch On [I] or Off [O] as required.

###### Set the Operating Temperature

1. Press the **SET** button. The display will flash.
2. Press the or buttons to display the required temperature.
3. Press the **SET** button to store the temperature.


###### Manual Defrost

Cooler features an automatic defrost. However, should the appliance require an additional defrost period press and hold the button for 6 seconds.

Automatic defrost cycles are every 6 hours and last 20 minutes (factory defaults).

To stop the Defrost press and hold the button for 6 seconds.

**Note: If a manual defrost is started this resets the automatic defrost timer. During defrost periods the Defrost light is illuminated.**

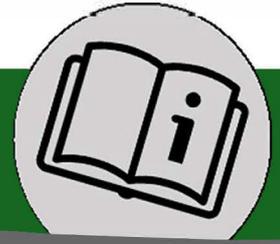

## Double Door Display Cooler - Instruction Manual

### Cleaning



**WARNING:** Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.



### 2 CHECKS

To ensure safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact Cater-Kwik.

## IN CASE OF THE FOLLOWING

### 1 POWER FAILURE

Keep opening and closing of the door to a minimum.  
Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

### 2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.  
Clean the compartment interior and wipe away all water.  
To prevent mould formation and bad smells, leave the door open to dry the compartment completely.

### 3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.  
When moving the cooler, make sure that the feet do not damage the power cord.  
Do not let the feet hit against floor steps, thresholds, etc.

### 4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent the door completely closing.  
Make sure not to store the unused cooler at a location where children play.  
Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

INSTRUCTION MANUAL

## BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet.  
Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



**CAUTION:** To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.



### Trouble Shooting

## BEFORE REQUESTING SERVICE

|                                 |   |
|---------------------------------|---|
| No refrigeration at all         | <ul style="list-style-type: none"> <li>● Is the power supply interrupted?</li> <li>● Is the power cord plug disconnected from the wall outlet?</li> <li>● Has the power fuse blown and/or the circuit breaker activated?</li> </ul>   |
| Inadequate refrigeration        | <ul style="list-style-type: none"> <li>● Is the temperature setting appropriate?</li> <li>● Are items obstructing the cold air inlet and suction outlet?</li> <li>● Are stored items packed too tight?</li> <li>● Is the door open or is it opened and closed frequently?</li> <li>● Is the condenser clogged?</li> </ul>     |
| Excessive noise                 | <ul style="list-style-type: none"> <li>● Are all feet in firm contact with the floor?</li> <li>● Is the rear panel of the cooler contacting the wall or other objects?</li> <li>● Are other objects in contact with the cooler?</li> <li>● Is the floor uneven?</li> </ul>  |
| Condensation on cooler exterior | <ul style="list-style-type: none"> <li>● Condensation may occur on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. Wipe away condensation with a dry cloth.</li> </ul> |

#### INSTRUCTION MANUAL

## REQUIRED INFORMATION

- |  |   |
|--|---|
| ① Nature of malfunction<br>(as accurately as possible) | ④ Customer's name, address,<br>phone number |
| ② Product number                                       | ⑤ Year and date of purchase                 |
| ③ Serial number  | ⑥ Desired date for service visit            |
- } (inscribed on badge)