

CATER-COOK

Hot Food Display - Instruction Manual

Models: CK2640, CK2865



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.

Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk

CE





Hot Food Display - Instruction Manual

Introduction

Thank you for purchasing the Cater-Cook heated food display. This product is designed to display hot food at a safe to serve temperature.

Please read these instructions carefully and keep for future reference.

WARNING

This appliance is NOT intended for use by children, people with reduced physical, sensory or mental capabilities or lack of experience unless supervised by a person responsible for their safety.

DO NOT immerse the appliance in water.

Before connecting the appliance, ensure the rated voltage and frequency indicated on the data plate corresponds with your electricity mains.

In the case of a fault or malfunction of the unit, switch the appliance off and disconnect from the power supply. Contact Caterkwik's Service Department to arrange repair.

Caterkwik are not responsible for damages which arise through not observing these operating instructions.



Hot Food Display - Instruction Manual

Operating Safety

This appliance must be installed on a stable, flat and heat resistant surface with sufficient ventilation.

Ensure there are no combustible materials around the appliance.

Do not use the appliance outdoors.

This appliance must be connected to a grounded socket.

When disconnecting the appliance from the mains supply, you must pull on the plug, not the cable. The appliance must be switched off before unplugging.

The cable must not hang over a table edge or any other sharp edges.

The cable must not come into contact with hot surfaces or with water.

Regularly check the cable, if the cable is damaged it must be replaced by a qualified electrician.

Servicing or repairs must be carried out by a qualified service agent.



Hot Food Display - Instruction Manual

Operation & Cleaning

Before using the appliance for the first time, clean with a damp cloth and wipe dry.

1. Load the appliance with food.
2. Switch the appliance on using the on/off switch.

Note: when using the appliance for the first time it might produce an odour. This is normal when switching on for the first time.

Note: Ensure the appliance is unplugged when not in use.

Cleaning

This appliance should be cleaned daily.

1. Switch off the appliance and disconnect from the mains electric.
2. Wait for the appliance to completely cool down before cleaning commences.
3. Use a damp cloth with a mild, non abrasive detergent.
4. Wipe the appliance dry.

NEVER immerse the appliance in water or any other liquid.

NEVER use a jet wash to clean this appliance.



Correct Disposal Of This Product

This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources. To return the appliance for correct disposal contact Caterkwik Returns Department on 01229 480001.

Feedback

At Caterkwik we value your feedback. If you have any comments or suggestions we would like to hear from you. Call our customer service team on 01229 480001 or email info@caterkwik.co.uk.