

CATER-COOK

Rise & Fall Heat Lamps - Instruction Manual

Models: CK5250, CK6250, CK3250



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.

Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk

CE





Introduction

Thank you for purchasing the Cater-Cook Heat lamp. In order to make full use of its functions, please read these instructions carefully and keep for future reference.



WARNING!

- **ALWAYS** shut off the power circuit before starting installation work.

Installation **MUST** be carried out by a qualified electrician.

This unit is hot when in use. To avoid burns, do not touch hot surfaces.

Keep combustible materials away from the heat lamp.

DO NOT use outdoors. This appliance is not intended for use in moist or damp locations. **NEVER** locate the appliance where water may fall on it.

Extreme precaution should be taken when the appliance is used by or near children and whenever the appliance is left unattended.

DO NOT operate the unit if the power cord is damaged, if the unit malfunctions or has been dropped or damaged. Contact Caterkwik to repair.

The unit must be connected to properly grounded outlets only. Do not use extension cords.

This appliance has electrical parts. **DO NOT** use in areas where gasoline, paint or flammable liquids are used or stored.



Rise & Fall Heat Lamp - Instruction Manual

Specification


WARNING!

- This unit is only suitable for R40 or BR40 incandescent bulbs.
- The bulb is excluded from the warranty.
- For safe and proper operation, DO NOT install a bulb higher than 250 Watt.

Technical Specification

Model	CK5250, CK6250, CK3250
Voltage	220 - 240V ~ 50/60Hz
Power	250 Watts
Range Of Cord	280 - 1520mm
Dimensions	W179 x D179 x H695
Weight	1.0kg

No.	Description
1	Flexible Power Cord Assembly
2	On / Off Switch
3	Base
4	Lamp Socket (1 piece, not shown)
5	Lamp
6	250W Bulb (1 piece, not included)

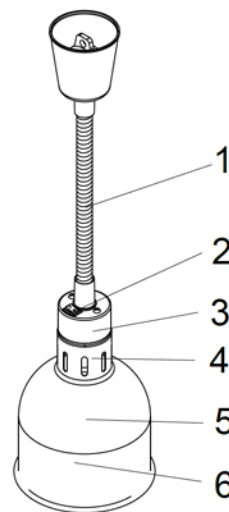



Installation & Operation

Preparation

- Remove the hanging lamp assembly from the carton.
- Remove the tape and protective packaging from all services of the unit.
- Make sure the installation site provides the proper installation clearances for the unit.

Installation

- Drill an 11mm (7/16") hole through mounting fixture.
- Pass the wires from the lamp through the hole in the fixture.
- Secure the lamp to the fixture with a nut.
- You can unscrew the threaded nuts to suit the length you require.
- Make sure all power is OFF and connect the ground to the green lead.

Cleaning

NOTE: Proper Maintenance plays an important part in the life span and functioning of the heat lamp.

- Unplug the cord and let the unit surface cool before cleaning or moving.
- This unit can be cleaned using a damp cloth and mild soap. Rinse and with clean water and wipe dry.
- **Do not immerse in water or other liquid. Do not clean with a water jet.**

Maintenance - Replacing the bulb

NOTE: Each standard hanging lamp is suitable with clear or infrared heat bulbs or below at 250 Watts.

1. Turn off and allow the bulb to cool.
2. The bulbs have a threaded base, unscrew the bulb anti-clockwise from the unit and replace with a new bulb.