

Cater-Cool CK3352 Display Fridge Exploded Diagram

Rep	Description	Qty per item
1	Body	1
2	Spacer	2
3	Exterior condenser	1
4	Controller transformer	1
5	Controller reply	2
6	Controller fixing plate	1
8	Compressor compartment back cover	1
9	Plug & cord	1
10		
11		
12		
13	Inner connection wire	1
14		
15		
16		
17	Heater	1
18	Water tray	1
19	Compressor	1
20	Filter	1
21	Filter clip	1
22	Castor	2
23	Compressor fixing plate	1
24	Junction box	1
25	Fixing plate of front wheels	1
26	Castor	2
27	Front feet vice fixing plate	2
28	Adjustable feet	2
29	Down hinge	1
30	Front cover	1
31	Controller back cover	1
32	Controller	1
33	Right down hinge	1
34	Light cover	1
35	Inner light	1
36	Inside lamp slot	1
37	K clip	20
38	Pilaster	4
39	Upper hinge	1
40	Canopy light	1
41	Canopy left cover	1
42	Canopy side cover support frame	2
43	Canopy down cover	1
44	Canopy	1
45	Canopy upper cover	1
46	Canopy right cover	1
47	Light Switch	2
48	Evaporator	1
49	Evaporator fan	1
50	Evaporator cover	1
51	fan cover	1
52	Drainage mouth	1
53	Shelf	5
54	Drilled plate	5
55	Handle	1
56	Glass Door	1
57	Lock & Key	1
58	Gasket	1
59	Price Holder	5

