

CATER-COOL

1, 2 or 3 years FULL warranty
Single, double or triple door
Hinged or sliding door
Black, silver or stainless steel



CATER-COOL

- Stainless steel or white lid options.
- Environmentally friendly R600a refrigerant.
- 75mm thick insulation.
- 300, 400, 500 & 600L sizes available.

45%
off RRP

2
Year
warranty



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it will need to be handed over to an acceptable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health which would otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local town/city office, household waste disposal service or the business you purchased the product from.

CATER-COOL

CATER-COOL COMMERCIAL WINE COOLERS INSTALLATION, USE & SERVICE MANUAL

Please read this manual carefully prior to use & keep it in a convenient place for future reference.



APPLIES TO CK6018, CK6028 & CK6051.

Thank you for purchasing our Cater-Cool Wine Cooler. To ensure the proper operation of this wine cooler, please read the instruction manual carefully before use and please keep near the product.

CATERKWIK, The Lakeland Catering Centre, Newlands, Ulverston, Cumbria
LA12 7QQ. Tel: 01229 480001 | Email: INFO@CATERKWIK.CO.UK

CATER-KWIK LTD
Internet Prices With Traditional Service Est. 1994

IMPORTANT SAFETY INSTRUCTIONS



To reduce the risk of fire, electrical shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the APPLIANCE.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instruction.

-Save these instructions-

INSTALLATION INSTRUCTIONS

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your unit on a floor that is strong enough to support the unit when it is fully loaded. To level your unit, adjust the leveling legs at the bottom of the unit.
- This appliance is not designed to be installed inside of a cabinet where the front is covered by any type of door.
- Allow 10 cm of space between the top, the back and sides of the wine unit, which allows the proper air circulation to cool the compressor and condenser.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.
- After plugging the Wine Chiller into a wall outlet, allow the unit to cool down for 2-3 hours before placing any items in the compartment.

Remark: Please remember to keep some water in the cabinet to keep the humidity

For disposal of the appliance:

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. And the disposal should only be done through public collection points.

For installation, servicing:

Appliance should be placed on a horizontal floor and keep the ventilation freely. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary.

OPERATING YOUR UNIT

Setting the Temperature Control



Your wine cooler has been equipped with an “automatic” control panel lock, that will activate 20 seconds after the last time a button has been touched.

Push button  simultaneously for 2 seconds to unlock the control panel. You will hear a “BEEP” sound to alert you that the control is now active.

You can select temperature display setting from Fahrenheit to Celsius degree by pushing button  for 2 seconds. The degrees will appear in blue color in the temperature display window.

When the control panel is active, push button  and the LED temperature display will be off; You have to push the button again and the LED temperature display will turn back on.

You can set the temperature as you desire by pushing button . The temperature that you desire to set will increase 1°F or 1°C if you push the button once.

You can set the temperature as you desire by pushing button . The temperature that you desire to set will decrease 1°F or 1°C if you push the button once.

Energy Saving Tips

- The unit should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the unit. Overloading the unit forces the compressor to longer.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- Unit storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the unit less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

PROBLEMS WITH YOUR APPLIANCE

You can solve many common problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Unit does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the unit. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The unit does not have the correct clearances.
Vibrations.	Check to assure that the unit is level.
The unit seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your unit. Contraction and expansion of the inside walls may cause popping and cracking noise. The unit is not level.
The door will not close properly.	The unit is not level. The door was reversed and not properly installed. The gasket is dirty or bent. The shelves, bins, or baskets are out of position.

WIRING DIAGRAM

