

CATER-COOK

Pizza Oven - Instruction Manual

Models: CK6910, CK9610



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.

Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk

CE





Introduction

Thank you for purchasing your Cater-Cook Pizza Oven.

This instruction manual contains information about the installation, operation and maintenance of the pizza oven and should be consulted as an important source of information and as a reference guide.

WARNING

This appliance should only be installed and connected to the power supply. Maintenance and repair should be carried out by a qualified electrician only.

Any work performed incorrectly may put your safety at risk.

This appliance is for commercial use only. Use for any other purpose is at the owners risk. The manufacturer or Caterkwik can not be responsible for damage caused by improper use of the appliance.

This appliance is NOT intended for use by children, people with reduced physical, sensory or mental capabilities or lack of experience unless supervised by a person responsible for their safety.

Flammable materials should not be stored near or on the appliance.

Do not move the appliance while hot.



Check the mains voltage and power cable ratings are as per the indications provided on the rating label.

NEVER remove the rating label from the appliance.

It is essential for the electrical system to be grounded.

If a plug socket is being used, ensure the plug socket is compatible. Avoid use of adaptors and shunts as these could cause overheating.

If a fixed connection is being used, the power line must be fitted with an omni polar circuit breaker with a contact opening gap equal to or greater than 3mm in an easily accessible position in proximity to the oven.

Functions

Chamber Lamp Switch - Press the switch to illuminate the cooking chamber light.

Upper Temperature Knob - Rotate the knob to your desired temperature. The top heating element will begin to heat. When the yellow indicator light turns off, your desired temperature has been reached.

Lower Temperature Knob - Rotate the knob to your desired temperature. The top heating element will begin to heat. When the yellow indicator light turns off, your desired temperature has been reached.




This oven is intended to cook fresh or frozen pizza.

Caterkwik can not be held liable for any faults caused by defective installation or inappropriate use of the appliance and the warranty will be voided.

- To begin cooking, simply turn the temperature dial to your desired cooking temperature.
- To switch the pizza oven off, turn the control knob to the 'OFF' position, then turn the switch off.
- The oven temperature can be adjusted between 0 and 450°C.
The chamber temperature can be viewed on the temperature gauge on the panel.

**Cleaning Instructions**

- Before cleaning, turn the appliance off and wait until it is completely cool before you start cleaning.
- Cleaning the appliance thoroughly on a daily basis is key to keeping it in perfect working condition and prolong the life of the pizza oven.
- Clean the appliance with a damp cloth with water and soap or non abrasive detergents.
- Do not scrub the appliance with steel wool pads as it could damage the surface of the oven and leave rust stains.
- Avoid touching the appliance with ferrous objects.
- In order to prevent corrosion, ensure any salt residue is carefully removed from the chamber sides and bottom.
- Never use direct water jets to clean the appliance because this could result in the water damaging the electrical components.

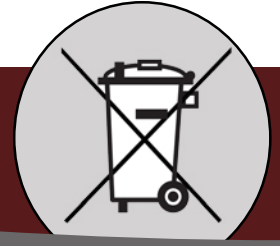

Correct Disposal Of This Product

This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources. To return the appliance for correct disposal contact Caterkwik Returns Department on 01229 480001.

Feedback

At Caterkwik we value your feedback. If you have any comments or suggestions we would like to hear from you. Call our customer service team on 01229 480001 or email info@caterkwik.co.uk.