

**CATER-MIX**

# 7 Litre Planetary Mixer - Instruction Manual

Model: CK7707



## Caterkwik Ltd

The Lakeland Catering Centre  
Newlands  
Ulverston  
Cumbria  
LA12 7QQ

01229 480001

[info@caterkwik.co.uk](mailto:info@caterkwik.co.uk)





## Introduction

### Introduction

Thank you for purchasing the Cater-Mix 7 Litre planetary mixer. In order to make full use of its functions, please read these instructions carefully and keep for future reference.

This Cater-Mix 7 litre mixer is perfect for everyday use in restaurants, small bakeries and cafes.

### **WARNING!**

**This appliance is NOT intended for use by children, people with reduced physical, sensory or mental capabilities or lack of experience unless supervised by a person responsible for their safety.**

**DO NOT immerse the appliance in water.**

**DO NOT use pressure washers to clean this appliance.**

**DO NOT place hands near the rotating attachments whilst in use.**

**DO NOT mix products that are not suitable for mixing in the appliance.**

**A qualified technician should carry out installation and repairs on this appliance. Do not remove any components from the appliance.**

**DO NOT leave the appliance unattended when in use.**

**ALWAYS switch the appliance off when not in use.**



## Installation

- Remove all of the packaging from the appliance.
- Check the appliance for damage. Should you find any damage to the appliance please report to Caterkwik on the contact details on the footer of this manual.
- Place the appliance on a suitable work top. Ensure the feet are level to minimise vibration during operation.
- Do not plug the appliance in before it is fully assembled.
- The bowl and the attachments must be in position prior to starting the mixer.





## Installation

1. Turn the lock counterclockwise and lift the mixer head.
2. Attach the desired mixer attachment onto the mixer head and turn clockwise 30° to lock into place.
3. Attach the bowl into the bowl base, push down and turn clockwise to lock the bowl into place.
4. Turn the lock clockwise then lower the mixer head into position.

### NOTE:

- Ensure the mixer head is locked into place or the mixer will not work.
- Clean the bowl and attachments before using it for the first time.
- To change the mixer attachment the mixer must be switched off.
- To remove or change the mixer attachment repeat the above process.
- Anyone using the appliance should be fully trained before operating the appliance.



## 7 Ltr Mixer - Instruction Manual

### Operation & Cleaning

1. Switch the machine on with the switch located on the back of the machine.
2. Fill the bowl.
3. Select the desired speed using the Speed Control Knob, start with the slowest speed and then gradually increase the speed as necessary.

NOTE: If the mixer is straining to mix the product, switch it off and remove some of the product.

See below maximum mixing capacity.

Max Flour	Max Batters
0.8kg	1.5kg

### Cleaning

- Always turn the mixer off and disconnect from the power before cleaning.
- Use warm soapy water to clean the bowl and mixing attachments. Do not use abrasive cleaning products on the appliance.
- Wipe the exterior of the mixer using a damp cloth.
- Dry all parts thoroughly after cleaning.
- Clean the appliance after each use.



## Troubleshooting

Fault	Possible Fault Causes	Solution
The mixer has stopped working.	Not connected to the power properly.	Check the appliance is plugged in correctly and switched on.
	The power cord or plug is damaged.	Replace the power cord and plug <b>NOTE: this must be carried out by a qualified technician.</b>
	The fuse in the plug has blown.	Replace the fuse.
	Motor has stopped working.	Replace the motor - <b>this must be carried out by a qualified technician.</b>
	The belt has broken.	Replace the belt - <b>this must be carried out by a qualified technician</b>
	The Safety Guard is not closed properly.	Ensure the safety guard is fully closed.

If the mixer slows down or strains - turn off the appliance and remove some of the contents.

If the mixer is noisy - turn it off and check the attachments are correctly locked into position.



### Specification

Model	CK7707
Product Dimensions	410 x205 x395mm
Packed Dimensions	470 x280 x410mm
Capacity	7 Litre
Voltage	220V
Power	800W
Rev	350 rev/ m
Net Weight	13kg
Gross Weight	15kg

**NOTE: This appliance must be earthed.**



### Disposing of the Appliance

#### Disposing

When the machine is not able to be repaired. You **MUST** cut off the power and dispose of the unit in accordance to your local council requirements.

In accordance with the 2002 / 95 / EC, 2002 / 96 / EC and 2002 / 108 / EC, certain hazardous substances are not allowed to be used on electronic equipment.

The below symbol on a product or on its packaging indicates that the product **MUST NOT** be disposed of with your other household waste.

Separate waste collection of his appliance is organised and managed by the manufacturer. It is the users responsibility to contact the manufacturer and follow the waste treatment system the manufacturer has adopted for separate waste collection. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

