

CATER-COOK

Contact Grills - Instruction Manual

Models: CK8015, CK8011, CK8111, CK8112, CK8013, CK8017



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.



Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk





Contact Grills - Instruction Manual

Contents

Thank you for purchasing the Cater-Cook contact grill. Contact grills are a fundamental piece of equipment for commercial kitchens, sandwich shops, delis and cafes.

Contents

- Safety Precautions P2
- Basic Specification..... P3
- Appliance Operation..... P4
- Electrical Diagram..... P5
- Correct Disposal..... P6



Contact Grills - Instruction Manual

Safety Precautions

- 1) These units are designed to operate on alternating current supply only. **DO NOT CONNECT TO DIRECT CURRENT SUPPLY.**
- 2) Care should be taken when operating the units, as hot surfaces may cause burns.
- 3) If the supply cord is damaged, it must be replaced by the manufacturer or a qualified electrician.
- 4) Ensure that the power supply cord does not come into contact with hot surfaces.
- 5) Children should be supervised to ensure they do not play with or around the appliance.
- 6) The appliance is not to be cleaned with a water jet.
- 7) The appliance must not be immersed.
- 8) Where this appliance is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc... it is recommended that they be made of non-combustible material; if not, that they shall be clad with a suitable non-combustible heat-insulating material, and that the closest attention be paid to fire prevention regulations.
- 9) The fixed wiring connected must be equipped with the all-pole disconnection device that provide full disconnection under overvoltage conditions according to wiring rules.
- 10) When the product is connected to the supply wire, a RCD (Residual Current Device) rated 30mA leakage current should be used to prevent from shock or fire hazard.



Contact Grills - Instruction Manual

Basic Specification

Model	Description	Dimensions	Power
CK8015	Single electric contact grill	310 x 310 x 200mm	2.2kW
CK8011	Single electric contact grill	310 x 310 x 200mm	2.2kW
CK8111	Large single electric contact grill	430 x 310 x 200mm	2.8kW
CK8112	Large single electric contact grill	430 x 310 x 200mm	2.8kW
CK8013	Double electric contact grill	570 x 310 x 200mm	4.4kW
CK8017	Double electric contact grill	570 x 310 x 200mm	4.4kW



The product must be reliably connected to the ground by the supply leads. The terminal in the back of the product (marked \downarrow) must be reliably connected to the external equipotential bonding terminal in the building by using wire with a cross-sectional area of at least 2.5mm².



Contact Grills - Instruction Manual

Appliance Operation

Cleaning The Appliance



Failure to clean the appliance in accordance with the following guidelines could cause damage to the appliance and its function and invalidate the warranty.

- 1) Scrape the griddle, once cooled, with a spatula or other type of scraper.
- 2) Scrub the cooking surface with a piece of pumice along the grain of the surface to remove the grease.
- 3) Clean the cooking surfaces with a mild detergent.
- 4) Scrub the surface again.
- 5) Wipe the griddle dry with an absorbent cloth.


Using The Appliance

- 1) Make sure the griddle sits on a level surface.
- 2) Plug in the power.
- 3) Use the temperature dial on the appliance to adjust to your desired temperature.
- 4) When the griddle reaches your preset temperature, the pilot light goes out.
- 5) Cook your food on the cooking surface to the appropriate temperature.

You may notice the pilot light turning on and off while cooking. This indicates that the griddle is maintaining the appropriate temperature.

- 6) When you have finished cooking, adjust the dial on the appliance to 'OFF' and unplug the power cord from the wall. Allow the griddle to cool.

Contact Grills - Instruction Manual Electrical Diagram

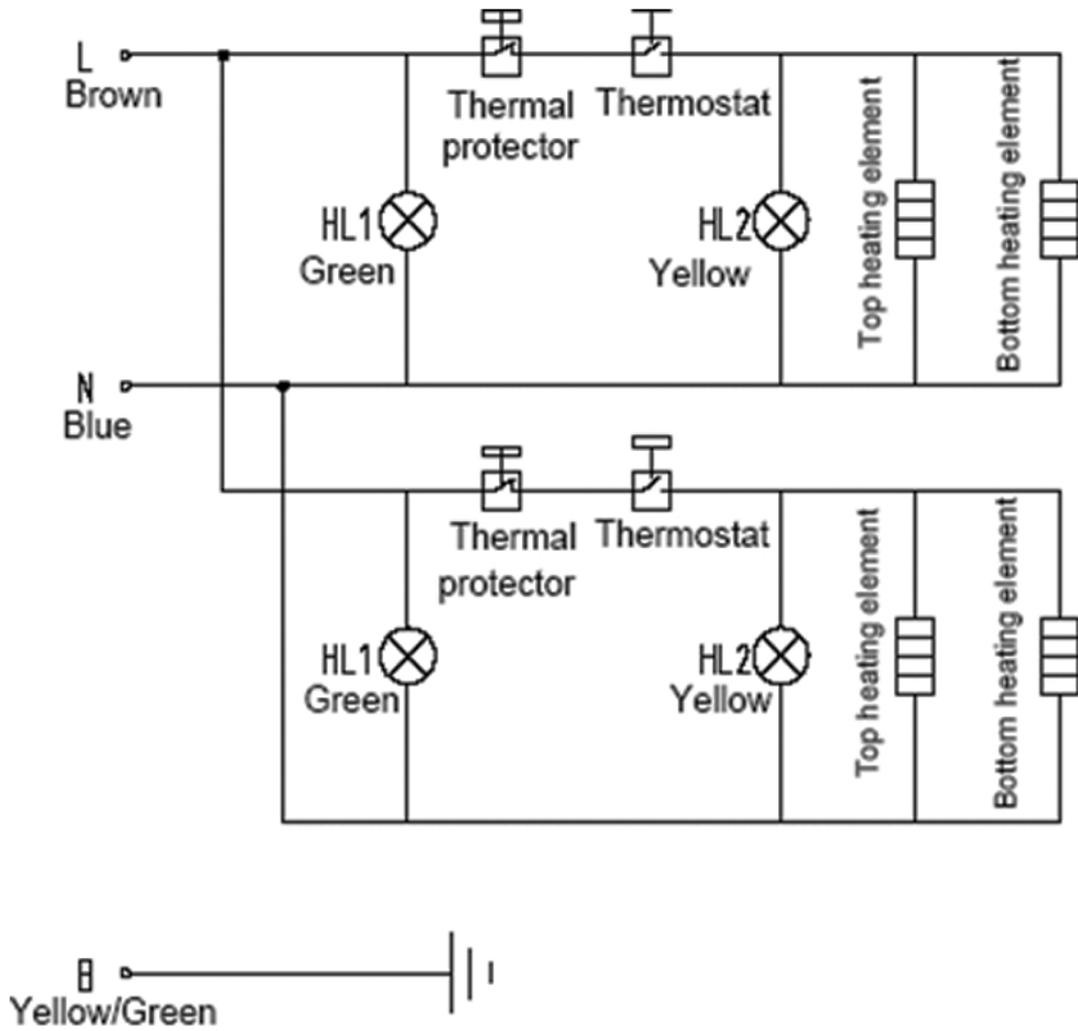



Correct Disposal Of This Product



This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources. To return the appliance for correct disposal contact Caterkwik Returns Department on 01229 480001.

Notes:

Feedback

At Caterkwik we value your feedback. If you have any comments or suggestions we would like to hear from you. Call our customer service team on 01229 480001 or email info@caterkwik.co.uk.