

CATER-COOK

Stainless Steel Wall Tables- Assembly Instructions

Models: CK8160, CK8169, CK8020, CK8022, CK8024, CK8026,
CK8028, CK8010, CK8012, CK8014, CK8016, CK8018



Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk








Stainless Steel Wall Table - Assembly Instructions



Parts List

Thank you for your purchase of the Cater-Cook Stainless steel wall table.

Before assembling. Please check you have all the components required, then follow the assembly guide on the next page.

Description	Quantity	Picture
Table top	1	
Undershelf	1	
Legs	4	
Allen key	1	
Bolts	16	

Stainless Steel Wall Table - Assembly Instructions



Assembly

When assembling the table, it is advised to seek help from another person.

Doing this will prevent the chance of strain and injury from moving the table.

- 1** Firstly, lay the table top face down on a stable and level surface.


Attach each leg to a corner with the provided bolts using the allen key.

You will need 3 bolts per leg.



- 2** Secondly, with help from another person, flip the table to the correct orientation. Position the undershelf and have the other person hold it while you attach.

You will need 1 bolt per corner.

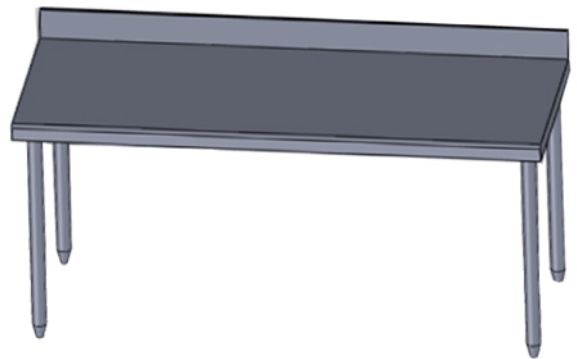

- 3** Your stainless steel wall table is now fully assembled.

