

CATER-COOK

Electric Griddle - Instruction Manual

Model: CK8818 (Chrome Hot Plate)



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.



Caterkwik Ltd


The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk

CE



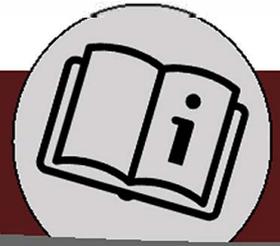

Electric Griddle - Instruction Manual

Introduction

Thank you for choosing the CK8818 Cater-Cook Electric Chrome Griddle.

Please read the following instruction manual clearly before use, and refer back to it for both cleaning and safety instructions.



In the event of any damage to the griddle, it must be turned off immediately and disconnected from the electricity supply by removing the attached plug or manually tripping the circuit breaker.

Damage and Maintenance.

- 1) Ensure power is not being supplied to the griddle while repair work is being carried out.
- 2) Repairs should only be performed by qualified electricians to ensure safety. Repairs and other work carried out by unqualified persons could be dangerous, under no circumstances should the outer casing of the griddle be opened.
- 3) While the griddle is under warranty, repairs should only be performed by an authorized service technician. Otherwise, the warranty will be deemed void.



Electric Griddle - Instruction Manual

Cleaning

Usage.

- 1) To turn on the griddle, turn the power control knob clockwise, and counter clockwise to turn it off.
- 2) The operating indicator light to the left of the control knob will illuminate when the appliance is switched on.
- 3) After use, turn the griddle off by fully turning the power control knob counter clockwise.
- 4) Once cool, clean the hot plate with a dry cloth.

Cleaning.

Clean stainless steel surfaces with a wet cloth, and then wipe dry with a soft cloth. Soak baked on or hardened spills first to loosen them.

Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner.

To help prevent tarnishing or staining, a conditioner can be applied. Apply sparingly with even pressure.



Electric Griddle - Instruction Manual

Troubleshooting

All repairs should be performed by a trained electrician in strict accordance with national and local guidelines. Any repairs or maintenance performed by unqualified personnel could be dangerous.

Problem	Reason	Solution
The hot plate does not heat up when turned on	<ol style="list-style-type: none"> 1) Overheating protection is activated. 2) The electrical circuit has blown a fuse or tripped the circuit breaker. 	If power cannot be restored, it may be necessary to call an electrician or the Cater-Kwik service team
The green indicator light is not lit when the device is powered on.	<ol style="list-style-type: none"> 1) The power fuse is burned out. 2) The power wire is improperly connected. 3) The light has burned out. 	<ol style="list-style-type: none"> 1) Replace with a suitable fuse. 2) Tighten the power wire connection. 3) Replace the bulb.
The yellow indicator light is always lit, you are unable to control the temperature.	<ol style="list-style-type: none"> 1) The indicator light is improperly connected. 2) The thermostat has failed. 	<ol style="list-style-type: none"> 1) Reconnect the light bulb. 2) Replace the thermostat.
The yellow indicator light is not on, but the temperature can be controlled normally.	<ol style="list-style-type: none"> 1) The indicator light is improperly connected. 2) The indicator light has burned out. 	<ol style="list-style-type: none"> 1) Reconnect the light bulb. 2) Replace the light bulb.




Electric Griddle - Instruction Manual


Specification

Name	Cater-Cook CK8818 Electric Chrome Griddle
Model	CK8818
Voltage	220-240V
Power	3kW
Controllers	1
Temp Range	50°C - 300°C
Dimensions (mm)	W550 x D450 x H230

Electrical Diagram.

- WK1 = Temperature controller
- HL = Power signal lamp
- EH1 = Electric heating pipe
- XW1 = Temperature limiter
- HL1 = Heating signal lamp
- PE = Ground connection

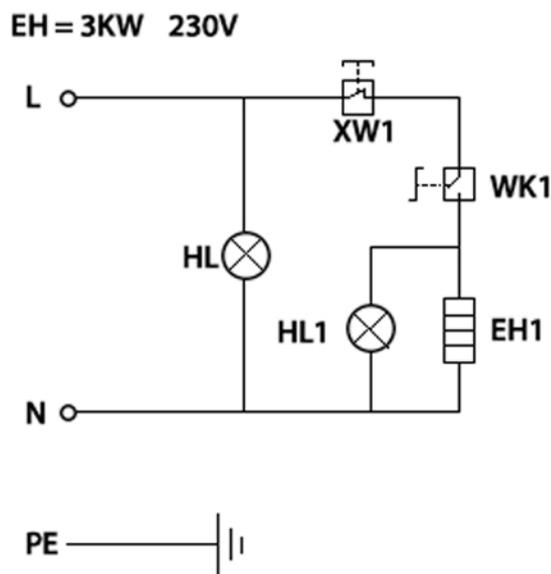

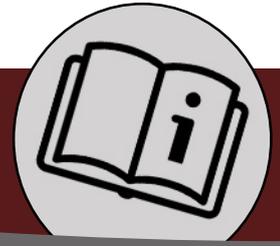

Electric Griddle - Instruction Manual

Operating Instructions

Safety Instructions.

If there is any abnormal appearance while using the griddle, turn off the power immediately. Do not use until it is deemed safe to do so.

Powering on.

- 1) Turn on the power source and the green power indicator should come on. Select the desired power level and proceed to cook.
- 2) According to your temperature requirements, it can be adjusted from 50°C to 300°C.

Installation.

- 1) Place the griddle on a level surface and ensure a clearance of at least 10cm from both the right and left side, and at least 20cm from the rear.
- 2) The working voltage MUST match that noted on the specification plate.
- 3) Install the correct power source; fuse plug, and grounding protection to the griddle. Do not put anything in front of the power switch in case of emergency access.
- 4) The power connection is under the griddle at the rear, and connects to ground for safety reasons.
- 5) The ground wire (yellow & green) and live wire are in the same wiring harness. Connect the ground wire via suitable copper bolt if the power point doesn't have one.



CAUTION: In order to prevent damage due to a power surge, turn the griddle off in the event of adverse weather conditions. Such as thunder and lightning.

**Correct Disposal Of This Product**

This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources. To return the appliance for correct disposal contact Caterkwik Returns Department on 01229 480001.

Notes: