

CATER-COOK

Electric Salamander Grill - Instruction Manual

Model: CK8936



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.



Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk






Electric Salamander Grill - Instruction Manual

Introduction

Thank you for your purchase the Cater-Cook CK8936 Electric Salamander Grill.

The salamander grill is ideal for toasting and finishing a many number of food products, from bread products to meat and fish.

| | |
|-------------------|--------------------------------------|
| Name | Cater-Cook Electric Salamander Grill |
| Model No. | CK8936 |
| Voltage | 230V 50Hz |
| Power | 2kW 13A - plug supplied |
| Temp range | 50°C - 250°C |
| Dimensions | W570 x D310 x H310mm |

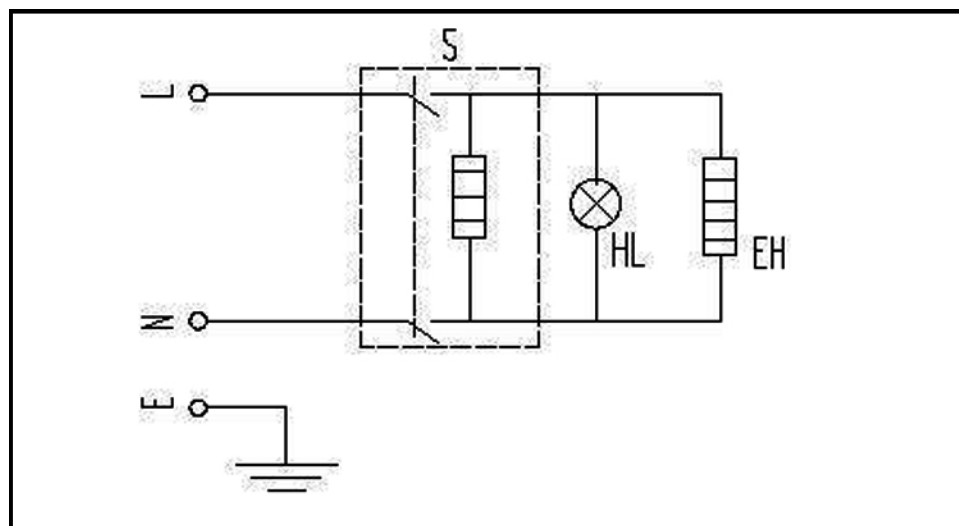

EH - Heating Element

HL - Indicator Light



Electric Salamander Grill - Instruction Manual

Operating Instructions

To operate the Electric Salamander Grill, please follow the below instructions.

1. Firstly remove all laser film and product packaging from the unit to ensure it is safe to use.
2. Connect the grill to your mains power supply. Firstly ensuring the socket is of the correct voltage.
3. Once connected, the GREEN power light will illuminate.
4. Rotate the temperature knob clockwise, the grill will begin to heat up and the thermostat light will also illuminate.
5. Once the grill reaches the desired temperature, the thermostat light will turn off. If the temperature drops below what is set, the grill will begin heating the element again to maintain temperature.
6. Once finished using the grill, turn the knob anti-clockwise fully. Remove the power supply and leave to cool before cleaning.

Further installation notes.

1. Only install the grill on a level stable surface, and ensure clearance at the sides of 10cm, and 20cm at the rear.
2. The power supply voltage **MUST** match that on the data plate.
3. Do not place any objects in front of the power switch.

The power connection is under the grill itself. The ground wire (Y+G) and power source wire are in the same wiring harness. Connect the ground wire by suitable copper bolt if your mains supply does not have one.



Electric Salamander Grill - Instruction Manual

Troubleshooting

If you experience any faults or problems with your grill, please follow the guide below.

Before attempting any of the following solutions, ensure the power supply is disconnected.

| Problem or fault | Reason | Solution |
|---|---|---|
| Green power light is not lit when connected to power supply. | 1. Power fuse is burned out. 2. Power wire is improperly connected 3. Light has burned out. | 1. Replace with new fuse. 2. Tighten power wire connection. 3. Replace the light. |
| Yellow temperature light is always lit, unable to control temperature. | 1. The temperature light is improperly connected. 2. The thermostat has failed. | 1. Reconnect the light. 2. Replace the thermostat. |
| Yellow temperature light is not on. the temperature can be controlled normally. | 1. The temperature light is improperly connected. 2. The indicator light has burned out. | 1. Reconnect the light. 2. Replace the light. |

Cleaning and Maintenance.

1. Turn off the power supply after cooking has finished.
2. Do not scrub the surface or heating element with abrasive pads or brushes.
3. Clean the grill regularly. Remove the shelf to clean it individually.
4. Clean with a dry cloth. DO NOT use direct water to clean your grill. This can result in damage to the unit.