


1. Remove door seal slightly to allow access to the 2 screws that hold the lock in place.



2. Remove 2 screws.



3. The lock can now be pushed out of the door. Needs to be done at a slight angle as for the locking mechanism to fit through gap.

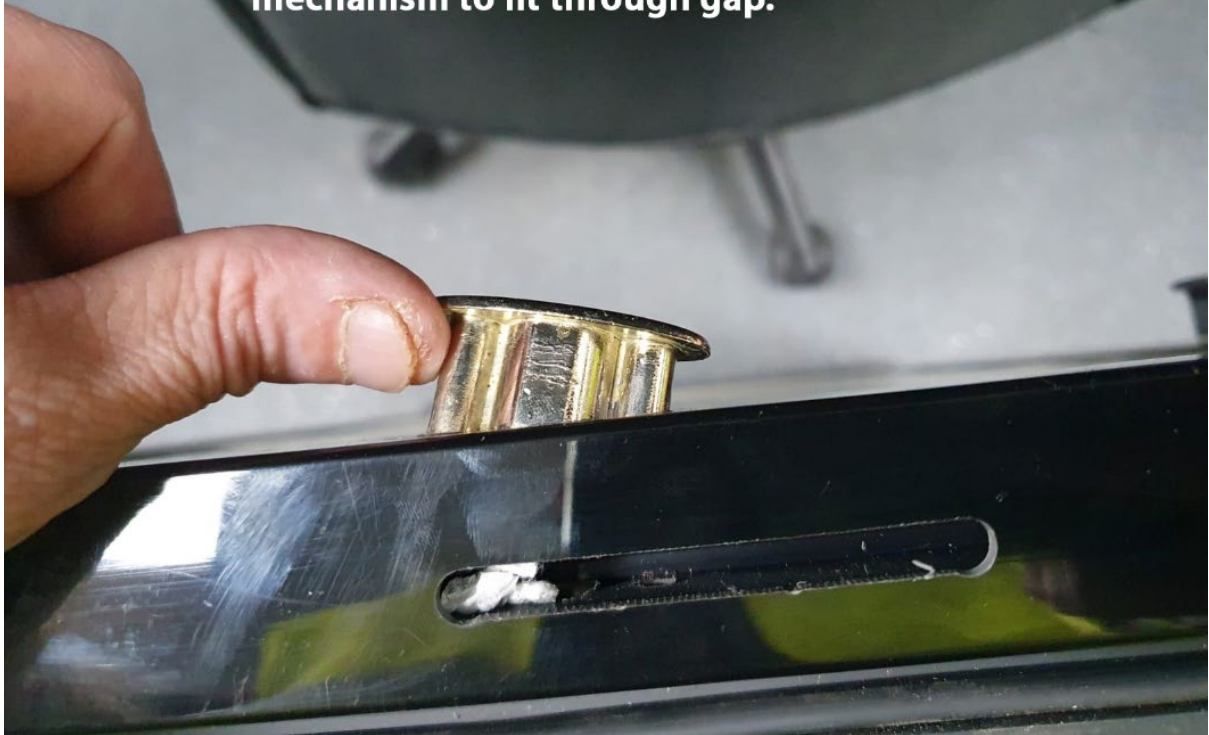

4. Replace lock, again, putting it in at an angle as to let the locking mechanism fit.



5. Make sure lock is flush with door.



6. Screw lock back into place with the 2 screws.



7. Secure door seal again.

