



Replacing an LED Bulb - Instruction Manual



1. Unscrew 3 x screws holding the plastic guard in place.

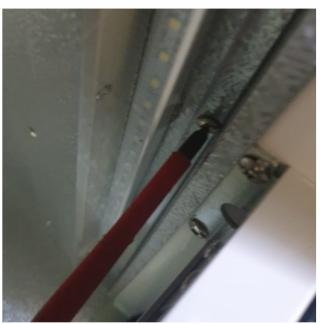



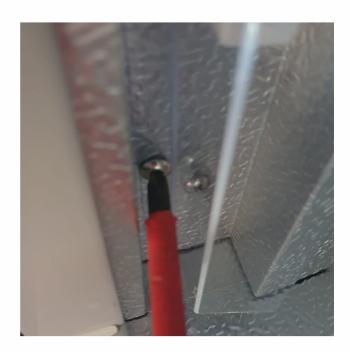




2. Remove plastic guard from bottle cooler.




Replacing an LED Bulb - Instruction Manual



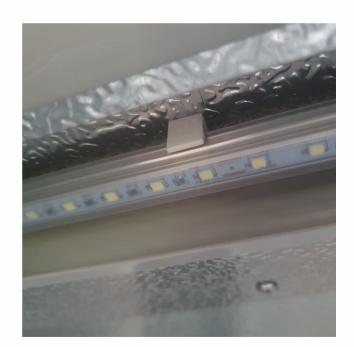


3. Pull LED down gently to release from clips.

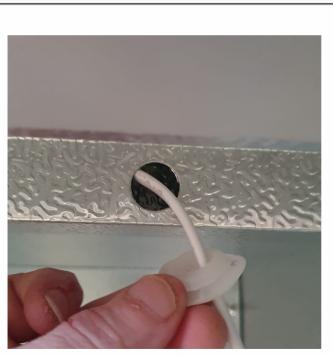

4. Pull out rubber ring from the top right hand side of bottle cooler interior.



5. VERY gently tease LED wire out until connector is shown.

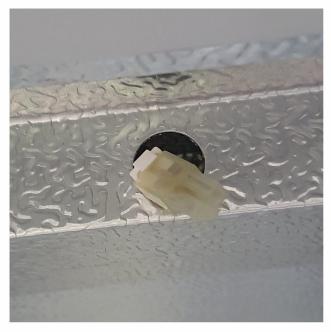

6. Remove connected LED by holding down clip on the underside of the connector. Plug new LED in and reverse steps.