

Tapas Showcase Instruction manual



Model: CP728

Safety Tips

- Position on a flat, stable surface
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove and components or service panels on this product
- Consult Local and National standards to comply with the following:
 - Health and safety at work legislation
 - BS EN Codes of practice
 - Fire Precautions
 - IEE wiring regulations
 - Building regulations
- DO NOT use jet/pressure washers to clean the appliance
- DO NOT use the appliance outside
- DO NOT use the appliance to store medical supplies
- DO NOT use electrical appliances inside the appliance (e.g. heaters, ice-cream makers etc)
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs
- DO NOT store products on top of the appliance
- Bottles that contain a high percentage of alcohol must be sealed and placed vertically in the refrigerator
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance
- Always switch off and disconnect the power supply to the unit before cleaning
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities
- If the power cord is damaged, it must be replaced by a POLAR agent or a recommended qualified technician in order to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance

Caution Risk of Fire



Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance

Warning: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in

Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer

Warning: Do not damage the refrigerant circuit

Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer

Product Description

CP728 Polar Tapas Showcase

Pack Contents

Polar Tapas Showcase Instruction manual

Installation

The Showcase must be placed on a firm, level surface.

The distance from both sides and the back of the refrigerator to the wall or other surfaces, should be at least 10cm. The operation of the refrigeration system may be affected if there is poor air circulation or a high ambient temperature.

Operation

This product is not intended for use as a storage cabinet, it is for daily display of Tapas and similar products. It should be cleared of food every day, then cleaned before further use.

Insert the plug into the socket, turn on at the socket then press the product switch to on.

After a few minutes check there is cold air being blown in to the Showcase before placing food inside.

Control Panel

Turn On

Close the doors of the appliance.

Connect the appliance to a mains power supply.

 
Press ON/OFF switch located on rear (next to controller)

Set the Operating Temperature

Press the $\[\mathbf{ser} \]$ button. The display will flash.

Press the 🔻 or 🛋 buttons to display the required temperature.

Press the **SET** button to store the temperature.



Refrigerant LED: During refrigeration, the LED is

on. When the unit temerature is within set point the LED is off. NOTE: When first switched on refrigeration is delayed (approx 4 minutes) and the LED flashes.

Defrost LED: during defrosting, the LED is on. Before entering Defrost there is a short delay and the LED flashes.

Light

Press the button to turn the light On or Off as required.

Cleaning, Care & Maintenance

Take out all food in the cabinets and disconnect the appliance from the electricity. Wait until the traces of ice on the evaporator have melted, then wipe inside to remove any water.

Trouble Shooting

Fault	Cause	Remedy	
Refrigeration not working	Electricity not turned on	Switch on electricity at socket.	
	Plug fuse blown	Replace fuse	
	Showcase switched off	Turn switch to on position so it lights	
Poor refrigeration performance.	High ambient temperature	Ventilate room or area around Show- case.	
	Poor ventilation	Increase air flow around Showcase.	
	Door seals not in place/worn	Replace door seals	
	Too much food in the Showcase is preventing cold air circulating	Take out some food	
	Condenser need to be cleaned	Clean Condenser	
Showcase is noisy when	Showcase is not level	Adjust position to level	
turned on	Show case is too close to a wall or other object	Move position	

Technical Specifications

Code	Voltage	Power Watts	Current Amps	Temperature Range	Refrigerant	Dimensions H x W x D mm	Weight Kgs
CP728	230V 50hz	180	1.2	2°C to 10°C	R600a	265 x 1529 x 420	41.5

Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 3 amp fuse. The plug is to be connected to a suitable mains socket.

The appliance is wired as follows:

- · Live wire (coloured brown) to terminal marked L
- · Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit

If in doubt, consult a qualified electrician. Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible

Disposal

EU regulations require refrigeration product to be disposed of by specialist companies who remove or recycle all gasses, metal and plastic components

Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally

Alternatively, call the POLAR helpline for details of national disposal companies within the EU

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. The help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area



Compliance

POLAR parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent and federal authorities

POLAR products have been approved to carry the following symbol:



UK Helpdesk Number - 0845 111 0538

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of POLAR. Every effort is made to ensure all details are correct at the time of going to press, however, POLAR reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	Refrigerated Tapas Display
Model	CP728
Application of Council Directives(s)	Machinery Directive (MD) 2006/42/EC Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC Restriction of Hazardous Substances Directive (RoHS) 2011/65/EU
Standards	EN 60335-1:2002/A1:2004/AC:2007 (MD) + A12:2006/AC:2007 (MD) + EN 60335-1:2012 (MD) + AC:2014 (MD) + A11:2014 (MD) EN 60335-2-89:2010, EN ISO 12100:2010 EN 55014-1:2006 + A1:2009 + A2:2011 EN 55014-2:2015, EN 61000-3-2:2014 EN 61000-3-3:2013, EN 50581:2012
Producer Name	Polar
Producer Address	Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom
I, the undersigned, hereby declare that the equipudirective (s) and $Standard(s)$.	nent specified above conforms to the above
Date	29/11/2016
Signature	N.J. homsell.
Full Name	Richard Cromwell
Position	Commercial Director

