

C10 DESCALER

Product Features

- Enables rapid penetration and removal of scale deposits from dish and glasswashing machines.
- Effectively removes all forms of metal tarnish, hard water scale, rust from ferrous metals and even brighten aluminium and chrome surfaces.
- The properties of this product enable it to be used extensively in the catering and food industries for general purpose cleaning and maintenance.

Directions for Use

- Disconnect detergent and rinse aid from machine.
- For under table dishwashers and glasswashers, add 1 litre of descaler to the wash tank. For larger machines, add 2 litres of descaler.
- Run 5 wash cycles and then drain machine.
- Reconnect detergent and rinse aid.

Caution - this product is acidic and will damage carpets and textiles. If spillages occur, remove the surplus acid with a damp cloth and neutralise as soon as possible with washing soda or baking soda. Clean thoroughly with a proprietary carpet shampoo.

Shelf Life

- It is recommended that this product is used within 12 months of purchase. Do not allow to freeze.

Envirological Hazards

- Neat product will cause damage to plant and animal life.
- Do not allow large quantities of neat liquid to enter surface waterways.
- In the event of a large spillage, contact the local water authority or Environment Agency immediately.

Packaging

- 2 x 5 L

