










Machine	Explode	Code	Description
Thor Gas Salamander Grill	1	☎	Control Panel
Thor Gas Salamander Grill	2	☎	Front Cover
Thor Gas Salamander Grill	3	☎	Front Insulation
Thor Gas Salamander Grill	4	AF888	Knob
Thor Gas Salamander Grill	5	☎	Side Bottom
Thor Gas Salamander Grill	6	☎	Oil Tray
Thor Gas Salamander Grill	7	☎	Support Assembly
Thor Gas Salamander Grill	8	AF889	Safety Gas Valve
Thor Gas Salamander Grill	9	AF890	Main Pipe Assembly
Thor Gas Salamander Grill	10	AF891	Manifold Assembly
Thor Gas Salamander Grill	11	☎	Right Insulation Plate
Thor Gas Salamander Grill	12	☎	L-Connector
Thor Gas Salamander Grill	13	☎	Main Burner Injector/Orifice Holder
Thor Gas Salamander Grill	14	AF892	Main Burner Injector/Orifice for GL163-N
Thor Gas Salamander Grill		AF893	Main Burner Injector/Orifice for GL163-P
Thor Gas Salamander Grill	15	☎	Right Inner Panel
Thor Gas Salamander Grill	16	☎	Upper Right Plate
Thor Gas Salamander Grill	17	☎	Feet2
Thor Gas Salamander Grill	18	☎	Back Inner Plate
Thor Gas Salamander Grill	19	☎	Back Panel
Thor Gas Salamander Grill	20	☎	Back Hold Plate
Thor Gas Salamander Grill	21	AF895	Feet1
Thor Gas Salamander Grill	22	☎	Top Cover

Exploded diagram and spare parts list

GL163-P. GL163-N

Thor Gas Salamander Grill	23		Upper Inner1
Thor Gas Salamander Grill	24	AF896	Burner Protect Connector
Thor Gas Salamander Grill	25	AF897	Infrared Burner
Thor Gas Salamander Grill	26		Upper Inner2
Thor Gas Salamander Grill	27		Burner protect
Thor Gas Salamander Grill	28		Upper left Plate
Thor Gas Salamander Grill	29		Left Inner Panel
Thor Gas Salamander Grill	30		Side Panel
Thor Gas Salamander Grill	31		Left Insulation
Thor Gas Salamander Grill	32		Rack Support
Thor Gas Salamander Grill	33		Rack
Thor Gas Salamander Grill	34	AE658	Rack Handle
Thor Gas Salamander Grill	35	AF899	Thermocouple