



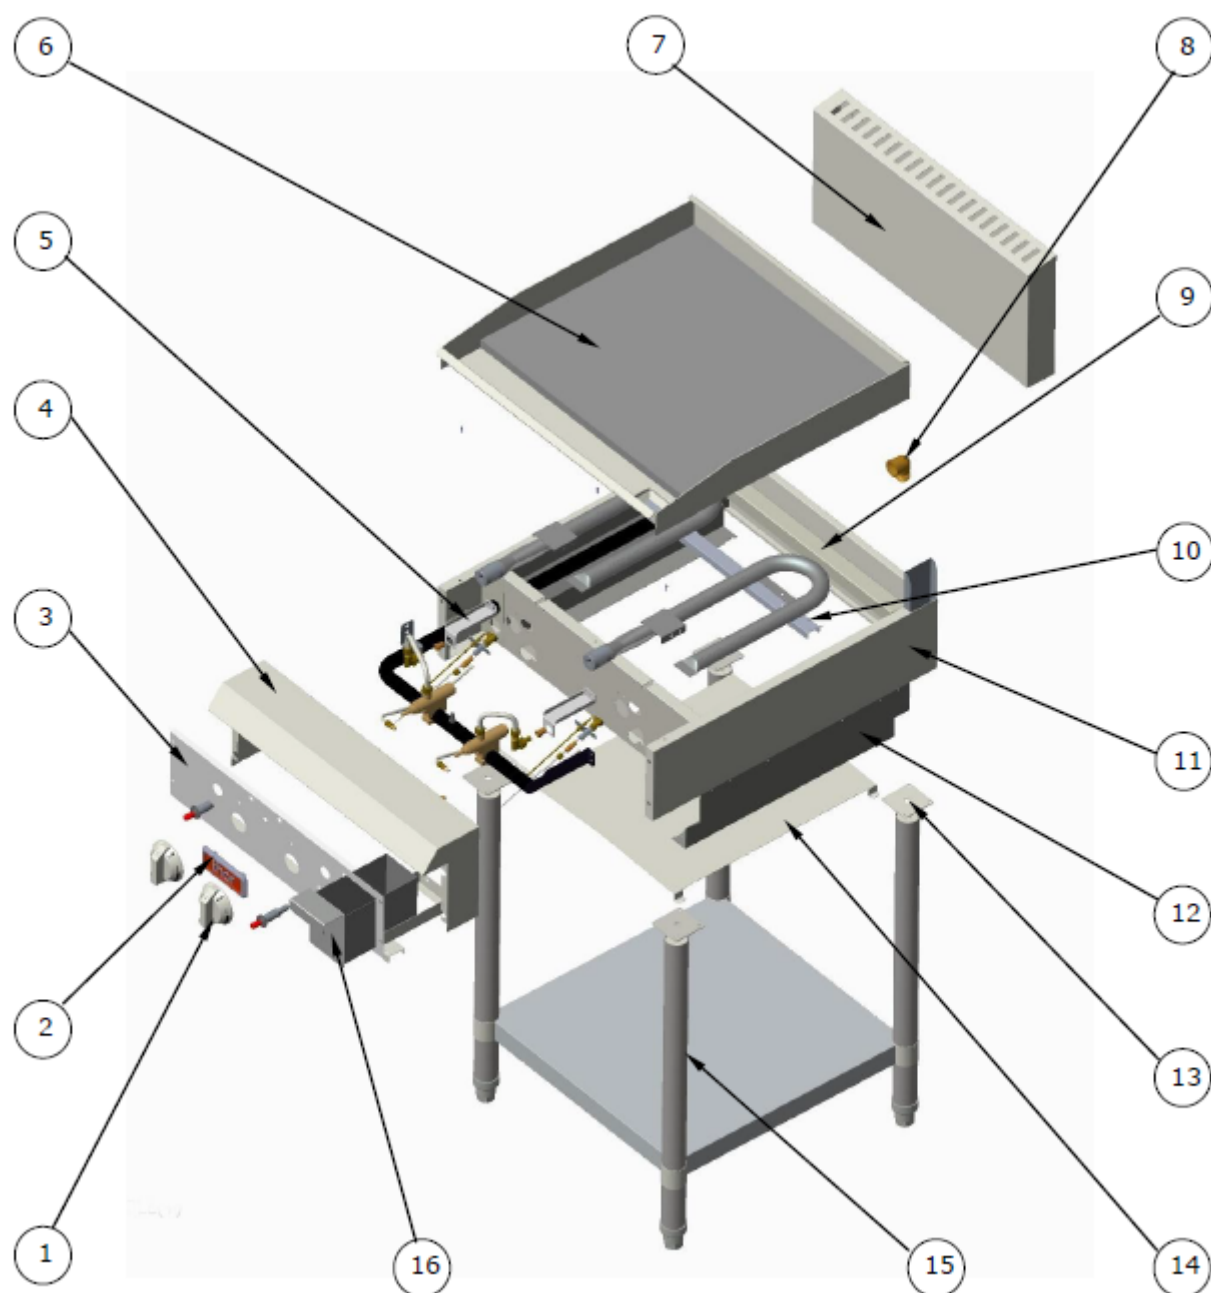

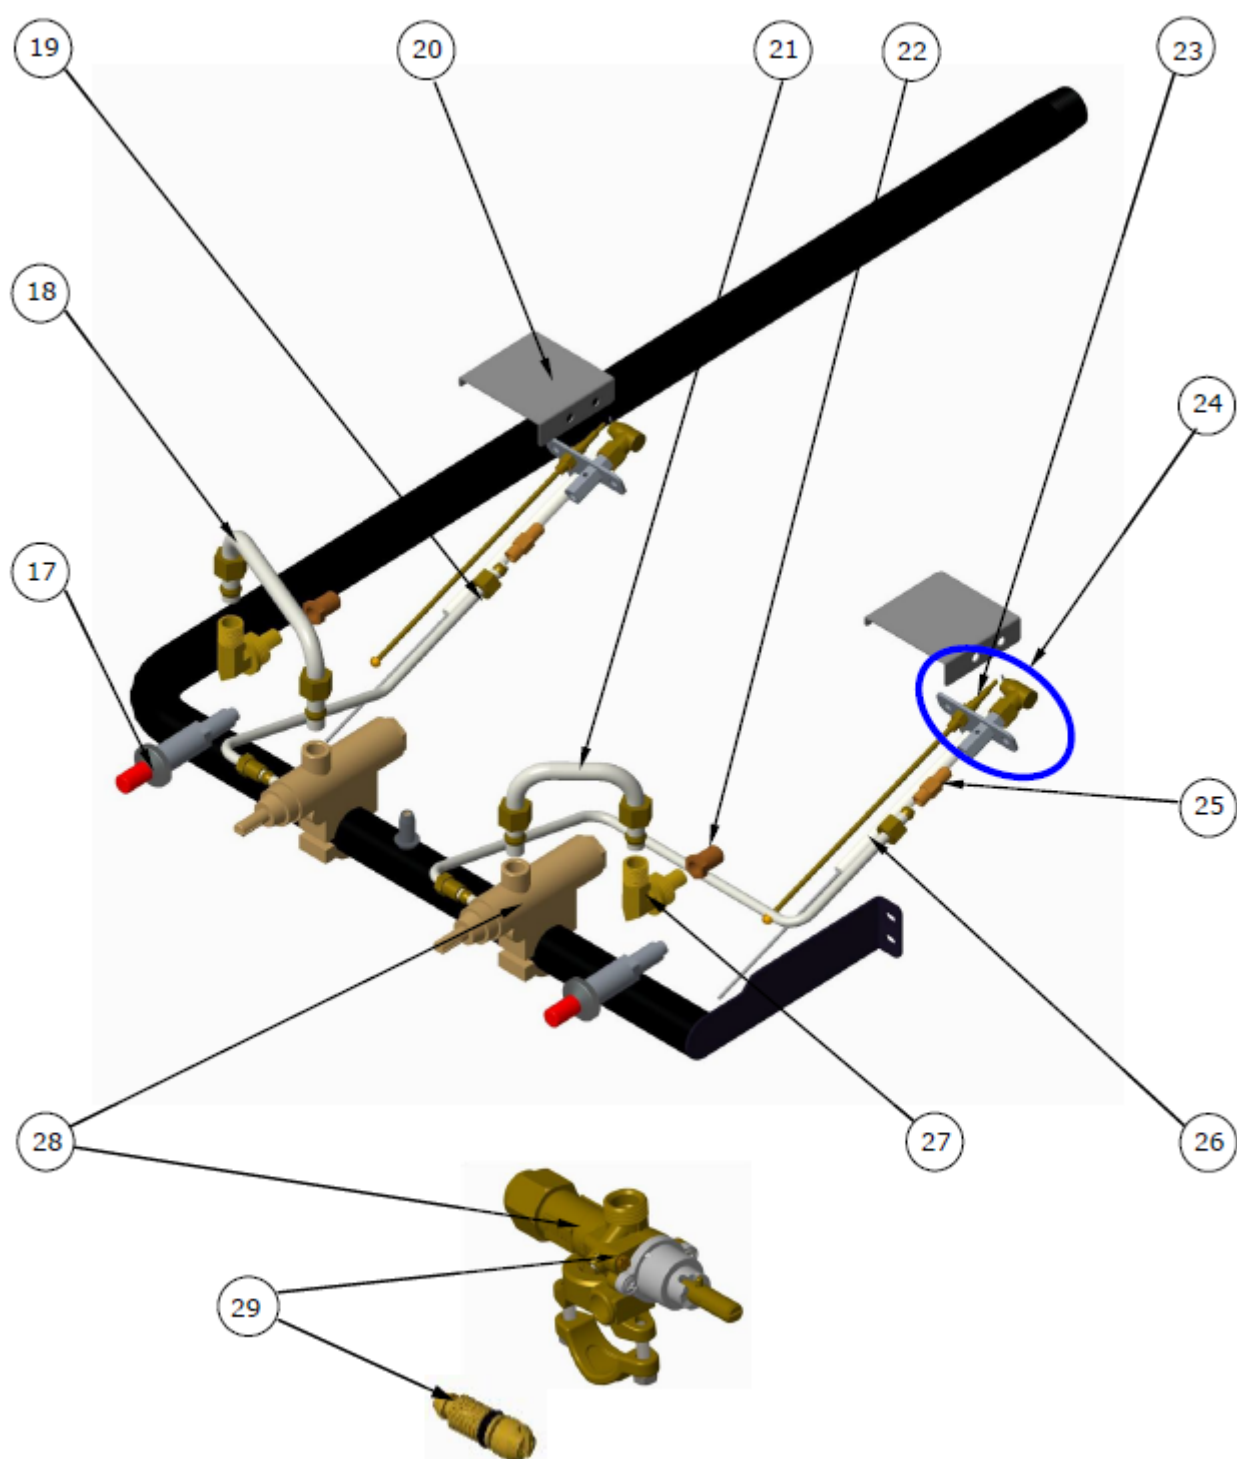

Exploded diagram and spare parts list GL167-N GL167-P GL168-N GL168-P

Machine	Explode	Code	Description
Thor Freestanding Gas Griddle	1	AF269	Dial
Thor Freestanding Gas Griddle	2		Thor Badge
Thor Freestanding Gas Griddle	3		Control Panel
Thor Freestanding Gas Griddle	4		Control Rack
Thor Freestanding Gas Griddle	5		Orifice Fix Plate
Thor Freestanding Gas Griddle	6		Griddle Plate Assembly
Thor Freestanding Gas Griddle	7		Flue Assembly
Thor Freestanding Gas Griddle	8		Copper Joint
Thor Freestanding Gas Griddle	9	AF295	U-Burner Assembly
Thor Freestanding Gas Griddle	10		U-Burner Fix Plate Assembly
Thor Freestanding Gas Griddle	11		Frame Weld Assembly
Thor Freestanding Gas Griddle	12		Heating Insulation Panel (Side)
Thor Freestanding Gas Griddle	13		Foot Fix Plate Assembly
Thor Freestanding Gas Griddle	14		Heat Insulation (Bottom)
Thor Freestanding Gas Griddle	15		Gas Stand (Set)
Thor Freestanding Gas Griddle	16		Drip Tray Assembly
Thor Freestanding Gas Griddle	17	AF293	Piezo Igniter
Thor Freestanding Gas Griddle	18		Main Pipe Assembly (Left)
Thor Freestanding Gas Griddle	19	AF300	Pilot Pipe Assembly (Left)
Thor Freestanding Gas Griddle	20		Pilot Cover
Thor Freestanding Gas Griddle	21	AF299	Main Pipe Assembly (Right)
Thor Freestanding Gas Griddle	22	AF280	Main Burner Injector/ Orifice for GL167-P.GL168-P
Thor Freestanding Gas Griddle	22	AF698	Main Burner Injector/ Orifice for GL167-N. GL168-N
Thor Freestanding Gas Griddle	23	AF799	Thermocouple
Thor Freestanding Gas Griddle	24	AF285	Pilot Assembly / Flame Device System
Thor Freestanding Gas Griddle	25	AF642	FDS Injector/ Pilotinjector for GL167-P.GL168-P
Thor Freestanding Gas Griddle	25	AF643	FDS Injector/ Pilotinjector for GL167-N. GL168-N
Thor Freestanding Gas Griddle	26	AF298	Pilot Pipe Assembly (Right)
Thor Freestanding Gas Griddle	27	AF699	L-Connector
Thor Freestanding Gas Griddle	28	AF271	Safety Gas Valve for GL167-N. GL168-N
Thor Freestanding Gas Griddle	28	AG670	Safety Gas Valve for GL167-P.GL168-P
Thor Freestanding Gas Griddle	29	AG183	Bypass Screw for GL167-N. GL168-N
Thor Freestanding Gas Griddle	29	AG182	Bypass Screw for GL167-P.GL168-P