

**GUARANTEE:**

- 1 This product is guaranteed against manufacturing defects for a period of one year from the date of purchase - parts and labour free of charge. As the purchaser and the retailer agreed on this guarantee, this product is carriage forward. The retailer has the exclusive rights of ownership for any replaced part.
- 2 This guarantee is valid in all UE Member Countries.
- 3 This guarantee does not cover repairs undertaken for: a) breakage due to crashing or falling of the product; b)connections to a higher current or voltage than it is indicated; c)normal wear and tear of the product; d)damage of parts due to negligence and/or misuse of the product.
- 4 Within the guarantee period, the retailer is not responsible for material damages or accidents due to any installation not in accordance with the safety standards of the country where the product is used, and in particular to: a) damaged plugs, lack of earth connection, etc; b)misuse of the appliance by the purchaser.

**DECLARATION OF THE PRODUCER**

In consideration of the positive results of the tests carried out, EGI MILAN TOAST declares on its own responsibility that its Fry Top **MILANTOAST**®, identification code 17022, 17040, 17041, 17080 are in accordance with the following Directives:

72/23/CEE, 93/68/CE, 2006/95/CE (LVD), 2004/108/CE (EMC), 2004/40/CE (EMF)

They also comply to European Directives:

2002/95/CE (RoHS), 2003/96/CE (WEEE)



Sole UK Importer / Distributor:

**MAESTROWAVE**

R.H.Hall (Microwave) Ltd - Halco House, Beacon Court, Pitstone Green  
Business Park  
Pitstone, nr Tring - Leighton Buzzard Bedfordshire LU7 9GY

Tel 01296 663400      service fax line: 01296 663403      [info@rhhall.com](mailto:info@rhhall.com)

Sublitate 24 settembre 2009

Riccardo Brambilla

EGI **MILANTOAST**®  
via delle Industrie, 26 20884 Sublitate (MB) ITALY  
tel +39.039.68.83.332 fax +39.039.60.22.896  
[www.milantoast.com](http://www.milantoast.com) [info@milantoast.com](mailto:info@milantoast.com)

**Fry Top**

**Instructions for use**

Thank you for purchasing this quality product  
Please read these instructions carefully before use

**17022 (1,1 kW)**



**17040 - 41 (1,8 kW)**



**17080 (3,0 kW)**



1 lamp  
2 energy regulator  
3 crumb collector

## PRELIMINARY RECOMMENDATIONS

Unpack the appliance carefully. Keep and use the original packing in case you return the product to the retailer one day.

Remove the plastic, the cardboard and the various protections. Remove all adhesive plastic film protecting the stainless steel parts before switching the appliance on. In the event of a fault or you reasonably suspect a hidden damage in the appliance, please contact the retailer before use.

## SAFETY STANDARDS

Check that the supply voltage of the grid corresponds to that marked on the rating plate put in the back part of the appliance.

The appliance must be earthed and its circuits must be in compliance with the relevant safety standards. In case the power socket and the plug of the appliance do not correspond, let the socket be removed and replaced by authorized personell only. Single and multiple adapters and/or extensions are not recommended.

In case you dispose the appliance near walls and partition walls, kitchen furniture, decorative elements, etc., these should be made of antifire material in compliance with the fire prevention standards. Take care to keep a minimum distance of 10 cm. from the surrounding elements.

In the event of damage, the power cord should be removed and replaced with an original one by qualified personell.

Arrange an appropriate space to place the fry top: plug should always be accesible

## IRELAND AND UNITED KINGDOM

### WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORTANT : The wires in this mains lead are coloured in accordance with the following code : green / yellow = earth

-blue = neutral -brown = live

IRELAND :IMPORTANT : For appliances fitted with a power supply cord and having a rated input exceeding 2.8 kW any plug fitted shall have a rated current of 15 A or more.

UNITED KINGDOM :IMPORTANT : For appliances fitted with a power supply cord and having a rated input exceeding 3.0 kW the appliance must be connected to a socket-outlet having a rated current exceeding 13A and that a 13A BS 1363 plug is therefore not suitable.

## USING YOUR Fry Top

This Fry top is made of a fixed and glassceramic heating surface, on which food is cooked by infrared and by contact. The fry top warms or cooks every kind of food: toasts, sandwiches, meat, fish, vegetables, cheese. Glass ceramic fry tops are designed for food contact and are easy to clean. This appliance works automatically.

Connect the power plug with the socket.

To increase power, rotate the knob (2) clockwise. To decrease temperature rotate the knob counterclockwise. To obtain maximum power set the knob to 100% position.

knob position	approx temperature
25%	100°C
50%	175°C
75%	280°C
100%	400°C

The switching on of the light shows that the heating resistance is working. Always disconnect plug after use.

Any other use of the appliance is improper and dangerous. Do not leave the working appliance unattended.

Keep children and unauthorized people away from the appliance.

Do not use it outdoors and do not expose to damp. Do not soak or sprinkle it in water or any other liquid.

Avoid cleaning the appliance with liquids, as it is not waterproof.

Do not cover the appliance: otherwise, risk of fire! Disconnect the plug when the appliance is switched off.

Disconnect the plug before moving the appliance.

Do not tear the power cord or the appliance by disconnecting the plug from the power socket. Avoid any contact between the power cord and the appliance.

Risk of burn! Cool the appliance off before moving it.



## RECOMMENDATIONS FOR USE

You can get the best results after using the heating surfaces many times.

Time necessary to reach the right food grilling point depends on several factors: quality, freshness, thickness, shape, food temperature, and so on.

Ideal cooking temperature may be found by several tests

## CLEANING

Disconnect the power plug before cleaning the appliance.

The appliance is not jet water proof. Do not soak in water or in any other liquid. Do not sprinkle it.

Take the crumb collector periodically out. Clean daily from grease and food residues both from cooking surface and from near and under the fry top.

Clean the appliance externally with a damp cloth or special products for stainless steel.

Clean the heating surfaces every day, when they are still tepid with a wet cloth. You may use scraper on the smooth surface. Don't use brushes, other utensils, abrasive sponges which may scratch and damage the surface. Do not use aggressive detergents or oven sprays.

Should accidentally parts of alluminium foil, plastic, synthetic material or sugar melt on the heating surface remove them immediately.

To assure a good cooking efficiency, clean the heating surfaces every day.

## MAINTENANCE

Check regularly state of: power cord, moving parts, knobs, security screws.

No parts can be repaired by the user. Use original parts and accessories only.

The product you purchased has been designed and manufactured to have a long-lasting lifetime without problems. In order to keep the product at good safety and performance standards, please contact your retailer when one or more parts of the product do not work properly and check yearly functional parts.

Your retailer will be able to provide all suitable tooling and equipment to repair this appliance, together with the original spare parts.

## DESTRUCTION OR ALIENATION OF THE PRODUCT

In case the product, working or not, has to be replaced and thus abandoned or scrapped, take care it is made unusable and harmless.

Glass ceramic must not be wasted with ordinary glass. To get further information, please contact your retailer.