
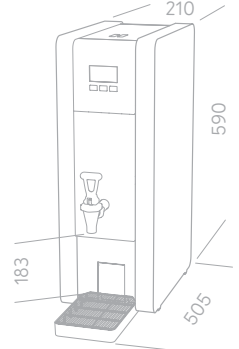
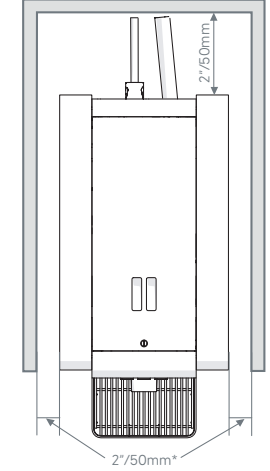
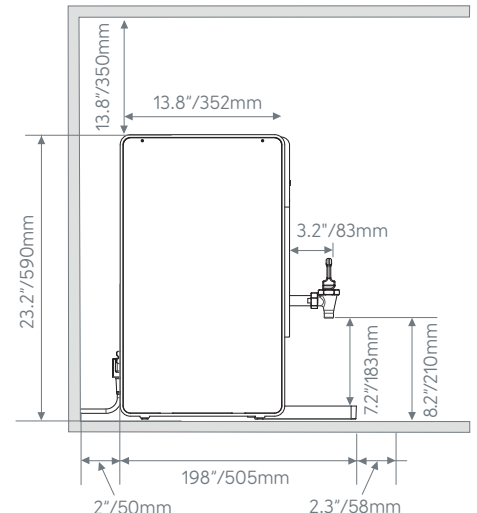


<p>MIX T8 1000871</p>	<p>DIMENSIONS</p>
	
<ul style="list-style-type: none"> • 8 litres • Vacuum insulated tank for up to 70% more energy-efficiency • Autofill/plumbed 	<ul style="list-style-type: none"> • Removable drip tray • 28 litre output per hour • 156 cups (180ml) per hour • Built-in water filter

HIGHLY ACCURATE AND ENERGY-EFFICIENT BOILER WITH BUILT-IN FILTER FOR ADDED QUALITY CONTROL.

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	DIMENSIONS (D x W x H mm)	TAP TO TRAY (T mm)	PLUMBING REQS
MIX T8 1000871	2.8kW	8 L	505 x 210 x 590	183	3/4" BSP

<p>MIX T8</p>	<p>MIX T8 1000871</p>
<p>CABINET CLEARANCE</p>	<p>MIX T8 1000871</p>
 <p>* Required for ventilation if the machine is installed in an enclosed cabinet.</p>	
<p>ELECTRICAL INSTALLATION PROCEDURE When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.</p>	<p>OPERATING BOILER FOR THE FIRST TIME</p> <ul style="list-style-type: none"> • Check that all installation procedures have been carried out. • Ensure water valve is on. • Plug boiler into suitable socket. • Turn on the power switch. • The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating. • The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins). • The boiler is now ready for use - the display will show the button settings and the "Ready" status tick. • The Boiler may now be used to dispense Hot Water to the preset factory settings. <p>NOTE: Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.</p>
<p>PLUMBING INSTALLATION PROCEDURE</p> <ul style="list-style-type: none"> • Ensure that the equipment is installed according to local plumbing & water regulations. • Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa). • Requires inline water filter within your water specifications. • The machine is supplied with a 3/4" BSP connection. • Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations. • Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted. • Turn on water and check for leaks. 	