

# Mega Fries


**VIMF** 



- Featuring "Tilt-n-Clear" bagging rack
- Flip up rear rack for easy chip clearance
- Removable chip dump and bagging rack for easy cleaning
- Independent top and bottom heat
- Large storage volume and additional storage cupboard



### Mega Fries Specification Page

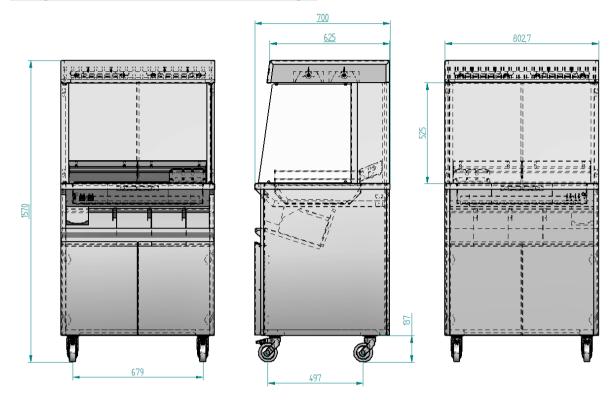

### **Model VIMF**

Dimensions	Machine
Height	1570mm
Width	800mm
Depth	700mm
Weight	97kg
Electrical	1 phase, 50Hz AC, 230v, 2.5Kw
Running Amps	13 Amps
Connection Type	2m BESCHUKO Euro cable with,
	MFEUROCONVERT Euro to UK converter
	plug
International Option	N/A



All *Vizu Mega Fries* have been tested and checked for proper operation before leaving the factory.

Upon delivery please check the unit for damage. If the unit is damaged, contact the carrier, or Fast Food Systems, immediately and file a damage claim (found in the back of the manual) Please retain all packing materials.

### Damage must be reported within 7 days of delivery

### **General Description**

The unit has been designed for the transfer of chips from fryers to bags. Fresh chips are poured in to preparation area where they are salted and then bagged.

#### **Assembly Instructions**

- 1. Remove all packing from the unit.
- 2. Peel off all protective plastic covering from metal
- 3. Wash all removable parts in warm, soapy water and dry them thoroughly.

### **Installation**

Your *Vizu Mega Fries* unit can be set up to work either to the left or right hand side of your fryer(s).

Check both heat switch and light switch are in the OFF position.


Firstly position the Mega Fries unit in the desired position and lock both front castors in position. Connect this to the power supply.

In order to be able to load the Mega Fries unit with fries the side glass needs to be on the opposite side of the machine to the fryer(s). If the glass needs to be moved this is possible by unscrewing the grub screws and sliding the glass out, to re-fit simply slide back in and tighten screws.



### **Operating Instructions**

1. Use the switch with the red LED to start heating of the under pan element and rear pair of heat lamps.

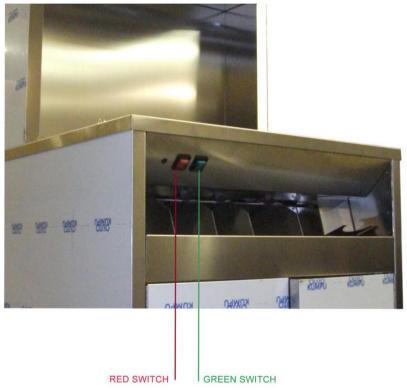

- 2. Use the switch with the green LED to light front row heat lamps.
- 3. Allow 20 minutes to reach operating temperature.
- 4. When fries are cooked lift out of oil and allow to drain.
- 5. When draining is complete move basket across to Mega Fries serving area and tip contents carefully into tray.
- 6. Take the salt shaker from its holder and add salt as desired.
- 7. Now using the fry scoop slide a bag/box over the bottom and scoop chips.
- 8. The bags full of fries can now be placed in the bagging rack prior to sale.


**Note:** It is important that fries are held for no longer than <u>10 minutes</u>. After this time the quality of the fries will deteriorate.



### Additional equipment, to suit Mega Fries

As well as the equipment supplied the Mega Fries is fitted with part inside the chip draining plate that will act as a chip scoop holder.

1. Chip Bagging Scoop holder & handle

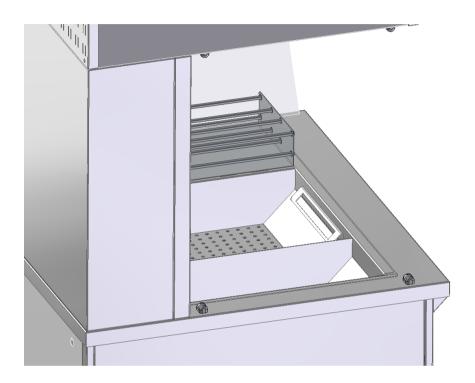


### Cleaning: Every Day

- 1. 'Switch OFF' and remove electrical cord from power supply. Allow unit to cool
- 2. First of all remove the bagging rack and wash in warm soapy water
- 3. Remove the perforated serving tray, wash in warm soapy water
- 4. Wipe the inner tray and all exterior surfaces of machines with a soft damp cloth
- 5. Remove side glass by unscrewing the grub screws and sliding the glass out, to re-fit simply slide back in and tighten screws. Should be cleaned with warm soapy water
- 6. Dry all parts thoroughly and refit in order they were removed




### **Wiring Diagram**

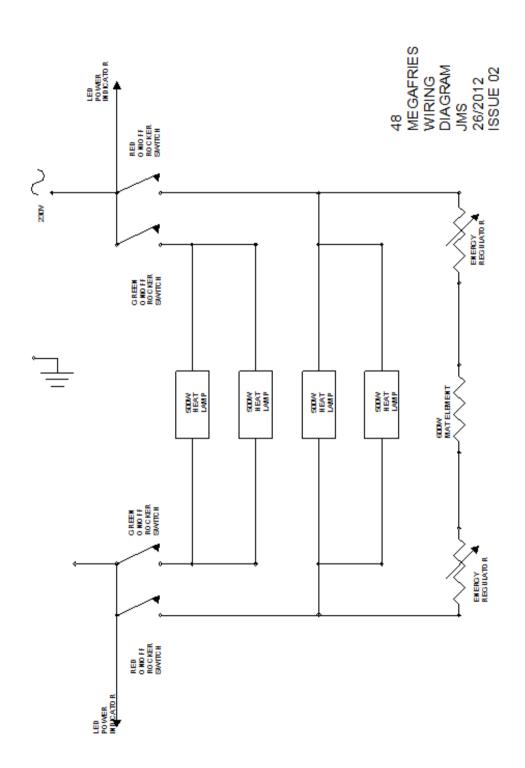



### **EXPLODED VIEW**

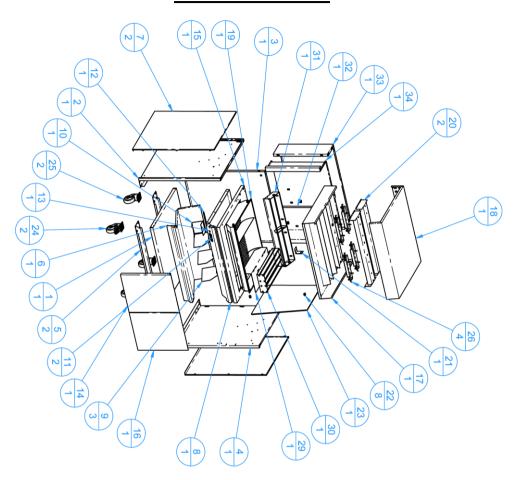

34 48	33 48	32 00	31 48	30 48	29 48	28* 48	27* 48	26 M	25 53	24 53	23 48	22 M	21 48	20 00	19 48	18 48	17 48	16 D	15 48	14 D	13 M	12 48	11 0	10 00	9 48	8 48	7 48	6 48	5 48	4 48	3 48	2 48	1 48	
48-14 INTERLOCK BACK PANEL INNER_C	48-13 INTERLOCK BACK PANEL OUTER v0.01	0CP-037 12.5 CONDUIT TUBE	48A18 BACK RACK FLIP ASSY_B	48A16 SIDE FRY RACK_A	48-47 FRIES BAGGING RACK SUPPORT v0.01	48-56 FRY CAP VD01	48-55 FF FRY CAP - FRI	MF500PLUGIN	5370PJP100P50	5377PJP100P50	48-08 GLASS v0.01	MF COB-CR	48-24 THERMOSTAT BRACKET	0CP-042 HOOD LIGHT HOLDER_	48-A-01 CHIP SORTING ASSEMBLY v0.01	48-06 HOOD OUTER v0.01	48-07 INTERLOCK HOOD INNER_C	DOOR ASSEMBLEY RIGHT HAND v0.01	48-48 TOP_A	DOOR ASSEMBLEY LEFT HAND v0.01	MF NE30 LIGHT RED	48-15 INTERLOCK ROD v0.01	ON & OFF SWITCH	0CP-032 SALT SHAKER HOLDER	48-22 CHIP BAG DIVIDER v0.01	48-10 INSTRUMENT PANEL_A	48-12 OUTER SIDE v0.01	48-11 INTERLOCK LEVEL BUCKET SHELF_B	48-05 STIFFENING CHANNEL_A	48-01 SIDE PANEL_A OPP	48-03 REAR PANEL v0.01	48-01 SIDE PANEL_A	48-04 BASE v0.01	`
C	0	ı	В	ı	v0.0	ı	ı							ı			07		- -			0		ı	0	- -	0	B	Þ	Α	03	'>		
_	_	_	1	_	1	_	_	4	2	2	_	8	_	2	1	_	_	1	1	_	1	1	2	1	3	1	2	1	2	1	1	_	1	



### **SPARE PARTS LIST**

PART NO.	DESCRIPTION	QTY	
MFE5057071010	Energy regulator	1	
VISW17	Red switch	1	
VISW15	Green switch	1	
MFMEGAGLASS2	6mm toughened side glass	1	
MF500PLUGIN	500W lamp (plug in)	4	
Mf500HOLDER	Lamp holder and reflector	4	
MF5377PJP100P50	Swivel castor with brake	2	
MF5370PJP100P50	Swivel castor, no brake	2	
MFELBCE600W	600W Mat element	1	



PART NO.	DESCRIPTION	QTY	
MF374-1029	10mm LED Power Indicator	1	
MF817-8877	Black Nylon 66, strain relief cable bush	1	
BESCHUKO	H05Rr-F 2Mtr. Rubber C032	1	
MFCTB10N	Single pole ceramic blocks	2	
VILE14	Switch Cover Bevel MF1026	2	
MFCOB-CR	Cob-Cr shelf support	8	
MFEUROCONVERT	Euro to UK converter plug In black 19-1032	1	
MF354Z	2 Pole 5amp term block TB06	6	
MFOHSL01	High temperature sleeving	1	



PART NO.	DESCRIPTION	QTY	
MFHIN005	Hinge mounting plate 50 x 50 x 10mm	2	
MFHIN008	Hinge 100mm x 80mm x 70mm	2	



### **Fault Finding**

Any servicing must only be carried out by qualified personnel. Machine must be removed from electrical supply before any servicing.

Problem	Probable Cause	Solution
Indicated     ON/OFF switch     does not light up	No power to machine.	Check machine is plugged in and switched on. Check fuse in 13a plug. Check circuit breaker at main supply board is in (ON).
	ON/OFF switch off ON/OFF switch faulty	Check Switch Replace switch.
2. Unit will not heat up.	No power to machine.	See section 1
	Red indicator switch OFF Red indicator switch faulty	See section 1 See section 1
	Thermostat faulty. Heat element faulty	Check and replace if necessary Check and replace if necessary
3. Lights do not illuminate	No power to machine	Check machine is plugged in and switched on. Check fuse in 13amp plug. Check circuit breaker at main supply board is in (ON)
	Green indicator switch off	Check switch
	Green indicator switch faulty	Replace switch
	Heat lamp broken	Replace heat lamps



## **Terms and Conditions**

### **Claims**

No claim shall be entertained by the Company unless made in writing. Claims arising from damage or partial loss in transit must reach the Company within 7 days from the date of delivery. Claims for non-delivery must reach the Company within 10 days from the date of dispatch. All other claims must reach the Company within 7 days. Damaged goods must be retained for inspection/collection.


### **Returns**

The Company does not operate a returns policy unless the goods are defective:

In circumstances where the Company agrees to accept return of goods, a charge of 25% of the invoice value will be made.

### **Damage claim form**

Please indicate on the picture where the unit is damaged

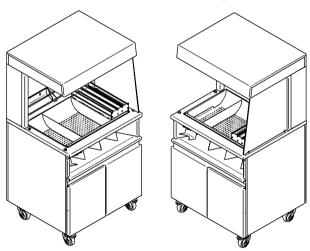

Courier name.....



Please cut this page out and post to *Fast Food Systems* (The address is on the back of this manual)



# Warranty

#### UNITED KINGDOM AND REPUBLIC OF IRELAND

Excepting where otherwise specified all products are subject to 12 months parts and labour warranty. Goods found defective will be repaired, credited or replaced without charge according to the terms of the Company's standard warranty, provided written notice is given within the guarantee period. In no case will the company be liable for repairs made without it's knowledge or sanction, or for indirect damage, or any consequential loss or expense incurred by purchasers.

Fast Food Systems Ltd, warrants to the original purchaser that the equipment supplied to be free from defective materials or workmanship for a period of 12 (twelve) months.

The following are NOT covered by warranty:

- 1. Failure or breakdown caused by incorrect installation.
- 2. Adjustment or calibration of controls this is a routine maintenance function.
- 3. Abuse or misuse, including cleaning.
- 4. Warranty labour is only carried out during normal working hours; calls out of hours may be subject to surcharges.
- 5. The warranty will commence either on installation or 1 (one) month from date of dispatch whichever is the sooner.
- 7. Warranty on spare parts purchased for equipment outside of the warranty period is 3 (three) months from date of sale.
- 8. Any faulty spare parts replaced under warranty must be returned with 7 days of supply.
- 9. Warranty is non-transferable.

**Fast-Food-Systems Ltd** will not be held responsible, financially or otherwise, for any loss of business as a result of equipment breakdown.



# NOTES:



Model Number: VIMF
Order ID/Job No
Machine serial number
Date of Manufacture/
Date of delivery/
Date of commissioning/



#### **ENGLISH**

Electrical equipment marked with this symbol may not be disposed of in European public disposal systems after 12 August 2005. In conformity with European local and national regulations (EU Directive 2002/96/EC), European electrical equipment users must now return old or end-of-life equipment to the manufacturer for disposal at no charge to the user.

**Note:** For return for recycling, please contact the equipment manufacturer or supplier for instructions on how to return end-of-life equipment for proper disposal.

### **Fast Food Systems Limited**

Manufacturer & Distributor of Catering Equipment

Unit 1 Headley Park 9 Headley Road East

Woodley Reading Berkshire RG5 4SQ

Tel: 0118 944 1100 Fax: 0118 944 0350

Email: service@fast-food-systems.co.uk

Website: www.fast-food-systems.com

ISSUE 10: 06th July 17