

User manual for:

Manufacturer	Model
Mercatus	Y2 Range
	Y2-3
	Y2-5
	Y2-7

This user manual is for the touchscreen controller only not the complete cabinet

Uploaded: August 2017

Interlevin Refrigeration Ltd
West Meadow Rise
Castle Donington
Derby
DE74 2HL

Sales: 01332 850090
Parts: 01332 850190
Service: 01332 850064
Email: trade.sales@interlevin.co.uk
Web: www.interlevin.co.uk

Operating Instructions
Notice d'Utilisation
Bedienungsanleitung
Gebruiksaanwijzing

Manual de Instruções
Manuale di Istruzioni
Manual de Instrucciones

N.º DIXELL
VISOTOUCH_GERAL

Operating Instructions
Refrigerated equipment

EN

Notice d'Utilisation
Équipement réfrigéré

FR

Bedienungsanleitung
Kühlgerät

DE

Gebruiksaanwijzing
Koel apparatuur

NL

Manual de Instruções
Equipamento refrigerado

PT



Manuale di Istruzioni
Attrezzatura refrigerata

IT







Manual de Instrucciones
Equipo frigorífico



ES

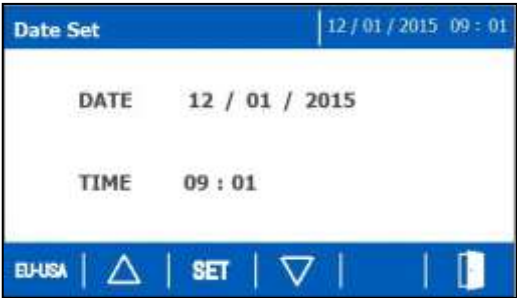






















DISPLAY	Key	Target / Function
Startup screen		
		Press to Start the input configuration

Language selection screen		
		Select English
		Select French
		Select German
		Select Italian
		Select Portuguese
		Select Spanish
		Select Dutch

Date and Time setting screen		
		Select the date and time format: America or Europe
		Increase the value or move the cursor
		Select the value or confirm the value
		Decrease the value or move the cursor
		Save settings and exit

Stand-by screen	
	 Switch on the Unit


Home screen	
	 Select the Soft Chill cycle
	 Select the Soft Freeze cycle
	 Select the Hard Chill cycle
	 Select the Hard Freeze cycle
	 Access the service screen
	 Access the alarm screen
	 Access the programming screen
	 Access the Menu screen
	 Switch on/off the room light (if applicable)
 Switch off the unit	


Temperature mode (default) screen	
	 Temperature mode (default) or by Time
	 Display of set room temperature
	 Display of set probe temperature
	 Access the Set screen
	 Access the alarm screen
	 Start the blast chilling cycle
	 Evap. Fan on/off (visible only when running)
	 Switch on/off the room light (if applicable)
	 Go back the home screen


Time mode screen	
	Select mode by Time
	Display of set room temperature
	Display of set time cycle
	Access the Set screen
	Access the alarm screen
	Start the blast chilling cycle
	Evap. Fan on/off (visible only when running)
	Switch on/off the room light (if applicable)
	Go back the home screen



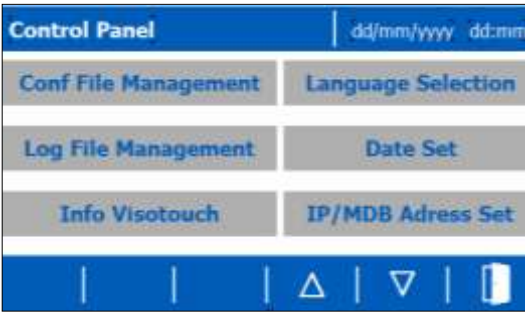

Soft Chill by Temperature screen	
	Display of actual room temperature
	Display of actual probe temperature
	Access the Set screen
	Access the alarm screen
	Pause the cycle
	Evap. Fan on/off (visible only when running)
	Switch on/off the room light (if applicable)
Stop the cycle	

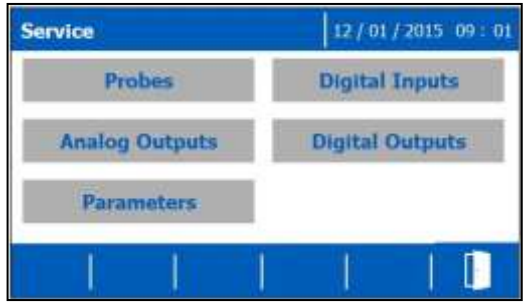Menu screen	
	MENU
	Access the Needle Probe Heating screen(if applicable)
	Access the continuous cycle screen
	Access the manual defrost screen
	Access the Anisakis cycle screen (24 h Raw Fish Freezing)
	Access the UV cycle screen (if applicable)
	Access the Control Panel screen
	Access the Service screen (authorised engineers only!)
	Access the alarm screen
	Access the programming screen
	Access the Menu screen
Switch on/off the room light (if applicable)	
Compressor Control on/off	
Go back the home screen	

<p>Control Panel screen</p> 	Control Panel	
	Conf File Management	Access the Configuration File Management screen
	Log File Management	Access the Login File Management screen (HACCP & Alarm)
	Info Visotouch	Access the Info Visotouch screen
	Language Selection	Access the Language Selection screen
	Date Set	Access the Date and Time screen
	IP/MDB Address Set	Access the IP/MDB Address Set screen
	Set Visotouch	Access the Set Visotouch screen
		Page up
		Page down
		Go back the home screen

<p>Service screen</p> 		FOR AUTHORISED ENGINEERS ONLY!
	Probes	Access the Probes screen
	Digital Inputs	Access the Digital Inputs screen
	Analog Outputs	Access the Analogue Outputs screen
	Digital Outputs	Access the Digital Outputs screen
	Parameters	Access the Parameters screen
		Go back the home screen

<p>Alarm screen</p> 		
	RPF	Room probe alarm
	EPF	Evaporator probe alarm
	CPF	Condenser probe alarm
	NPF	Needle probe alarm
	RLT	The room temperature is too low
	EXT	The digital input configured as external alarm is active
	DOOR	The door is open
	CHT	The temperature of the condenser is too high
	CLT	The temperature of the condenser is too low
	CWH	Compressor working hours
	AUP	The auxiliary probe is in alarm (if applicable)
	ACF	General configuration error alarm
	ACK	Confirm the alarm
	Go back the home screen	

Alarm confirmation screen	ACK	
		Save to USB-Pen
		Clear alarm details
	SET	Reset alarm
		Go back the home screen