

CATER-COOK

Foldable Propane Gas Barbecue - Instruction Manual

Model: CK9111



To avoid risk of accidents or damage to the appliance, it is essential to read these instructions before it is installed and used for the first time.



Caterkwik Ltd

The Lakeland Catering Centre
Newlands
Ulverston
Cumbria
LA12 7QQ

01229 480001

info@caterkwik.co.uk



**Table of Contents**

Safety Precautions	Page 2
Safety Instructions	Page 3
Exploded Diagram	Page 4
Assembly Instructions	Page 5
Connecting Gas Supply	Page 6
Leak Testing	Page 7
Operating Instructions	Page 8
Lighting The Barbecue	Page 9
Cleaning & Maintenance	Pages 10-11
Limited Warranty	Page 12



Safety Precautions

Prior to using this barbecue for the first time, please read these instructions thoroughly.

The following guidelines must be adhered to:

- The barbecue is for outdoor use ONLY.
- Do not move the barbecue when it is in use.
- Do not modify or alter the barbecue in any way as this may be dangerous.

IMPORTANT

Hazardous fire or explosion may result if these instructions are not correctly followed.

It is the users responsibility to see that the barbecue is properly assembled, installed and maintained when in use. Failure to follow instructions in this manual could result in serious bodily injury and/or property damage. Any modification of the barbecue, misuse or failure to follow the instructions may be dangerous and will invalidate your warranty.

In the event you smell gas.

1. Shut off the gas supply to the barbecue.
2. Extinguish any open flame and avoid using any electrical appliances.
3. If cool to touch, remove the grills to help ventilate the burners.
4. Inspect the gas connections with a soapy water solution.
5. If gas odor still remains, immediately contact your gas supplier or fire department.

IMPORTANT

Accessible parts may be very hot. Do not allow children to play near the barbecue when it is in use.

DO NOT store or use petrol or other flammable liquids or vapors in the vicinity of the barbecue.




Safety Instructions

Before and after using, please follow the below steps to ensure the maximum levels of safety for you and people around you.

- 1. Leak test all connections after changing gas bottles or after prolonged use. as detailed on page 2.**
- 2. Never use an LPG bottle which has damage to the body, valve, collar or footing.**
- 3. Do not store spare LPG bottles underneath or near the barbecue.**
- 4. Do not operate the barbecue while under the influence of alcohol or drugs.**
- 5. Never use charcoal, lighter fluid, lava rocks, gasoline, kerosene or alcohol within the barbecue.**
- 6. Do not store or use gasoline or other flammable liquids or vapors within 25ft of the barbecue.**
- 7. Minimum clearance for back and sides of the unit are 3ft. DO NOT use underneath an overhead combustible surface.**
- 8. Do not use unless the barbecue is completely assembled, fastened and tightened.**
- 9. Clean and inspect the barbecue on a regular basis. Making sure to thoroughly inspect the gas connection. If there is any evidence of abrasion, wear, cuts or leaks. Replace the hose IMMEDIATELY.**
- 10. When in use, an ABC (powder) fire extinguisher should be present in the event of fire.**
- 11. Only operate the barbecue on solid level ground. It is not to be used in/on recreational vehicles.**
- 12. Do not move the barbecue while in use.**
- 13. Position the gas hose connection as to not allow dripping grease to come into contact with it.**
- 14. Keep all electrical cords away from the cooking surface.**
- 15. Turn off the gas supply as the bottle immediately after use.**
- 16. NEVER cover the entire cooking surface.**
- 17. Never obstruct the ventilation openings of the burner compartment.**
- 18. When handling hot utensils, or grill covers protective gloves must be worn.**



Exploded Diagram

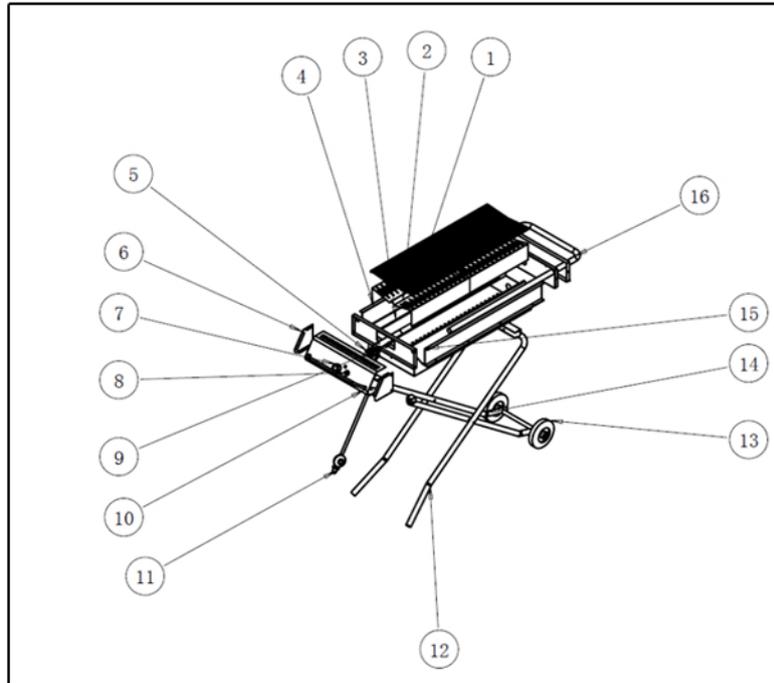

No.	Part Name	QTY	Material
1	Cooking Grill	2	Stainless Steel
2	Heat Diffuser	2	Stainless Steel
3	Burner	1	Stainless Steel
4	Body Assembly	1	Assembly
5	Valve Assembly	1	Assembly
6	Control Panel Assembly	1	Assembly
7	Control Panel	1	Stainless Steel
8	Temperature Knob	1	Plastic
9	Electrode	1	Assembly
10	Moving Handle	1	Stainless Steel
11	Regulator & Hose Assembly	1	Assembly
12	Left Leg	1	Stainless Steel
13	Wheel	2	Plastic
14	Right Leg	1	Stainless Steel
15	Heat Shield	2	Stainless Steel
16	Handle	1	Stainless Steel



Assembly Instructions

Please read these instructions carefully before assembly and use.

Find a large, clean area to assemble your barbecue.

1. Make sure to wear protective gloves when handling as while every effort has made to remove any sharp burrs or edges during the manufacturing process, some sharp edges may remain.
2. Open the packaging box and remove the barbecue. Making sure to keep the unit folded flat at this time.
3. Before fully assembling, remove all laser film plastic covering the barbecue.
4. With the help of another person, lift the body of the barbecue upwards until the legs extend.
5. Once extended, the top part of the legs (wheel side) should clip underneath the frame.
6. Secure the legs with the attached screw in bolt.
7. The barbecue is now fully assembled.



Connecting Gas Supply

IMPORTANT NOTES

To operate you will need a precision-filled standard G31 grill LPG bottle with external valve threads.

Use standard flexible tube with length less than 1.5m. The tube itself should be readily visible across its entire length. Allowing for inspection after installation.



IMPORTANT WARNING

You must have the proper regulator and gas bottle in order for the barbecue to operate safely and efficiently. Use of an incorrect or faulty regulator is dangerous and will invalidate any warranty claims.

CONNECTING THE GAS SUPPLY

Before connecting, be sure that there is no debris caught in the head of the LPG bottle, head of the regulator valve or in the head of the burner and burner ports.

Connect the tubing to both the bottle and nozzle on the barbecue by the use of hose clips securely fastened around the connection points.

PLEASE NOTE

Ensure the hose once connected does not come into contact with the hot surfaces of the barbecue. Keep the bottle in a safe place during use.

DISCONNECTING THE GAS SUPPLY

Before disconnecting make sure the LPG bottle valve is fully in the CLOSED position. Disconnect the gas line from the bottle by turning the regulator knob counter-clockwise until it is loose.

Please note: after connecting a gas supply, a leak test is necessary. And when changing a gas bottle, care must be taken to keep away from any source of ignition.



Leak Testing

Leak testing is to be performed in a well ventilated area.

Please follow these steps to successfully leak test your barbecue and gas supply.

1. Make sure the barbecue control knobs are in the OFF position.
2. Open the gas control valve on the LPG bottle.
3. Check for leaks by brushing soap solution over all gas system joints. Including all valve connections, hose connections and regulator connections.



IMPORTANT WARNING

Never use an open flame to test for gas leaks at ANY time.

4. If bubbles form over any of the joints, there is a gas leak present.
5. Turn off the gas supply and re-tighten the offending joint(s), then repeat the test.
6. If bubbles continue to form, stop leak testing, CLOSE the gas supply and contact Caterkwik for assistance on **01229 480001**.

Leak test your barbecue every 12 months, or whenever the LPG bottle is removed or replaced.



Operating Instructions

Before proceeding to use your barbecue, make certain that you have fully assembled the appliance, and that the gas supply has been leak tested fully.

- Only use the barbecue a minimum of 3ft away from and wall or surface.
- Never use your barbecue in a building, garage, shed or any other enclosed area.
- Never obstruct the flow of ventilation air around the burner housing.

BEFORE FIRST IGNITION.

Inspect the gas supply hose prior to turning the gas "ON". If there is evidence of cuts, wear or abrasion, it must be replaced prior to use.



DO NOT USE THE BARBECUE IF THE SMELL OF GAS IS PRESENT

FOOD PREP

To prevent foods from sticking to the cooking surface, please use a long handled brush to apply a light coat of cooking or vegetable oil before each barbecuing session.

NOTE: When cooking for the first time, coating colour may change slightly as a result. This is normal and should be expected.



Lighting the Barbecue

Please follow these steps to light and use the barbecue.

1. Ensure the burner control knob is in the OFF position.
2. Slowly turn on the gas at the LPG bottle.
3. Push in and turn the burner control knob to the MAX position while pressing the piezo ignitor to light the burner.
4. After lighting the burner, hold down the knob for 15 more second to allow the thermocouple to heat up.
5. If the burner does not light within 5 seconds, turn the burner control knob to OFF. Wait 5 minutes for the gas to clear and repeat the above steps. (Use Manual directions below if the barbecue will still not light)
6. When lit, turn the burner control knob to the desired heat setting.

Manual lighting directions.

1. Ensure the burner control knob is in the OFF position.
2. Slowly turn the gas on at the LPG bottle.
3. Place a match in the match holder. Which is located in the top centre drawer of the grill cabinet, underneath the burner.
4. Use the holder to slide the lit match through the cooking grates.
5. Press and turn the burner control knob to the MAX position.
6. If the burner does not light within 5 seconds, turn the burner control knob to the OFF position.
7. Wait 5 minutes for gas to clear and try again.
8. Once lit, turn the control knob to the desired heat setting.



Cleaning & Maintenance

Regularly clean your barbecue between uses and especially after extended periods of storage.

- Ensure the barbecue and its components are sufficiently cool before cleaning.
- Never douse the barbecue with water when it's surfaces are hot.
- Never handle hot parts with unprotected hands.

In order to extend the life and maintain the condition of your barbecue, we strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months.

Cleaning procedures.

Cooking Grill.

Clean with hot soapy water, to remove any food residue. Use a mild cream cleaner on a non-abrasive pad, rinse well and dry thoroughly.

Burner maintenance.

In normal usage, burning off the residue after cooking will keep the burner clean. The burner should be removed and cleaned annually, or whenever heavy build-up is found. To ensure that there are no signs of blockage (debris, insects etc) in either the burner portholes or the burner assembly itself, use a pipe cleaner to clear obstructions. A wire brush can also be used to remove corrosion from the burner surfaces.



PLEASE NOTE

When refitting the burner, be careful to check that the burner assembly is positioned correctly over the valve outlets.



Cleaning & Maintenance

Barbecue Body.

Regularly remove excess grease or fat from the barbecue body with a soft plastic or wooden scraper. It is not necessary to remove all the grease from the body. If you need to clean the barbecue fully, use hot soapy water with a cloth, or nylon bristled brush only.



Remove the cooking grills and burners before fully cleaning. Do not immerse the gas controls or manifold in water. Check burner operation after carefully refitting to body.

Fixings.

Annual checking and tightening of metal fixings is recommended.

Storage.

Store your barbecue in a cool dry place. Cover the burner with aluminium foil in order to prevent insects or other debris from collecting in the burner holes.



PLEASE NOTE

If the barbecue is to be stored indoors. You MUST disconnect the LPG bottle and have it remain outside.

The gas bottle should always be stored outside, in a dry, well-ventilated area, away from any sources of heat or ignition. And ALWAYS kept out of reach of children.



Limited Warranty

Warranty Procedures.

If your product is not working while still under warranty and has not been subject to improper use or treatment, follow the procedure listed below to obtain repairs.

- Follow the troubleshooting procedures in this manual.
- List the model and serial number off the silver rating plate.
- Call Caterkwik's Service Department on **01229 480001** to log a service call.

General maintenance and repairs.

If your product requires any maintenance or repairs, this must be undertaken by a qualified technician. We have accredited technicians and agents who are experienced in the product and carry commonly used spare parts.

Contact Caterkwik for maintenance and repairs by your nearest maintenance engineer.