

Stainless Steel Multideck Display Instruction manual



(NL) **Multideck Koelkast**
Handleiding

(FR) **Refrigerateur a plusieurs niveaux**
Mode d'emploi

(DE) **Kuhlschrank**
Bedienungsanleitung

(IT) **Espositore frigorifero**
Manuale di istruzioni

(ES) **Refrigerador multinivel**
Manual de instrucciones

(PT) **Frigorifico de varios niveis**
Manual de instruções

**Model • Modèle • Modell • Modello • Modelo • Malli:
CM287**

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use this appliance to store medical supplies.
- DO NOT use electrical appliances inside the appliance (e.g. heaters, ice-cream makers etc.)
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a POLAR agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not attended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety

Product Description

CM287 - POLAR Multideck 1.0m

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your POLAR product.

Pack Contents

The following is included:

- POLAR Refrigerator
- Instruction Manual

POLAR prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your POLAR dealer immediately.

Installation



Note: If the unit has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow to stand.

To avoid higher energy consumption and a shorter compressor life, your refrigerated equipment should never be installed:

- near sources of heat such as radiators, direct or indirect sunlight or other equipment which produce heat.
- in line with draughts coming from doors, windows or air-conditioning systems.

1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
2. Maintain a distance of 20cm (7 inches) between the unit and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.



Note: Before using the appliance for the first time, clean the shelves and interior with soapy water.


Operation

Control Panel

A - Power Switch

B - Controller

Turn On

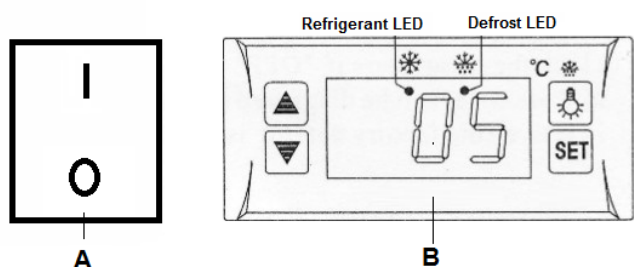

1. Ensure the power switch A is set to [O] and turn on at the socket.
2. Switch on the Power [I]. The current temperature within the appliance is displayed.

Set the Operating Temperature

1. Press the **SET** button. The set temperature is displayed.
2. Press the **▲** or **▼** buttons to display the required temperature.
3. Press the **SET** button to store the temperature.

Internal Light

Press the **Light** button on the controller to turn the internal light on and off

Manual Defrost

Press and hold the **Defrost** button for 6 seconds to begin or stop a manual defrost. The defrost light illuminates.

Cleaning, Care & Maintenance

- Switch off and disconnect from the power supply before cleaning.
- Clean the interior of the appliance as often as possible.
- Do not use abrasive cleaning agents. These can leave harmful residues.
- Always wipe dry after cleaning.
- A POLAR agent or qualified technician must carry out repairs if required.

Cleaning the Condenser

Periodically cleaning the condenser can extend the life of the appliance.

The condenser is located behind the front bottom panel



Note: Use a soft brush or vacuum cleaner to clean the fins of the condenser, taking care not to damage the fins.

Troubleshooting

If your POLAR appliance develops a fault, please check the following table before making a call to the Helpline or your POLAR dealer.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call POLAR agent or qualified Technician
	Fuse in the plug has blown	Replace the fuse
	Power supply	Check power supply
	Internal wiring fault	Call POLAR agent or qualified Technician
The appliance turns on, but the temperature is too high/low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Clean Condensor
	Insufficient airflow to the fans	Remove any blockages to the fans
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable foodstuffs are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
The appliance is unusually loud	The appliance is touching a neighbouring object	Check installation position and change if necessary
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary

Technical Specifications

Model	Voltage	Power	Current	Temperature Range	Refrigerant	Dimensions H x W x D (mm)	Weight (kg)
CM287	230V 50Hz	1300W	6.7A	2°C to 10°C	R290	1490 x 920 x 847	137.5

Electrical Wiring

POLAR appliances are supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard.

The plug is to be connected to a suitable mains socket.

POLAR appliances are wired as follows:

- Live wire (coloured brown) to terminal marked L
 - Neutral wire (coloured blue) to terminal marked N
 - Earth wire (coloured green/yellow) to terminal marked E
- All POLAR appliances must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Disposal

EU regulations require refrigeration product to be disposed of by specialist companies who remove or recycle all gasses, metal and plastic components.

Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

Alternatively call the POLAR helpline for details of national disposal companies within the EU.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

POLAR parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

POLAR products have been approved to carry the following symbol:



DECLARATION OF CONFORMITY

- Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp •
Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento
Model • Modèle • Modell • Modello • Modello • Malli
Application of Council Directives(s)
Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du
Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive •
Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) do Conselho

Standards
Standaarden • Normes • Normen • Standard • Estándares • Normas

Producer Name • Naam fabrikant • Nom du producteur • Name des Herstellers •
Nome del produttore • Nombre del fabricante • Nome do fabricante
Producer Address • Adres fabrikant • Adresse du producteur • Anschrift des
Herstellers • Indirizzo del produttore • Dirección del fabricante • Endereço do
fabricante

Multi-deck Display Fridge
CM287
LVD Directive 2014/35/EU EMC Directive 2014/30/EU ROHS Directive 2011/65/EU
EN50106:2008 EN60335-1:2012+AC:2014+ A11:2014, EN62233:2008+AC:2008 EN55014-1:2006+A1:2009+A2:2011 EN55014-2:1997+AC:1997+A1:2001 +A2:2008+EN55014-2:2015 EN61000-3-2:2014 EN61000-3-3:2013 EN50581:2012
Polar
Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.


Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

Date • Data • Date • Datum • Data • Fecha • Data
Signature • Handtekening • Signature • Unterschrift
Firma • Firma • Assinatura

Full Name • Volledige naam • Nom et prénom • Vollständiger Name •
Nome completo • Nombre completo • Nome por extenso
Position • Functie • Fonction • Position • Qualifica • Posición • Função

01/11/16

Richard Cromwell
Commercial Director

NOTES

NOTES

NOTES

