




# URNEX® TRAINING



## LIQUID DEZCAL™ ACTIVATED SCALE REMOVER

### INSTRUCTIONS FOR QUARTERLY USE:

1. CREATE A SOLUTION USING 50ML LIQUID DEZCAL IN 500ML HOT WATER.
2. ADD SOLUTION TO THE WATER RESEVOIR
3. HOLD SOLUTION IN VESSEL FOR UP TO 30 MINUTES.
4. RINSE ALL PARTS THOROUGHLY.

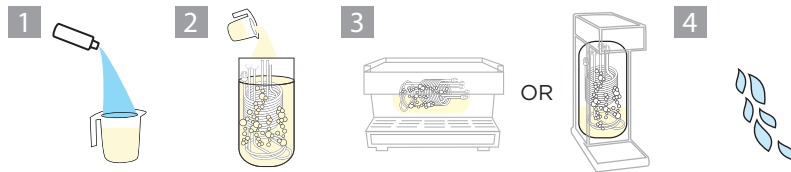

### NOTE:

- PRODUCT IS RECOMMENDED FOR USE ON COMMERCIAL EQUIPMENT BY PROFESSIONAL TECHNICIANS ONLY.



**URNEX BRANDS, INC**

SPECIALIZED EQUIPMENT CLEANERS SINCE 1936

700 EXECUTIVE BLVD ELMSFORD, NY 10523 • TEL 914.963.2042 • FAX 914.963.2145

[www.urnex.com](http://www.urnex.com)