



**MISTRAL M60, M90, M135 AND TC60**

**INSTALLATION, OPERATING & MAINTENANCE MANUAL**

**PLEASE LEAVE WITH OPERATOR**



**MISTRAL M60, M90, & M135 – SERIES 11**

**M90 SLIDING DOOR – SERIES 11**

**M60HA & M90HA – SERIES 1**

**MISTRAL TC60 – SERIES 11**

Imperial Machine Company Limited  
Unit 1, Abbey Road  
Wrexham Industrial Estate  
Wrexham LL13 9RF  
Tel: +44 (0)1978 661155  
Fax: +44 (0)1978 729990  
Spares Fax: +44 (0)1978 667759  
E-mail: [service@imco.co.uk](mailto:service@imco.co.uk)  
E-mail: [sales@imco.co.uk](mailto:sales@imco.co.uk)  
Website: [www.imco.co.uk](http://www.imco.co.uk)

**EC DECLARATION OF CONFORMITY**

(Guarantee of Production Quality)

We, Imperial Machine Company Limited of:  
Unit 1, Abbey Road, Wrexham Industrial Estate, Wrexham, LL13 9RF  
Declare under our sole responsibility that the machines



**MISTRAL M60, M90 & M135 SERIES 11**  
**MISTRAL M90SD SERIES 11**  
**MISTRAL M60HA & M90HA SERIES 1**  
**MISTRAL TC60 SERIES 11**

as described in the attached technical documentation, are in conformity with the protection requirements of the Electromagnetic Compatibility Directive 2004/108/EC and manufactured in accordance with harmonised standards EN 61000-6-1: 2001 Immunity and EN 61000-6-3: 2001 Emissions (plus product specific standards).

They also satisfy the essential health and safety requirements of the Low Voltage Directive 2006/95/EC and are manufactured in accordance with standards BS EN 60335-1 and BS EN 60335-24, and the relevant requirements of the Pressure Equipment Directive 97/23/EC.

Approved by E.Plumb

A handwritten signature in black ink, appearing to read 'E. Plumb', is written over a horizontal line.

Signed at Wrexham,

## INDEX

|  |           |
|--|-----------|
| <b>GUARANTEE.....</b>  | <b>1</b>  |
| <b>DELIVERY .....</b>  | <b>1</b>  |
| <b>SAMPLE RATING LABEL.....</b>  | <b>2</b>  |
| <b>INTRODUCTION.....</b>   | <b>3</b>  |
| <b>MISTRAL DIMENSIONS.....</b>   | <b>4</b>  |
| <b>INSTALLATION.....</b>   | <b>5</b>  |
| <b>REVERSING DIRECTION OF DOOR (TC60).....</b>                                     | <b>6</b>  |
| <b>M90 SLIDING DOOR REMOVAL &amp; TROUBLE SHOOTING .....</b>                       | <b>9</b>  |
| <b>ELECTRICITY SUPPLY CONNECTION.....</b>  | <b>10</b> |
| <b>COMMISSIONING .....</b>   | <b>10</b> |
| <b>USING YOUR BOTTLE COOLER.....</b>   | <b>11</b> |
| <b>CLEANING.....</b>   | <b>12</b> |
| <b>CHANGING SHELF POSITION .....</b>   | <b>12</b> |
| <b>CHANGING THE LIGHT BULB AND STARTER TC60.....</b>                               | <b>13</b> |
| <b>CHANGING A FLUORESCENT STRIP LIGHT FITTING M60, M90, M90SD &amp; M135 .....</b> | <b>14</b> |
| <b>MAINTENANCE.....</b>  | <b>15</b> |
| <b>DO'S AND DON'TS .....</b>   | <b>16</b> |
| <b>ORDERING SPARE PARTS.....</b>   | <b>17</b> |
| <b>END OF LIFE DISPOSAL.....</b>   | <b>17</b> |
| <b>MATERIAL CONTENT.....</b>   | <b>17</b> |
| <b>M60 WIRING DIAGRAM .....</b>  | <b>18</b> |
| <b>M90 &amp; M90SD WIRING DIAGRAM.....</b>   | <b>19</b> |
| <b>M60 HIGH AMBIENT WIRING DIAGRAM.....</b>  | <b>20</b> |
| <b>M90 HIGH AMBIENT WIRING DIAGRAM.....</b>  | <b>21</b> |
| <b>M135 WIRING DIAGRAM .....</b>   | <b>22</b> |
| <b>TC60 WIRING DIAGRAM .....</b>   | <b>23</b> |
| <b>REAR VIEW SPARES GUIDE .....</b>  | <b>24</b> |
| <b>FRONT VIEW SPARES GUIDE .....</b>   | <b>25</b> |
| <b>FRONT VIEW SPARES GUIDE M90 SLIDING DOOR.....</b>                               | <b>26</b> |
| <b>SPARE PARTS LIST .....</b>  | <b>27</b> |
| <b>SPARE PARTS LIST CONT .....</b>   | <b>28</b> |
| <b>SPARE PARTS LIST CONT .....</b>   | <b>29</b> |
| <b>SPARE PARTS LIST CONT .....</b>   | <b>30</b> |



## GUARANTEE

The Mistral M60, M90, M135 & TC60 units are guaranteed by IMC for 2 years from the date of their purchase from IMC, or from one of its stockists, dealers or distributors. The guarantee is limited to the replacement of faulty parts or products and excludes any consequential loss or expense incurred by purchaser. Defects which arise from faulty installation, inadequate maintenance, incorrect use, connection to the wrong electricity supply or fair wear and tear are not covered by the guarantee.

The guarantee applies in this form to installations within the United Kingdom.

Please observe these instructions carefully.

## DELIVERY

The packaged machine consists of:

|                                |    |
|--------------------------------|----|
| M60 Bottle Cooler containing:  |    |
| Shelves                        | 2  |
| Shelf clips                    | 8  |
| Sets of keys                   | 1  |
| M90 Bottle Cooler containing:  |    |
| Shelves                        | 2  |
| Shelf clips                    | 12 |
| Sets of keys                   | 2  |
| M135 Bottle Cooler containing: |    |
| Shelves                        | 4  |
| Shelf clips                    | 16 |
| Sets of keys                   | 3  |
| TC60 Bottle Cooler containing: |    |
| Shelves                        | 5  |
| Shelf clips                    | 20 |
| Sets of keys                   | 2  |
| Instruction Booklet            | 1  |

Please notify both the carrier and the supplier within three days of receipt if anything is missing or damaged.

Check that the correct machine has been supplied and that the voltage, marked on the rating plate, is suitable for the supply available. The rating plate is located on the right hand side of the case.

### SAMPLE RATING LABEL

imc

IMPERIAL MACHINE COMPANY Ltd  
LL13 9RF, UNITED KINGDOM  
TEL +44 (0)1978 661155




|                       |         |               |      |
|-----------------------|---------|---------------|------|
| MISTRAL BOTTLE COOLER |         | FREQUENCY(Hz) | 50   |
| TYPE / MODEL          | M60     | IP RATING     | IPX1 |
| VOLTAGE RANGE         | 230     | dB (A)        | 65   |
| PHASE                 | 1       | AMPS (MAX)    | 1.9  |
| SERIES #              | 11      | CLASS         | N    |
| R134A                 | 140grms | LIGHT (MAX)   | 8W   |

SERIAL NUMBER = 7711110001

www.imco.co.uk






**INTRODUCTION**

The Mistral M60, M90 and M135 are backbar or underbar refrigerators designed for the cooling and storage of beverages. The Mistral TC60 is a full height backbar refrigerator.

The following quantity of beverage bottles can be held in each unit:

| Bottle Cooler | Capacity (330ml Bottles) |
|---------------|--------------------------|
| M60           | 135                      |
| M90           | 204                      |
| M135          | 306                      |
| TC60          | 272                      |

MISTRAL DIMENSIONS

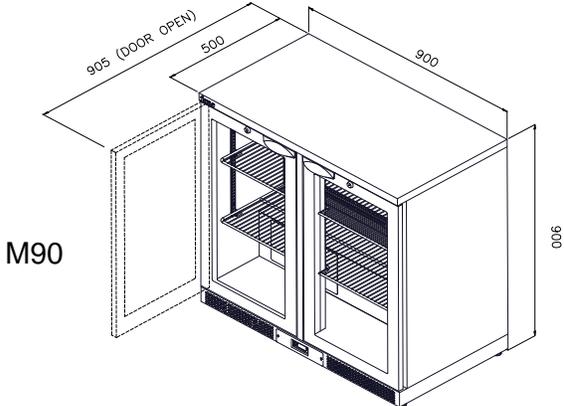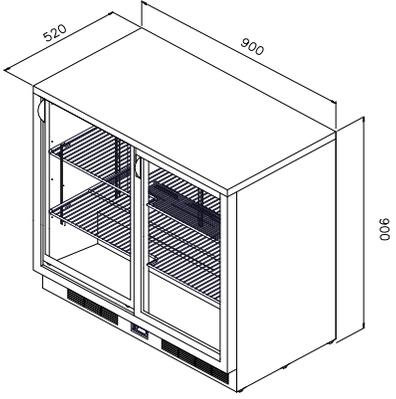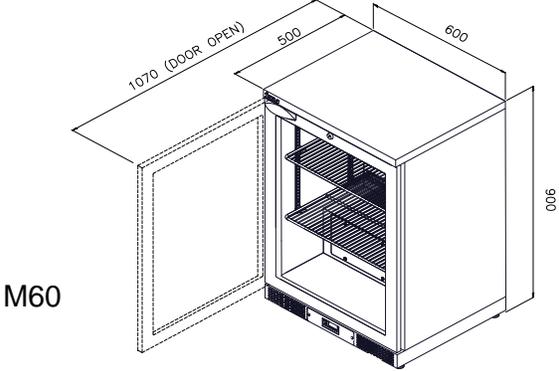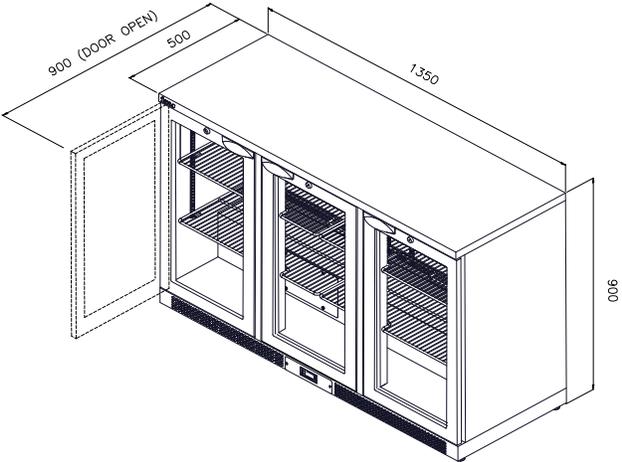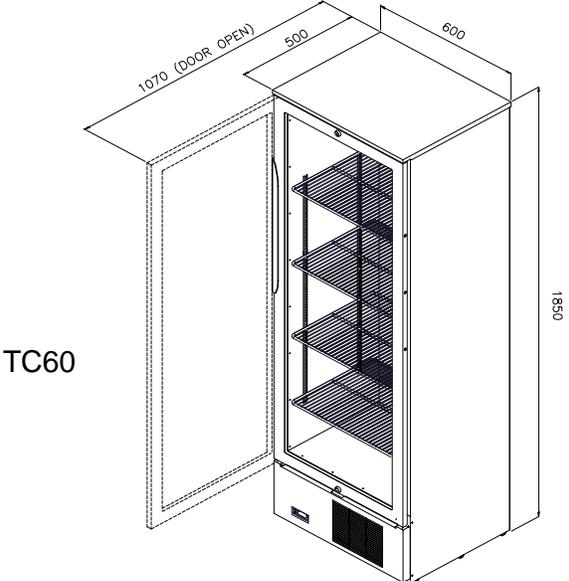

## INSTALLATION

### For the Installer:

These Instructions contain important information designed to help the user obtain the maximum benefit from their investment in an IMC Mistral. Please read them carefully before starting work, and consult with the supplier in the event of any queries.

Be sure to leave this Instruction Manual with the user after installation of the machine is complete.

### Procedure



#### WARNING

The following table shows the weight and the minimum quantity of people required to lift each unit:

| Bottle Cooler | Net Weight | Quantity of People |
|---------------|------------|--------------------|
| M60           | 52 kg      | 2                  |
| M90           | 82 kg      | 4                  |
| M135          | 125 kg     | 4                  |
| TC60          | 87 kg      | 4                  |

Install the unit on a flat and level floor. The Mistral M60 and M90 require 20mm clearance for air circulation at the back and sides. The units are fitted with glider feet which allow them to slide forward for cleaning and maintenance purposes.

The Mistral TC60 requires a clearance of 40 mm at the back of the unit.

The Mistral M135 is on castors to aid installation and removal for cleaning. Do not install the unit close to a heat source such as a radiator or the warm air outlet of another piece of refrigeration equipment.

Ensure that the units are standing level by adjusting the feet on either end of the front of the unit.

The units have an automatic defrost cycle and evaporate all the condensate water without the need for a drainage system.

#### NOTE

**The castors on the Mistral M135 are to aid installation only. The unit is not designed as a mobile machine.**


**It is important to install the Bottle Cooler on a flat surface. This ensures that the doors are level. Adjustment is provided via the feet, to enable the installer to level the cabinet. Engineer Call-outs in order to level Bottle Coolers, will not be covered under warranty.**

## REVERSING DIRECTION OF DOOR (TC60)


On delivery the door of the Mistral TC60 is hinged on the right hand side of the cabinet. However, it is possible to move the hinge to the other side of the cabinet by following the steps below.

To change the TC60 door:


- Remove the grille cover by moving the cover upwards and then unhooking the lugs from the bottom of the cabinet.
- Hold the door in its closed position to prevent the door from dropping when the hinge fixings are removed.
- Unscrew the hinge fixings.
- Remove the hinge and triangular spacer.
- Place the door on the ground.

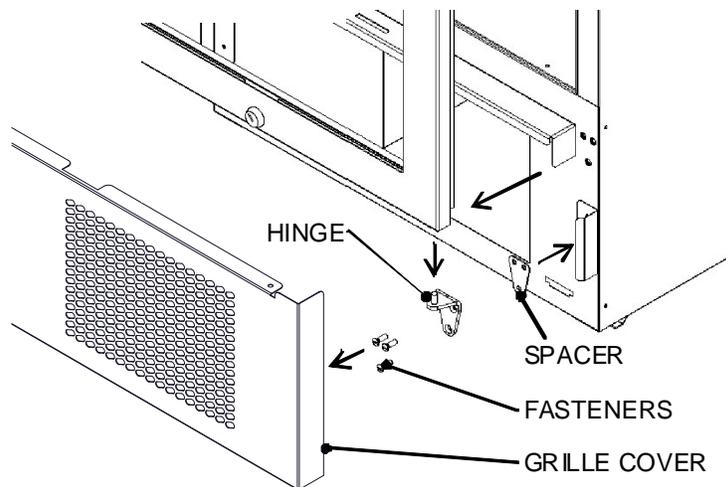

- Remove the Nylon bush which is located on the underside of the worktop and push it into the hole on the left hand side.

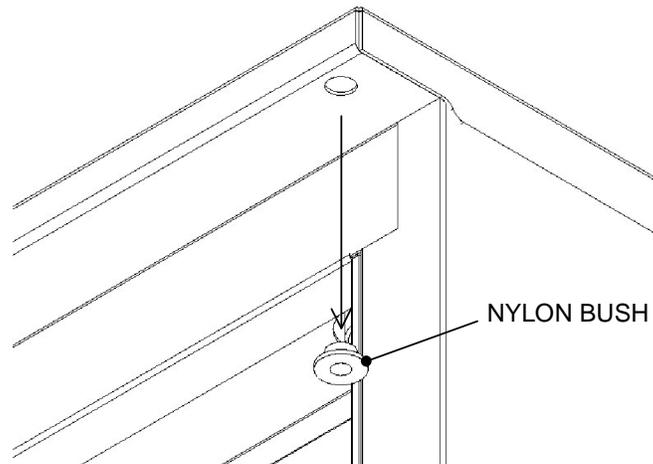

- Unscrew the fixings retaining the door handle and the hinge pin.
- Remove the door handle.
- Refit the door handle on the right hand side of the door and screw in the handle fasteners.
- Apply one drop of Loctite Studlock 270 to the hinge pin thread.
- Refit hinge pin on the left hand side of the door.
- Remove the Nylon bush which is located on the underside of the door and push it into the hole on the left hand side.

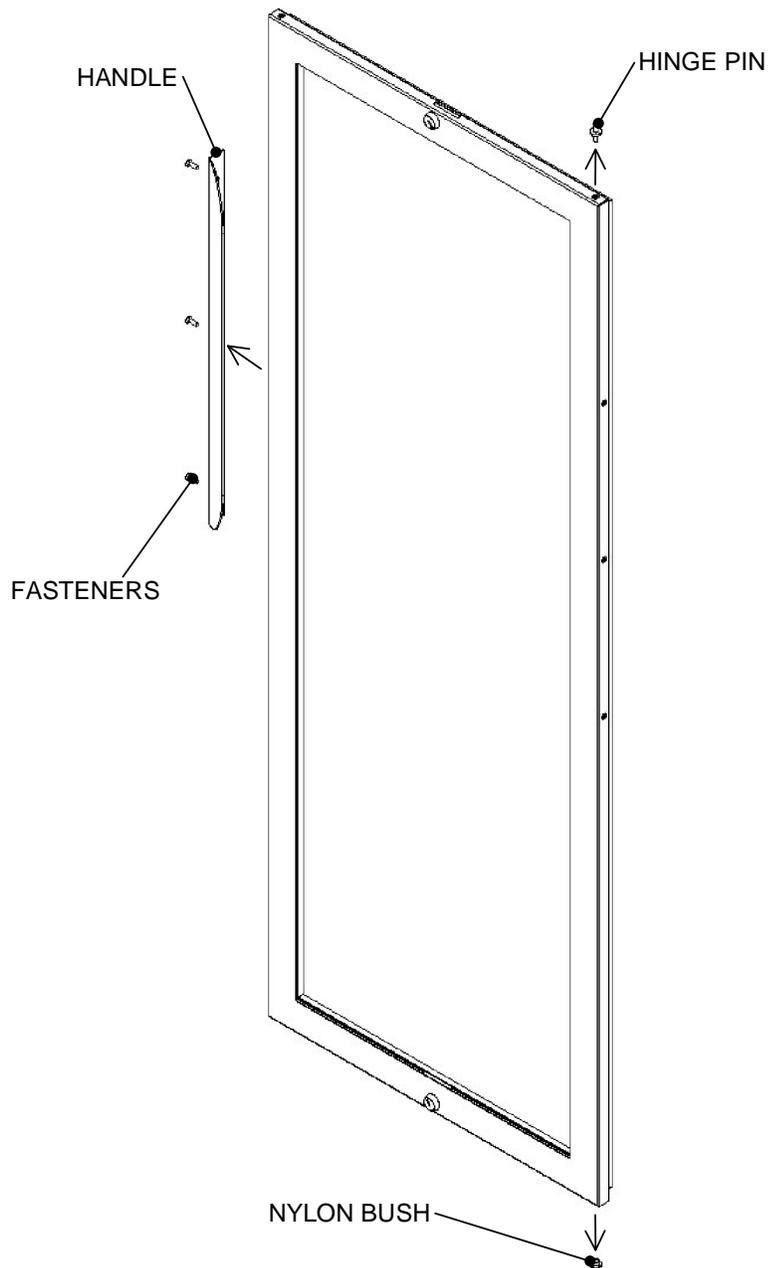

- Refit the door making sure the hinge pin is inserted into the nylon bush which is in the worktop.
- Refit the hinge and screw in the fasteners making sure the triangular spacer is clamped between the hinge and the cabinet.
- Refit the grille cover as described at the beginning of this section.

**M90 SLIDING DOOR REMOVAL & TROUBLE SHOOTING**




To remove the door lift the door upwards and swing the bottom out from the bottom roller guide





Un-hook the cable from the hook in the top of the door, the door can now be fully removed from the unit

**If the door is not opening and closing freely check the following**

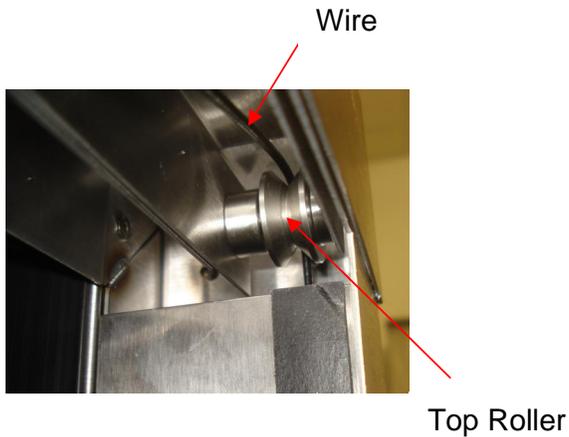

Ensure the top wire is positioned in the top roller correctly

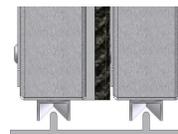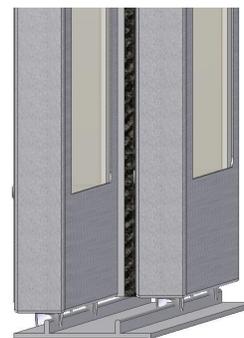

Ensure the bottom roller is positioned in the bottom guide rail correctly

## ELECTRICITY SUPPLY CONNECTION

Position the unit in the chosen site. The electricity supply connection should be made to a power outlet socket or isolator mounted on the wall close to the machine. This socket or isolator must be accessible once the machine is installed. Before connecting, check that the voltage shown on the rating is correct for the electricity supply you have available. If the plug does not fit your sockets or a longer lead is required, changes must be made by an approved electrician.

**NOTE: The plug is fitted with a 10amp fuse.**

The plug fuse cover must be refitted when changing the fuse. In the event of losing the fuse cover the plug must NOT be used until a replacement fuse cover has been obtained and fitted or the plug replaced.

**WARNING: This machine must be earthed**

Should the supply cord become damaged then a replacement must be fitted by an approved electrician. The IEE Codes of Practice must be observed.

The wires in the mains lead are coloured in accordance with the following code

|                  |         |
|------------------|---------|
| Green and yellow | Earth   |
| Blue             | Neutral |
| Brown            | Live    |

## COMMISSIONING

Before using a bottle cooler for the first time, the interior should be wiped out with a clean damp cloth.

Allow the machine to stand for 1 hour to allow the refrigerant to settle. Plug in and switch on at the wall socket. There is no separate switch to turn on the machine. The compressor will start running  $\approx$  15 seconds after the supply is switched on.





Check that the light is working. The light switch on the Mistral M60, M90, M90SD and M135 is located on the left hand side of the light fitting. The light switch on the Mistral TC60 is located inside the cabinet on the right hand end of the inner upper back panel.

Run the unit empty, and check that cold air is being circulated within the cabinet.

The Mistral range has an electronic temperature controller that is factory set to control at  $+4 \pm 2^{\circ}\text{C}$  and will cycle the air temperature between  $2^{\circ}\text{C}$  and  $6^{\circ}\text{C}$  at an ambient between  $+10$  and  $+32^{\circ}\text{C}$ .

The High Ambient version has an electronic temperature controller that is factory set to control at  $+5 \pm 2^{\circ}\text{C}$  and will cycle the air temperature between  $3^{\circ}\text{C}$  and  $7^{\circ}\text{C}$  at an ambient between  $+32$  and  $+43^{\circ}\text{C}$ .

The set point can be adjusted between 0°C and 10°C for standard units and 4°C and 18°C for High Ambient versions by following the button sequence below:

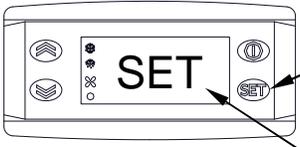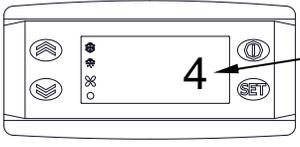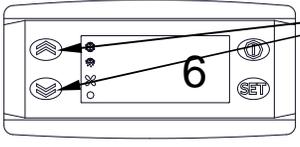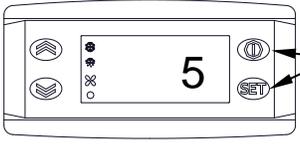- 1)  Press the SET button once  
%SET+ will appear
- 2)  Then press SET button again,  
current set point temperature  
is displayed
- 3)  Using the up and down buttons,  
scroll to the desired set point  
temperature (min 0°C, max 10°C)
- 4)  Press SET button to accept  
Then press stand-by button to esc.  
Display will revert back to current internal  
air temperature. If depressed for more  
than 5 seconds this button will also switch  
the unit off. Display will show %OFF+

Extra shelves are available from IMC.

## USING YOUR BOTTLE COOLER

This unit is for cooling bottles and cans only, do not load the cabinet with boxed goods as this prevents air circulation and the goods will not cool down as quickly. While loading ensure that the interior grilles are not obstructed by the bottles.

Do not place hot or warm goods in the cabinet. Only goods at room temperature or less should be placed in the unit otherwise performance will be affected. When stocking the unit it is recommended that this is done after closing at night or first thing in the morning to allow time for the bottles to cool. Ensure that stock is rotated by placing new stock at the back of shelves or in one side of the cabinet to ensure that colder bottles are served first.

Do not leave the doors open when the unit is running, as this causes the evaporator to ice up, preventing the unit from operating efficiently.

Ensure that the front grille is always unobstructed.

Units must not be used to store food.

## CLEANING

Clean doors and surfaces as required, occasionally remove all merchandise and clean interior surfaces, with a clean damp cloth.


### **DO NOT USE CLEANING MATERIALS CONTAINING ABRASIVES OR BLEACHES.**

In the case of heavy soiling use a mild liquid detergent. The unit can be washed on the inside using bicarbonate of soda to remove stale smells.

## CHANGING SHELF POSITION

The shelves in all Mistral units are fully adjustable. To adjust the shelves:

- Remove the shelf.
- Unclip the shelf supports as shown below.

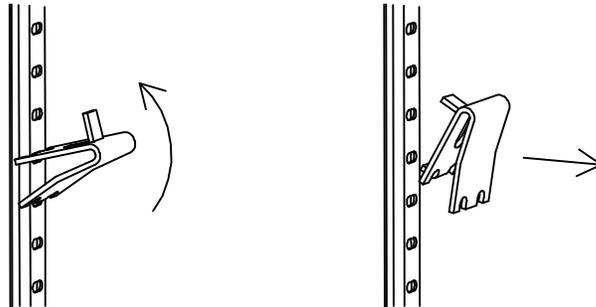


- Hook the shelf supports in the required location.
- Ensure all shelf supports are at the same height for a level shelf. The support strips are numbered to aid positioning.
- Replace the shelf.
- On the M135 also replace the shelf clip to the front at the joint of the shelves.

## CHANGING THE LIGHT BULB AND STARTER TC60

For the Mistral TC60 the cabinet interior is illuminated by a fluorescent tube located at the front of the right-hand inner side panel. The starter for the tube is located at the top of the light cover. The light switch for the tube is located at the top front corner of the right-hand inner side panel.


To change the starter:

- Open the front cabinet door(s).
- Ensure the light switch is in the off position.
- The starter can be seen protruding through the light cover.
- Rotate the starter anticlockwise and remove
- Fit a new starter and rotate clockwise to secure.

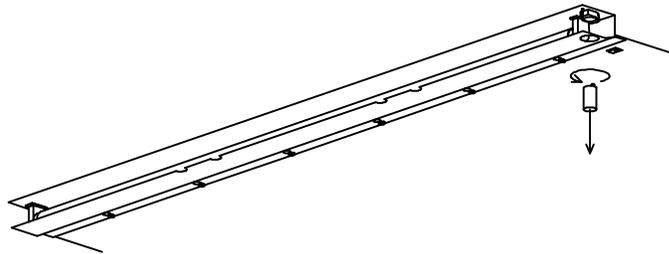

To change the tube:

- Remove the starter as described above.
- Pull out all the light cover clips and remove the light cover.
- Rotate the tube by 90° and gently pull it downwards.
- Place a new tube in the tube end caps and rotate by 90° to secure.
- Refit the light cover and push in the light cover clips.
- Replace the starter as described above.

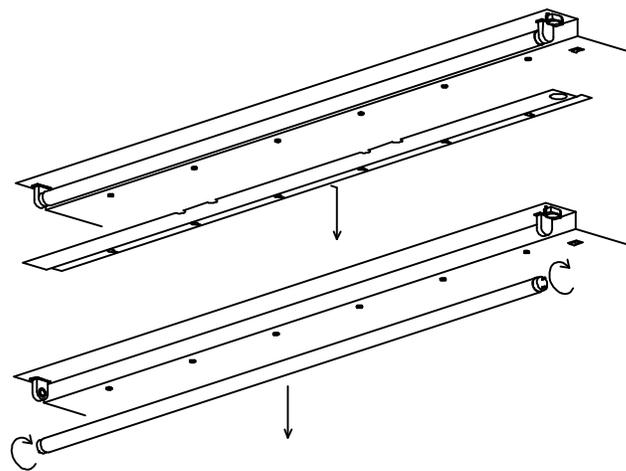


**CHANGING A FLUORESCENT STRIP LIGHT FITTING M60, M90, M90SD & M135**

The M60, M90, M90SD & M135 cabinet interior is illuminated by a fluorescent fitting located at the front of the top inner panel. The switch is located at the left-hand end of the strip light fitting.

To change the fitting:

- Open the front cabinet door(s)
- Ensure the mains power to the unit has been turned off
- Slide the fitting to the left
- Pull the fitting out from the key-hole slots
- Remove power cable from the right-hand end of the fitting
- Connect the new fitting to the power cable and insert into the key-hole slots
- Slide the fitting to the right until it stops
- Re-connect the mains power and ensure the light illuminates by means of the switch.

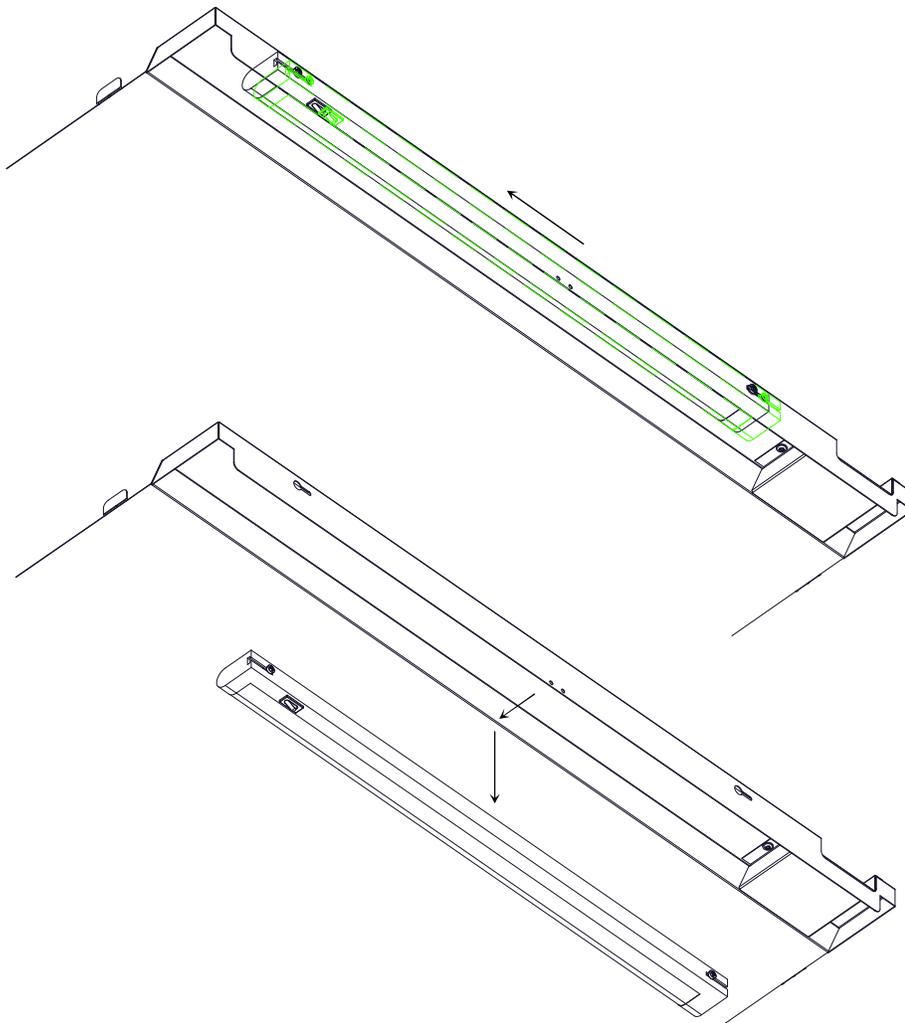

## MAINTENANCE



### Warning


Never service, repair or troubleshoot a unit unless you are a professional air conditioning / refrigeration service person. Improper servicing can lead to serious injury or death from fire, electric shock or explosion.

### TC60

Remove the front grille cover. Clean the compressor coil with a brush and vacuum cleaner every three months or when dirty (whichever is sooner). Replace the grille cover.

### M60, M90, M90SD and M135

Every three months switch off the unit and remove the contents to gain access to refrigeration service panel. Remove the service panel and insulation. Clean the condenser coil and compressor with a brush and vacuum cleaner. Refit the insulation and service panel. Restock the unit and switch on.

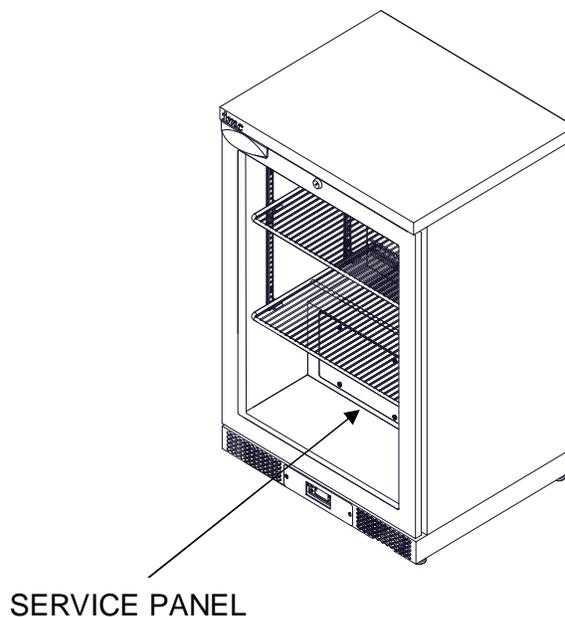

Other than regular cleaning the unit requires no maintenance by the end user. It is recommended that the unit is serviced by an IMC approved engineer at least once a year.

Details of IMC Service Contracts are available on application.

**DO'S AND DON'TS**

- Do** Install on a level surface.
- Do** Ensure plug is accessible with the unit installed.
- Do** Regularly clean the condenser and compressor.
- Do** Rotate stock of bottles.
- Don't** Sit or stand on the unit worktop.
- Don't** Load with boxed goods.
- Don't** Leave the doors open.
- Don't** Cover the shelves with any protective materials which may obstruct air circulation through them
- Don't** Install unit in direct sunlight.
- Don't** Block the air inlet grilles.
- Don't** Store food in the unit.
- Don't** Place hot or warm goods in the unit.
- Don't** Use the unit outside.

## **ORDERING SPARE PARTS**

In the event that spare parts or accessories need to be ordered, please always quote the **SERIES AND SERIAL NUMBER** of the machine. This is to be found on the rating plate located near the supply cable.

For installations outside the UK please contact your supplier.

For information on IMC spares and service support (if applicable), please call IMC on +44 (0)1978 661155. Alternatively, contact us via email:

IMC Service Desk

E-mail: [service@imco.co.uk](mailto:service@imco.co.uk)

IMC Spares Desk

E-mail: [spares@imco.co.uk](mailto:spares@imco.co.uk)

## **END OF LIFE DISPOSAL**

At the end of its useful life the unit must be disposed of correctly and safely, to meet the requirements of EU legislation regarding the recovery of ozone depleting substances. The unit must be sent to specialist recovery, recycling and disposal site that is licensed for the disposal of refrigerated equipment. Please note that the insulation in the Mistral range does not contain any ozone depleting substances. The refrigerant used in the Mistral range is R134a.


IMC can arrange removal of your redundant bottle coolers, transfer to safe storage and disposal. For more information contact IMC service department.

## **MATERIAL CONTENT**


The Mistral units contain the following materials;

|                   |   |
|-------------------|---|
| Metals            | Stainless Steel, Mild steel (inc. Nickel Plated, Chrome Plated & Zinc plated), Aluminium and copper |
| Plastics & Rubber | PVC, Nylon, Polypropylene, Polycarbonate, Polyester, Acetate, Neoprene rubber and silicone rubber   |
| Insulation        | Polystyrene, Polyurethane foam  |
| Oils & Gases      | Ester oil, Refrigerant R134a  |
| Other             | Glass, Magnesium oxide, electronic components.  |


M60 WIRING DIAGRAM

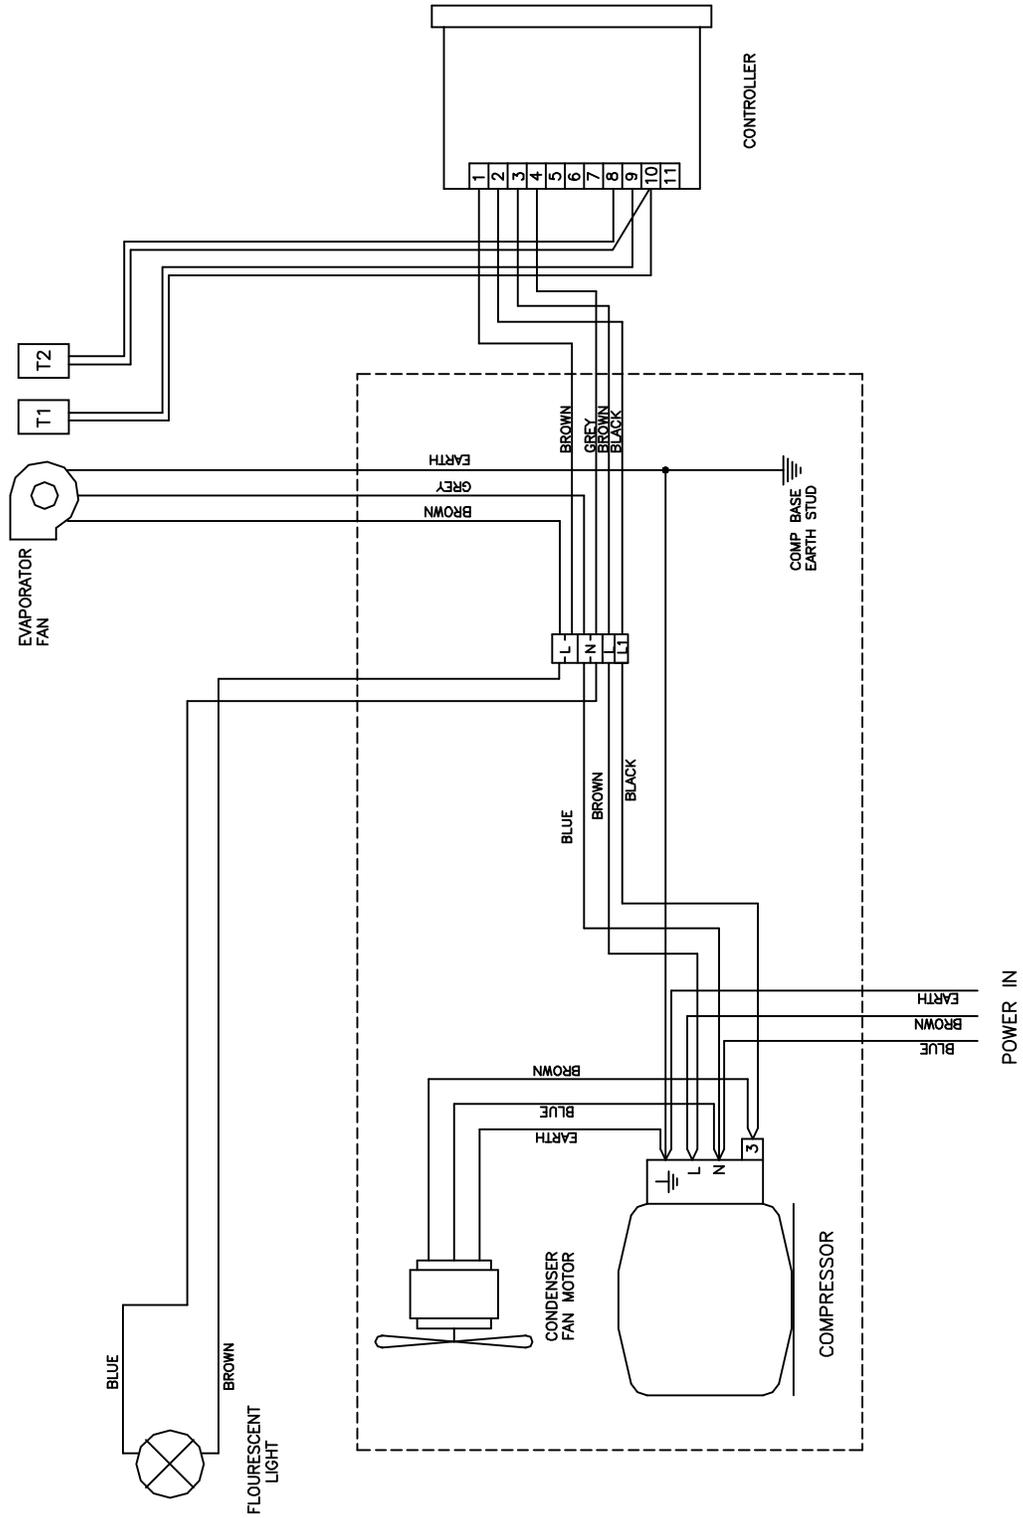


M90 & M90SD WIRING DIAGRAM

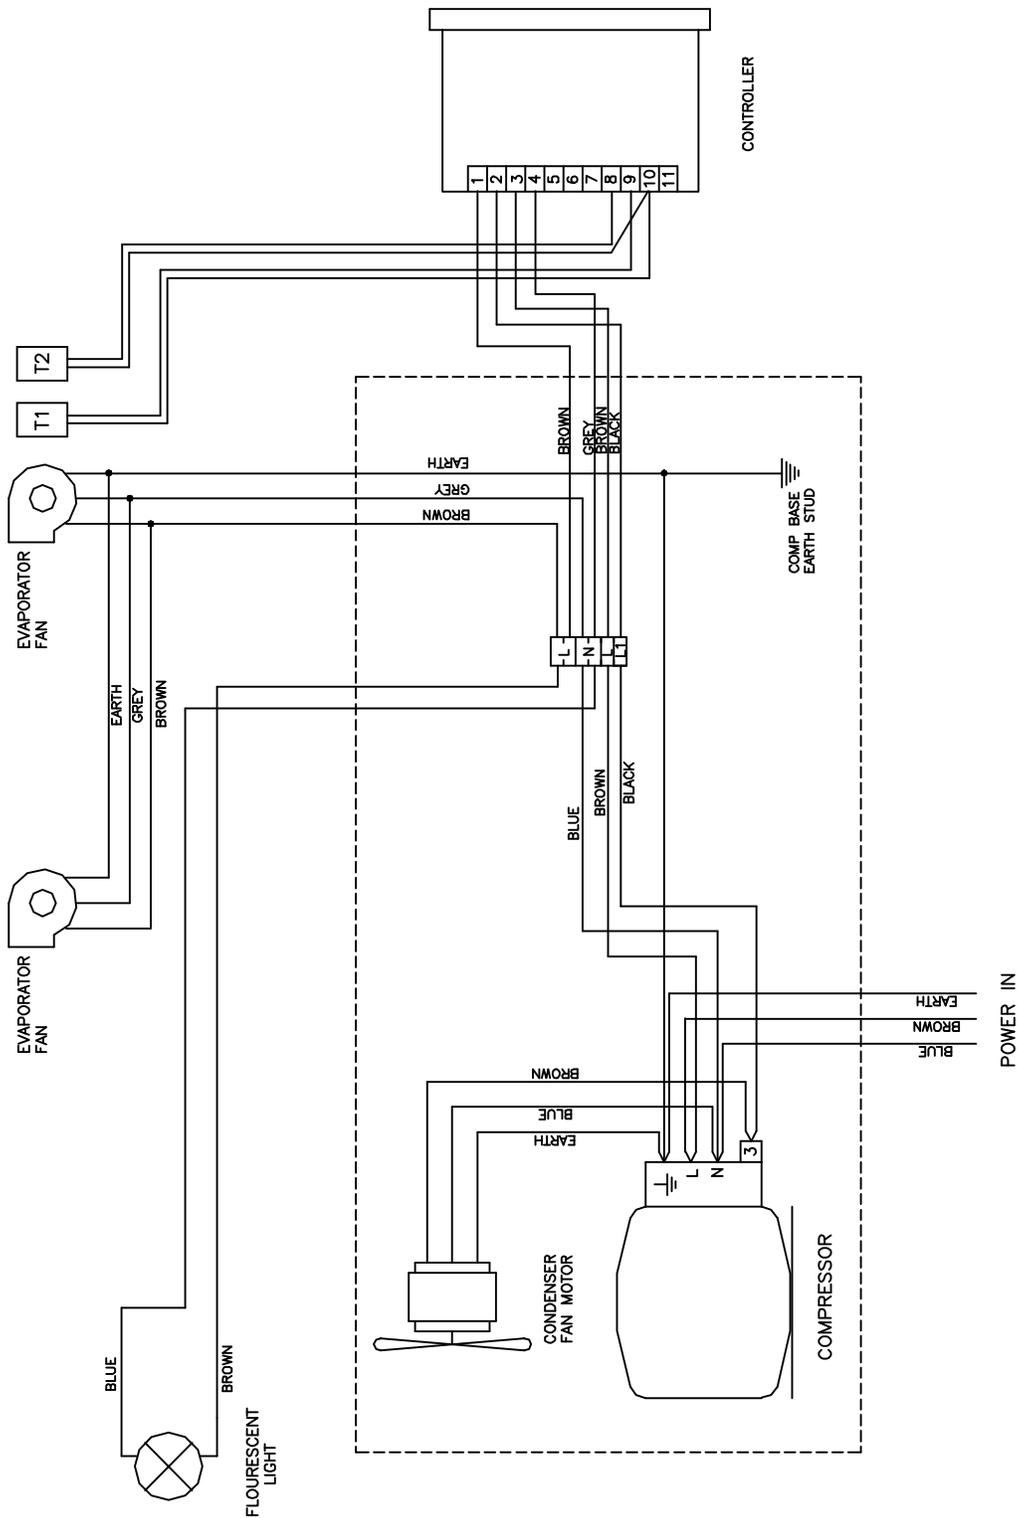


M60 HIGH AMBIENT WIRING DIAGRAM

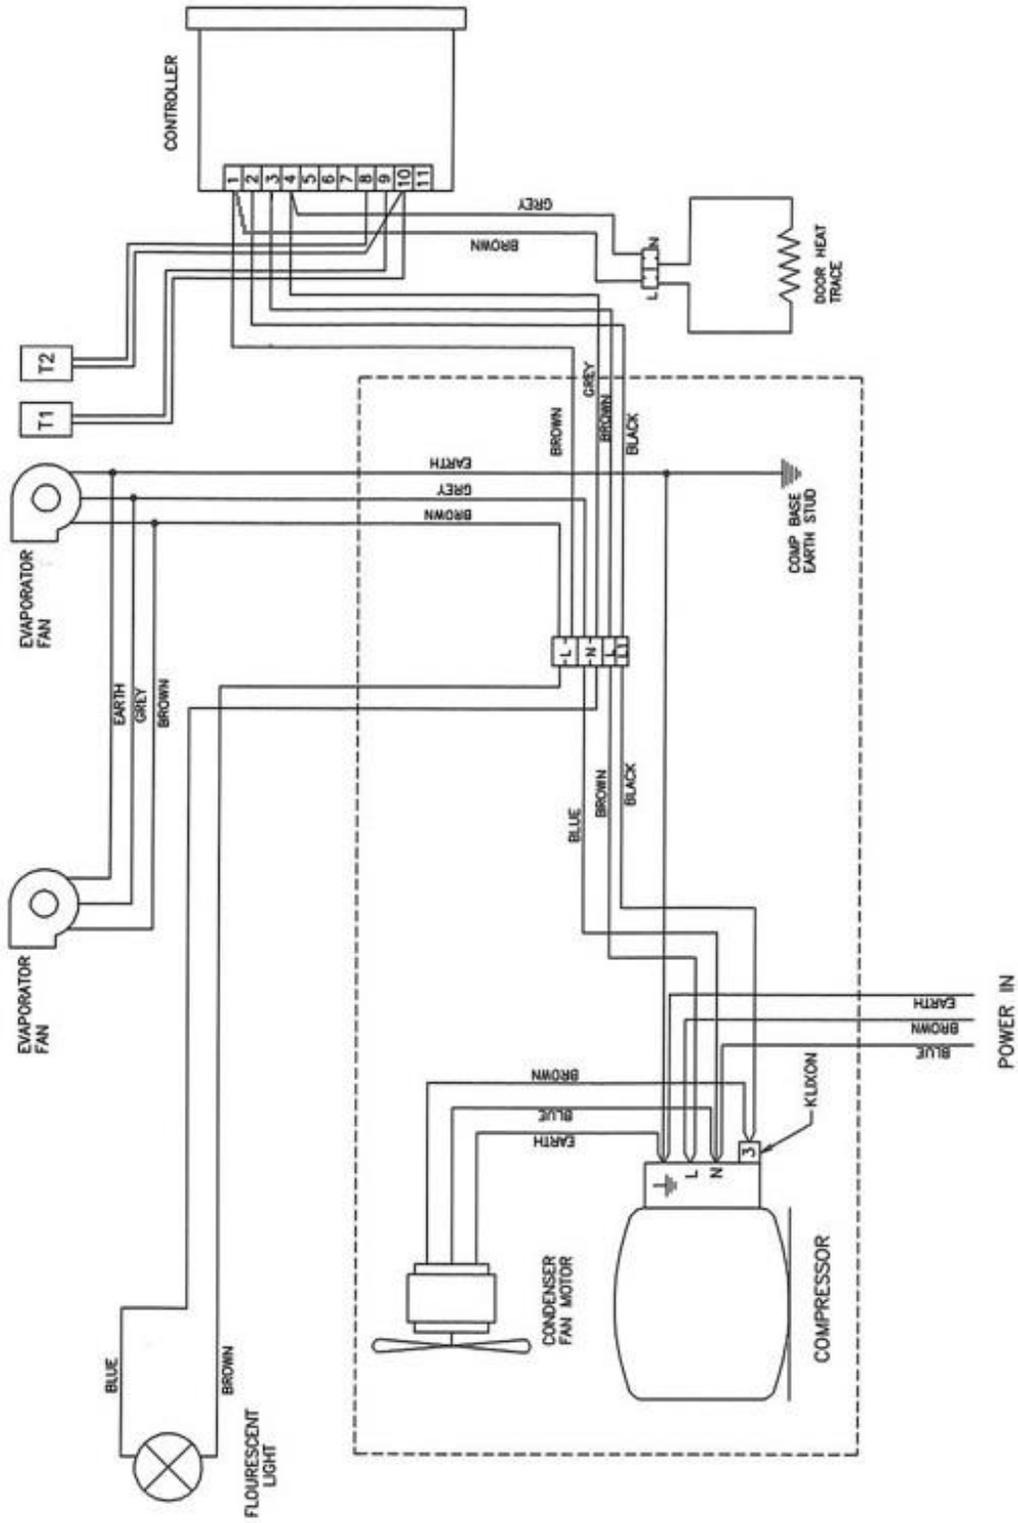


M90 HIGH AMBIENT WIRING DIAGRAM

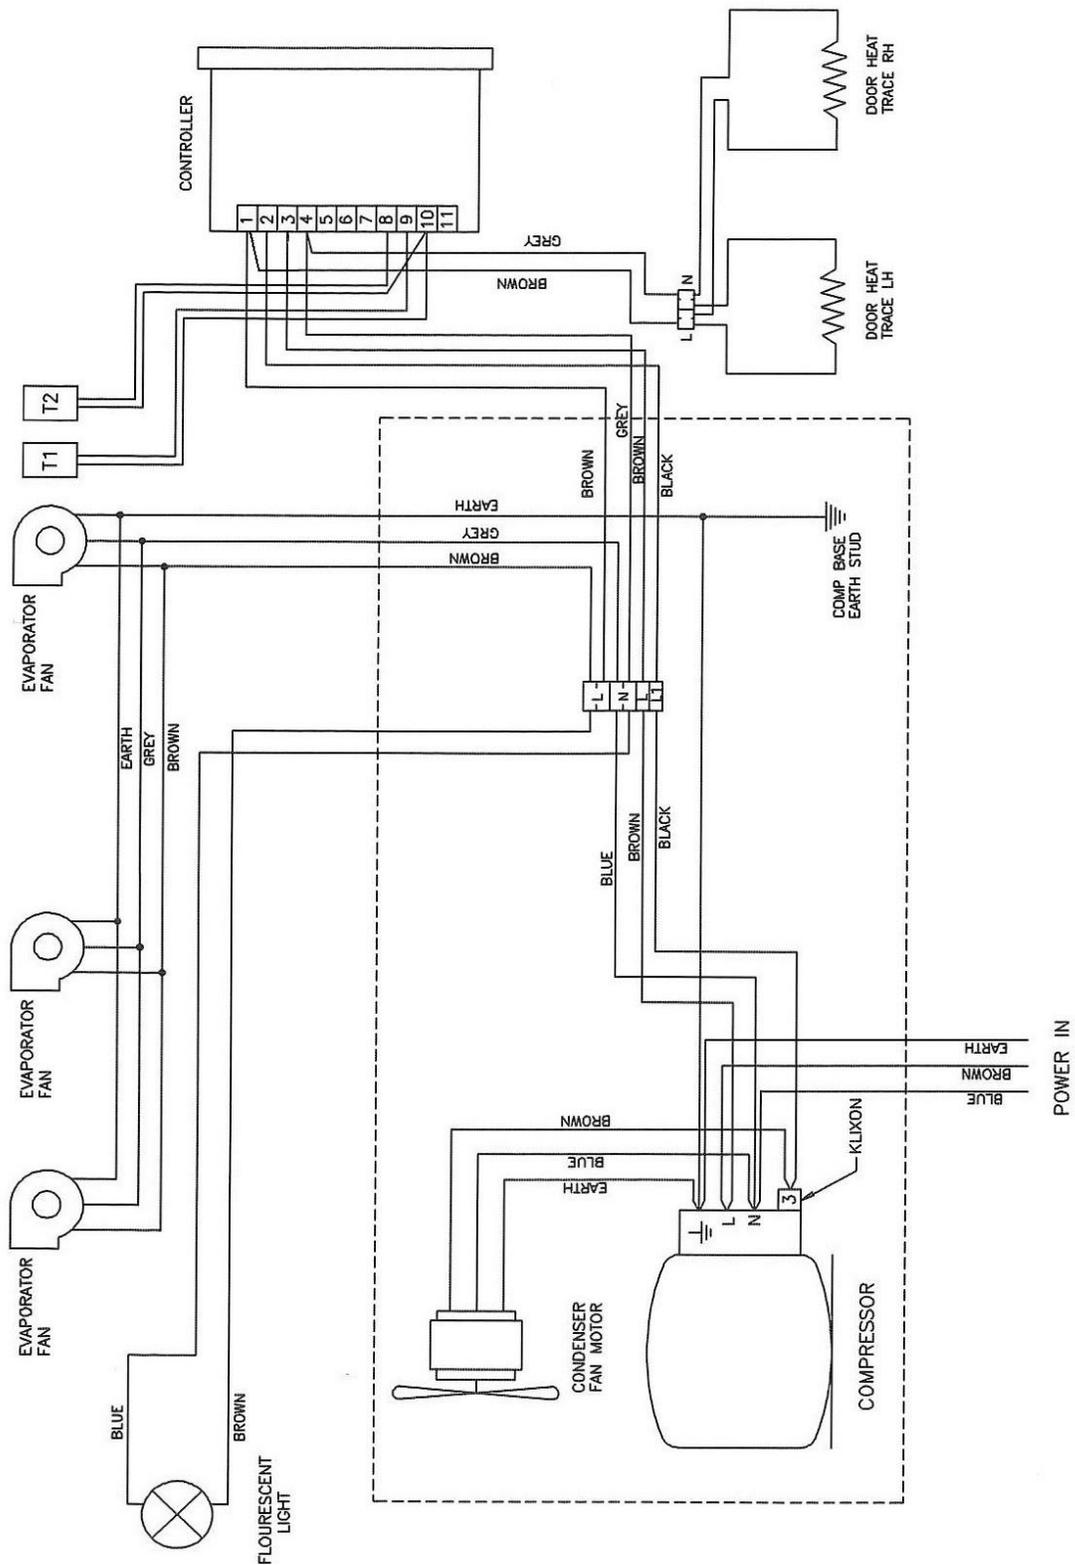


M135 WIRING DIAGRAM

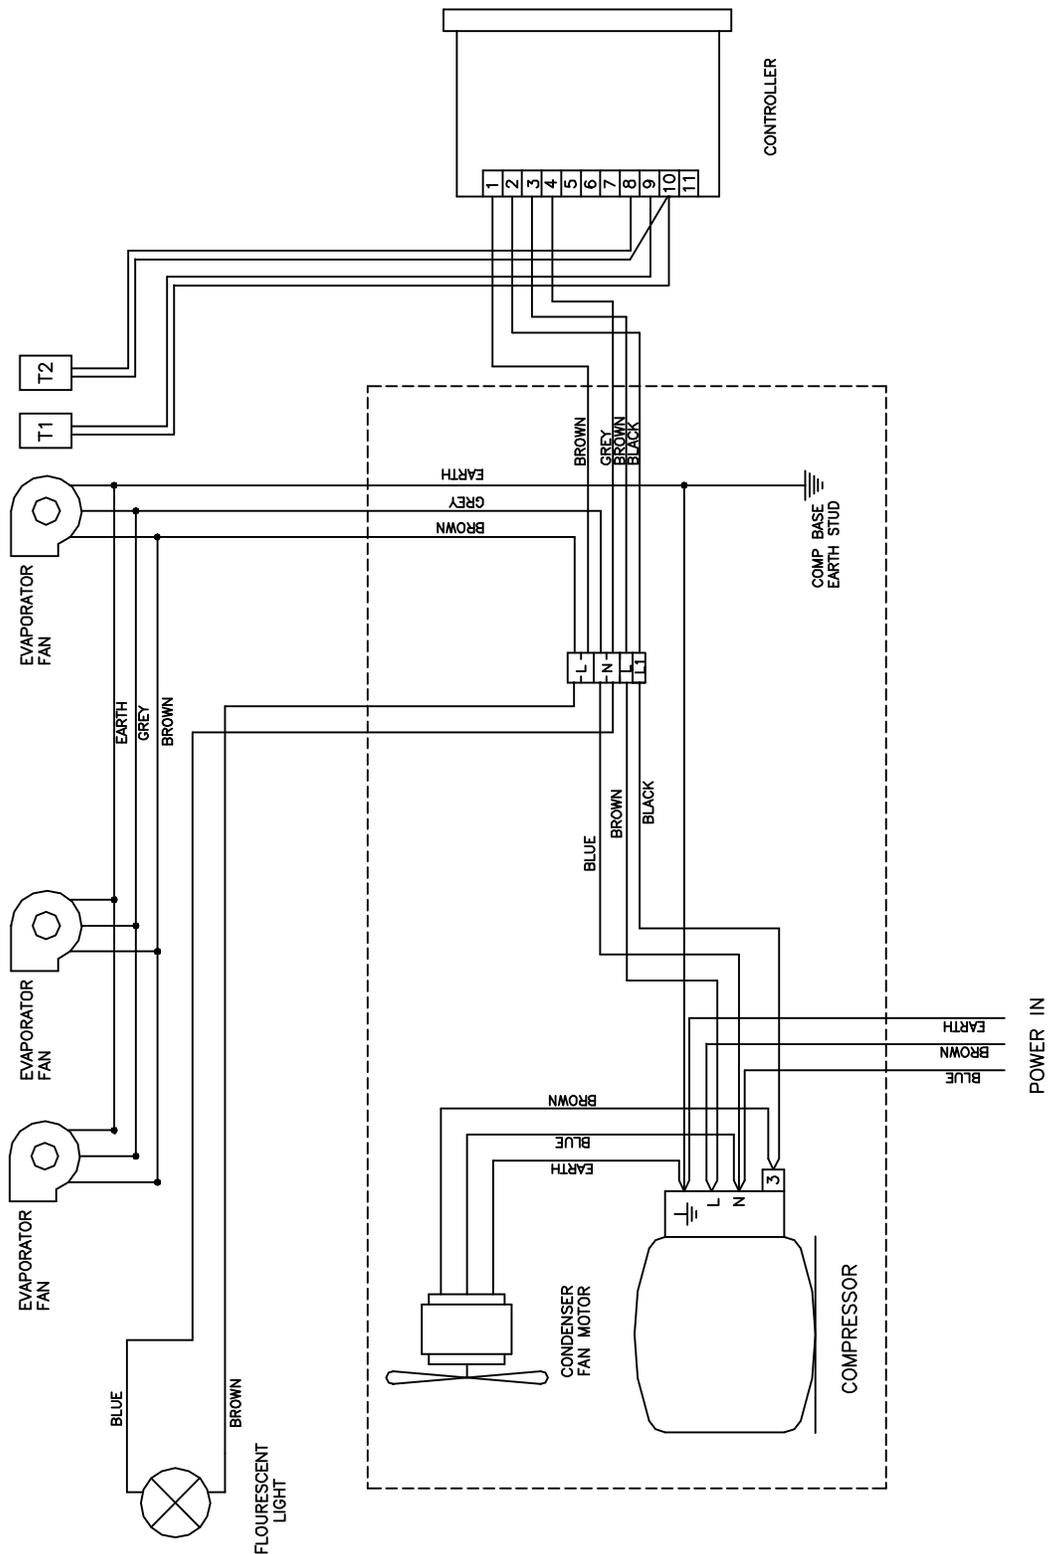


TC60 WIRING DIAGRAM

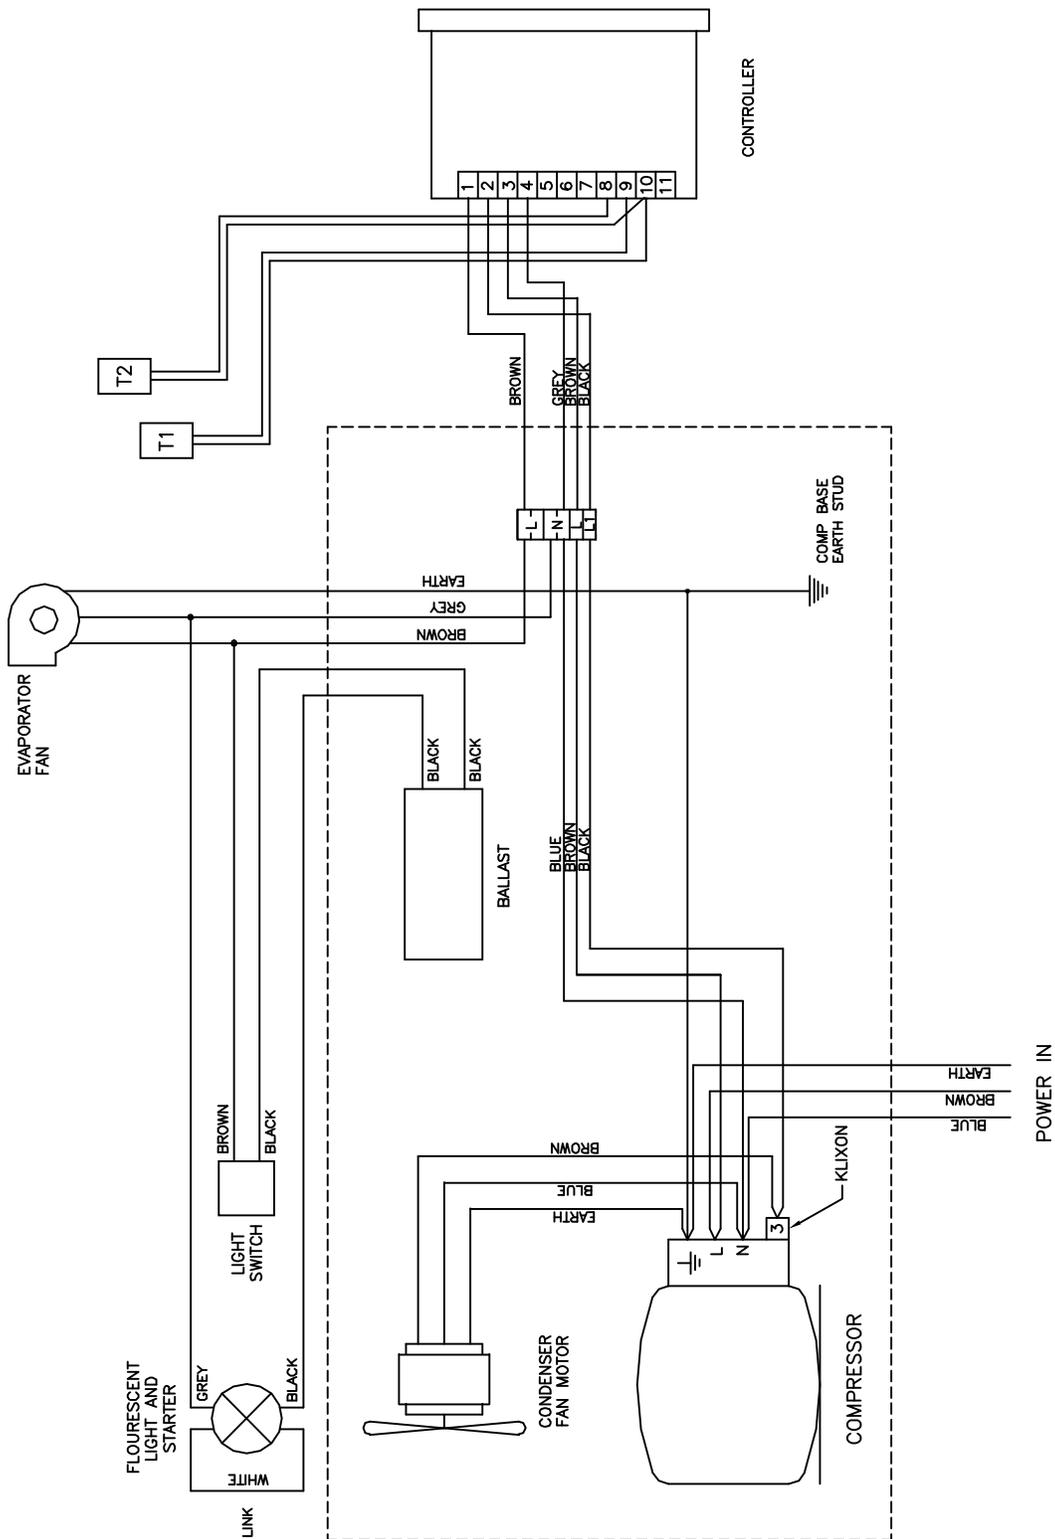


REAR VIEW SPARES GUIDE

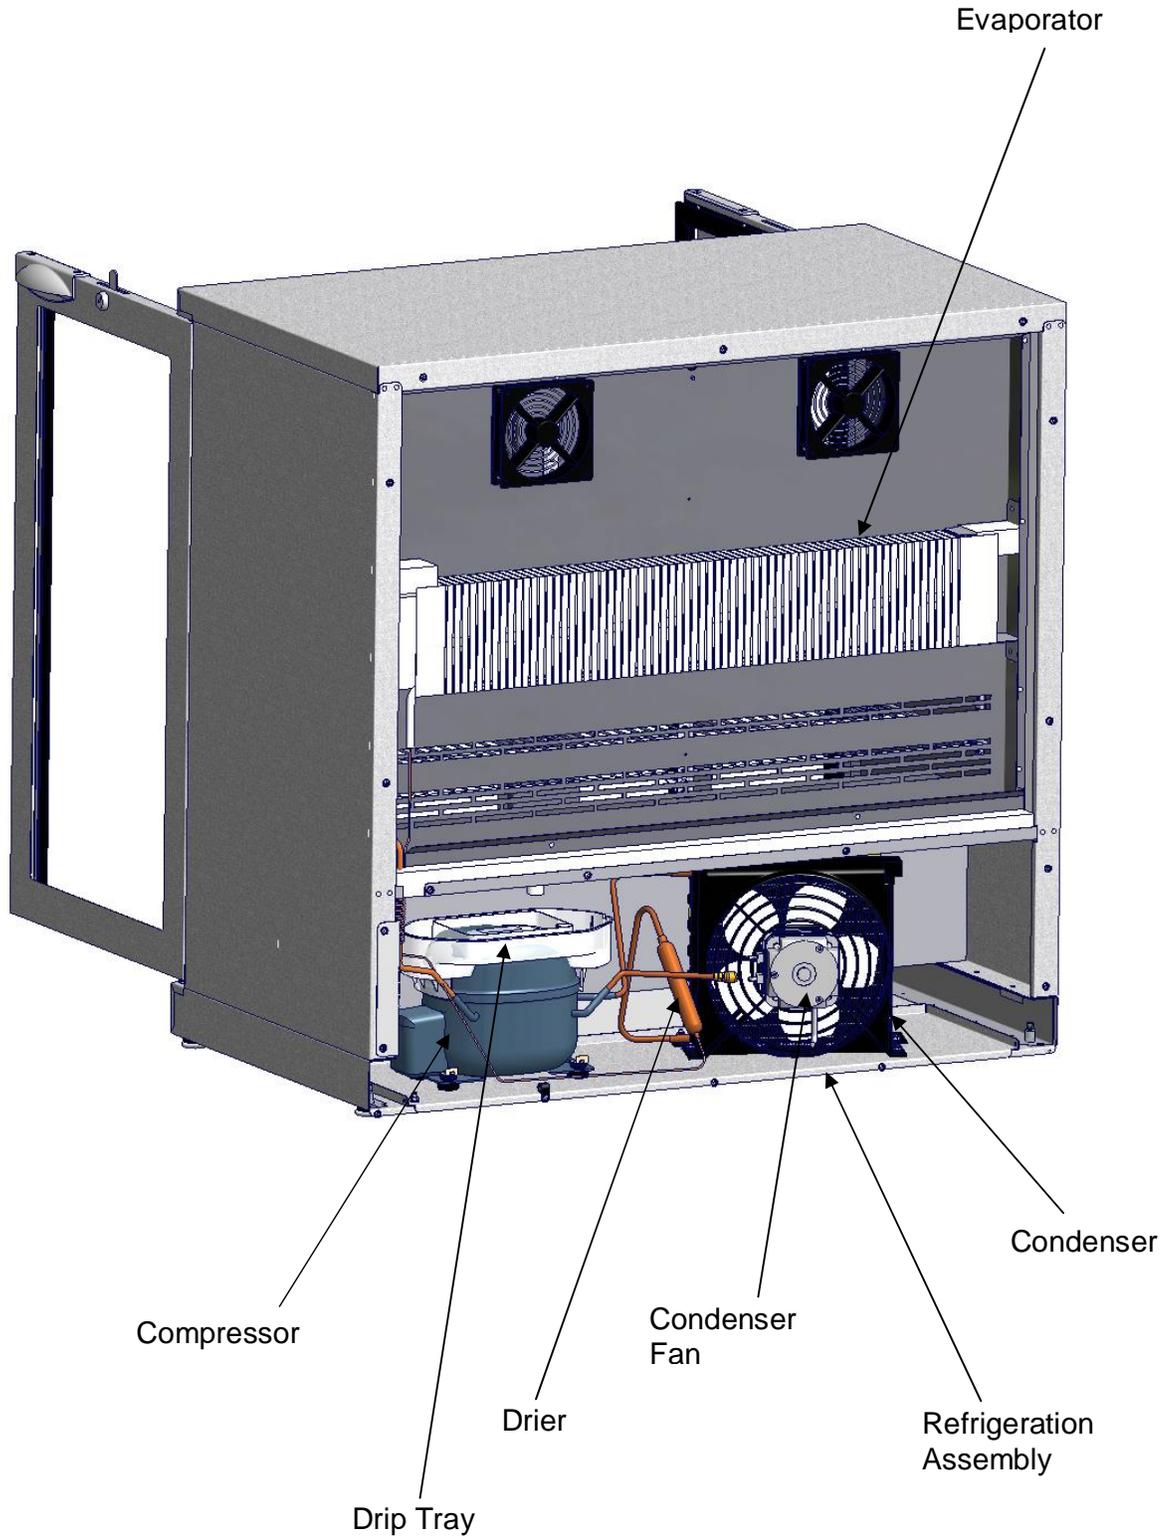

FRONT VIEW SPARES GUIDE

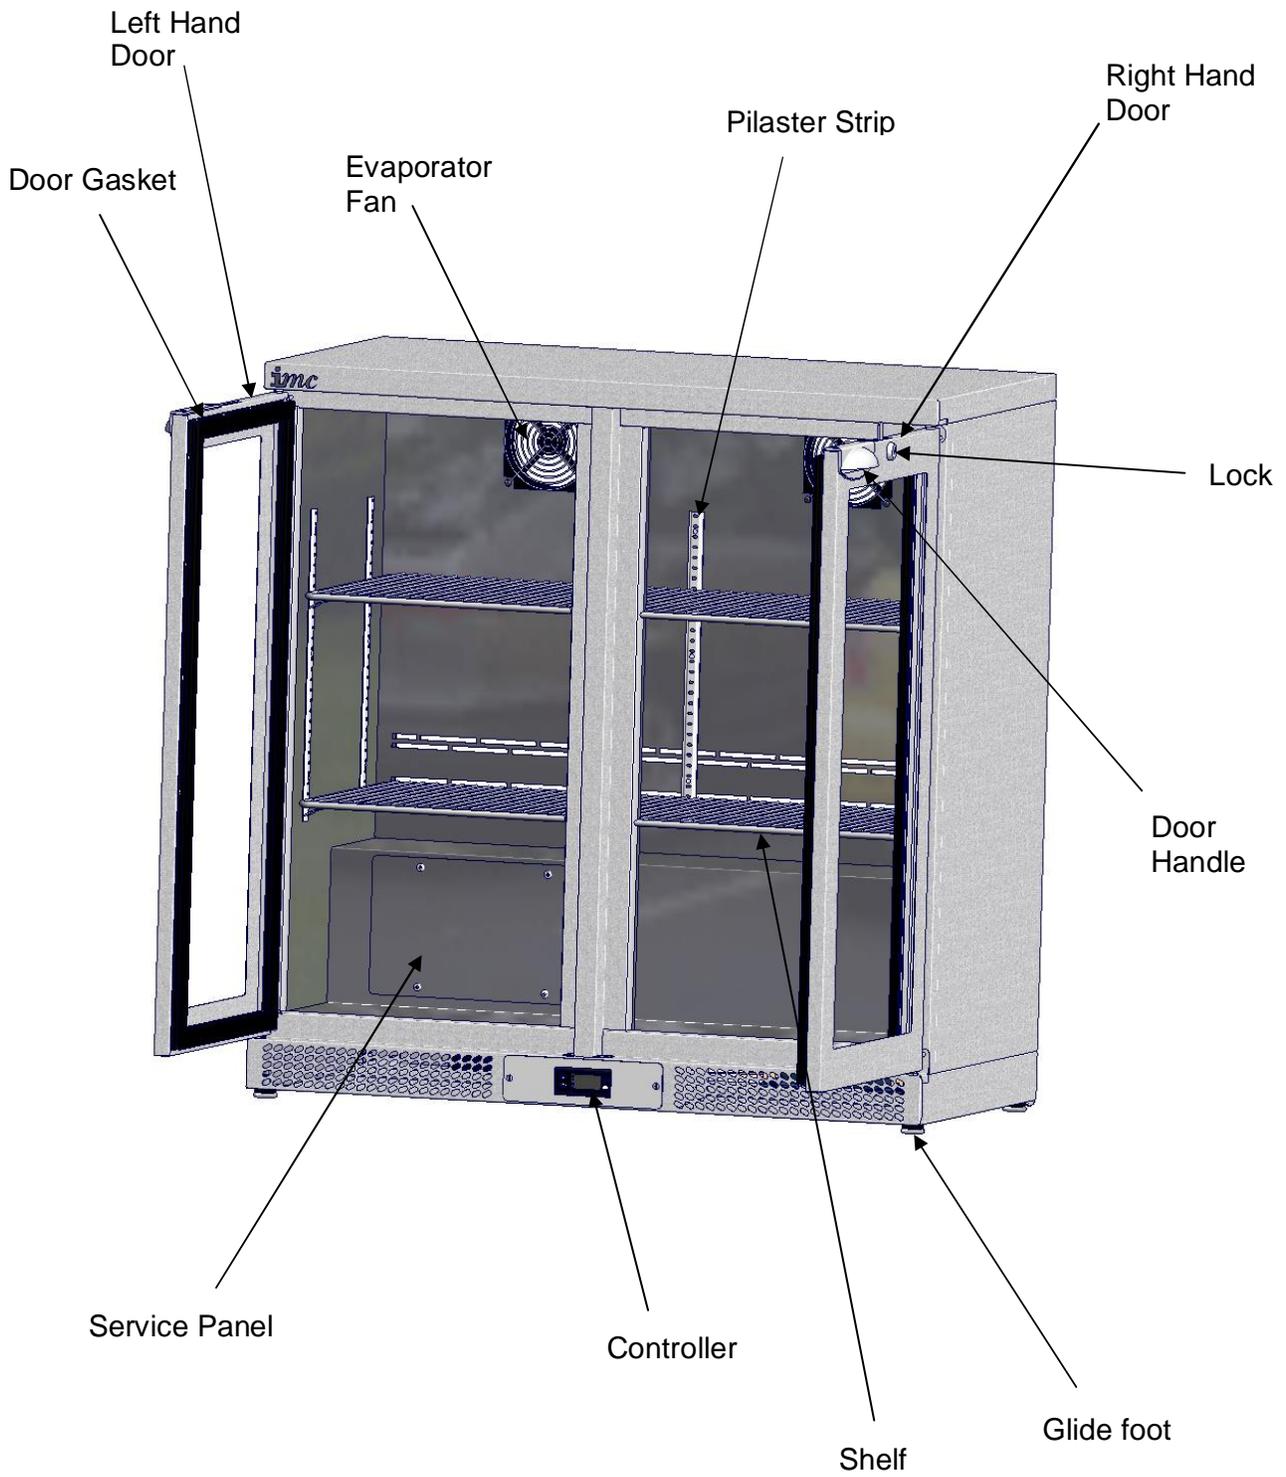

FRONT VIEW SPARES GUIDE M90 SLIDING DOOR

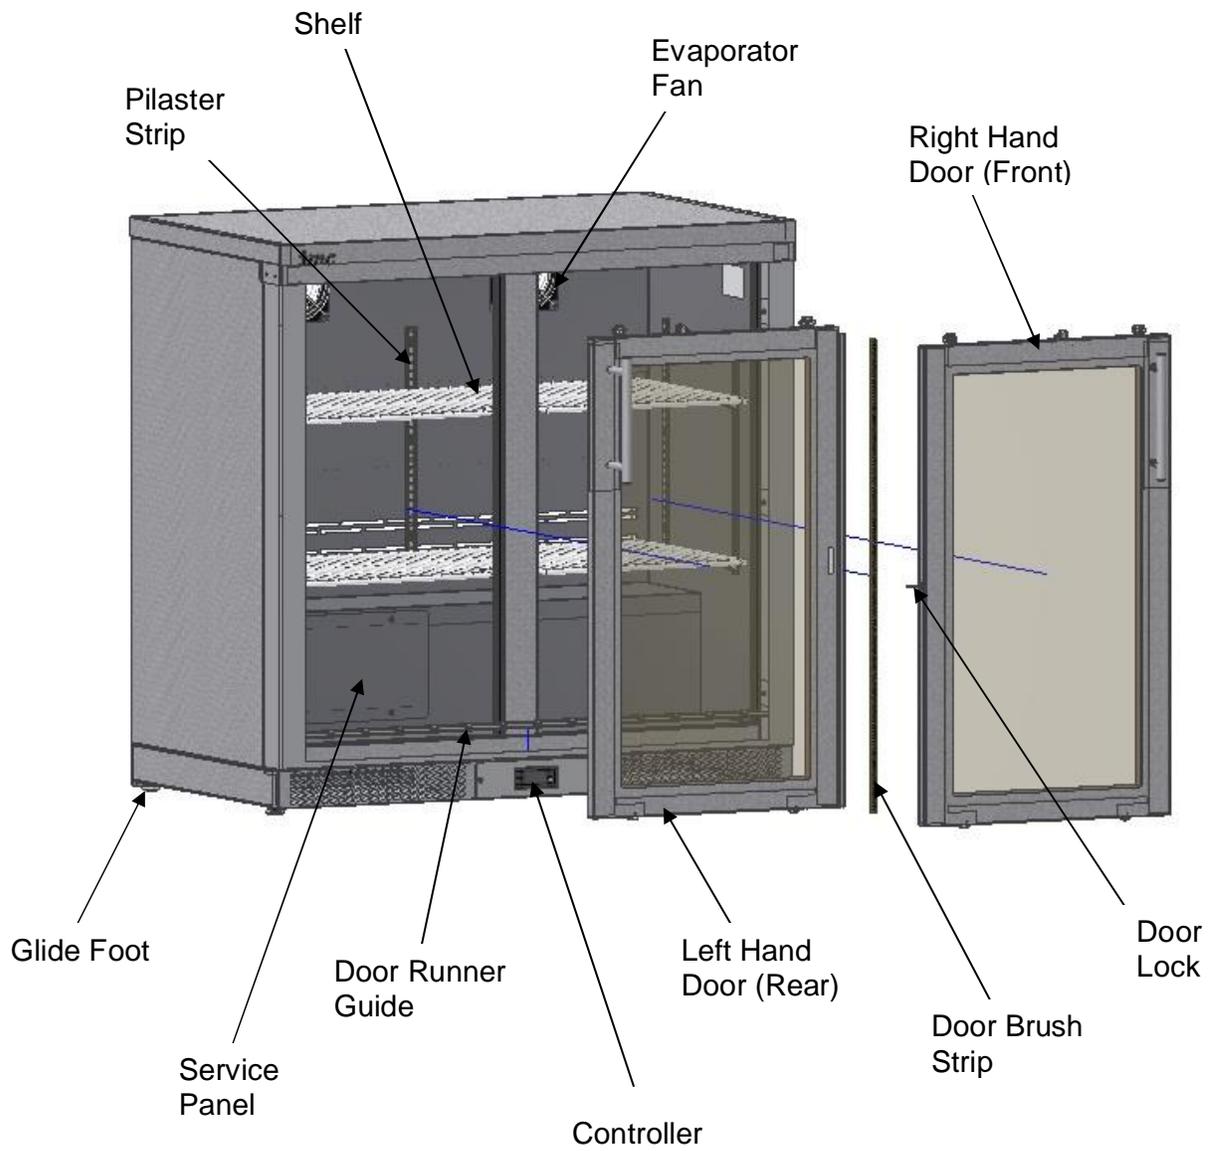

## SPARE PARTS LIST

| <b>Mistral M60 – Series 11</b> |                              | <b>Mistral M90 – Series 11</b> |                              |
|--------------------------------|------------------------------|--------------------------------|------------------------------|
| <b>Part No</b>                 | <b>Description</b>           | <b>Part No</b>                 | <b>Description</b>           |
| A11/276                        | Door Gasket                  | A11/275                        | Door Gasket                  |
| A12/073                        | Pilaster Strip               | A12/073                        | Pilaster Strip               |
| A12/091 Z1                     | Shelf                        | A12/092 Z1                     | Shelf                        |
| A12/100                        | Wine Shelf                   | A12/101                        | Wine Shelf                   |
| A12/036                        | Shelf Clip (4 per shelf)     | A12/036                        | Shelf Clip (6 per shelf)     |
| A19/027                        | Glider Foot                  | A19/027                        | Glider Foot                  |
| A21/011                        | Lock, clip & keys            | A21/011                        | Lock, clip & keys            |
| E76/221                        | Access panel                 | E76/221                        | Access panel                 |
| G30/420                        | Electronic Controller        | G30/420                        | Electronic Controller        |
| G30/450                        | Electronic Controller 115V   | G30/450                        | Electronic Controller 115V   |
| G42/020                        | Plastic Drip Tray            | G42/020                        | Plastic Drip Tray            |
| G60/348 M1                     | Mains Cable                  | G60/348 M1                     | Mains Cable                  |
| G60/349                        | Mains cable EU plug          | G60/349                        | Mains cable EU plug          |
| S77/007                        | Refrigeration Pack           | S77/003                        | Refrigeration Pack           |
| S77/007-220                    | Refrigeration Pack 220V-60Hz | S77/003-220                    | Refrigeration Pack 220V-60Hz |
| S77/007-115                    | Refrigeration Pack 115V-60Hz | S77/003-115                    | Refrigeration Pack 115V-60Hz |
| J09/054                        | Condenser/fan motor assembly | J09/046                        | Condenser/fan motor assembly |
| J09/026                        | Evaporator                   | G40/239                        | Condenser fan . motor only   |
| J09/007                        | Service Drier                | J09/045                        | Evaporator                   |
| X08/057 (2mtr)                 | Capillary M60                | J09/007                        | Service Drier                |
| G96/049                        | Evaporator Fan               | X08/057 (3mtr)                 | Capillary M90                |
| G96/052                        | Evaporator Fan 115V          | G96/049                        | Evaporator Fan               |
| G50/070                        | Fluorescent Light 8W T5      | G96/052                        | Evaporator Fan 115V          |
| S77/014                        | Door Assembly LH M60         | G50/071                        | Fluorescent Light 14W T5     |
| S77/015                        | Door Assembly RH M60         | S77/016                        | Door Assembly LH M90         |
|                                |                              | S77/017                        | Door Assembly RH M90         |

## SPARE PARTS LIST CONT..

## HIGH AMBIENT VERSIONS – M60HA &amp; M90HA

| Mistral M60HA – Series 1 |                                    | Mistral M90HA – Series 1 |                                    |
|--------------------------|------------------------------------|--------------------------|------------------------------------|
| Part No                  | Description                        | Part No                  | Description                        |
| A11/276                  | Door Gasket                        | A11/275                  | Door Gasket                        |
| A12/073                  | Pilaster Strip                     | A12/073                  | Pilaster Strip                     |
| A12/091 Z1               | Shelf                              | A12/092 Z1               | Shelf                              |
| A12/100                  | Wine Shelf                         | A12/101                  | Wine Shelf                         |
| A12/036                  | Shelf Clip (4 per shelf)           | A12/036                  | Shelf Clip (6 per shelf)           |
| A19/027                  | Glider Foot                        | A19/027                  | Glider Foot                        |
| A21/011                  | Lock, clip & keys                  | A21/011                  | Lock, clip & keys                  |
| E77/270                  | Access panel                       | E77/270                  | Access panel                       |
| G30/420                  | Electronic Controller              | G30/420                  | Electronic Controller              |
| G42/045                  | Plastic Drip Tray                  | G42/045                  | Plastic Drip Tray                  |
| G60/348 M1               | Mains Cable                        | G60/348 M1               | Mains Cable                        |
| G60/349                  | Mains cable EU plug                | G60/349                  | Mains cable EU plug                |
| S77/037                  | Refrigeration Pack HA              | S77/047                  | Refrigeration Pack HA              |
| J09/049                  | Condenser/fan motor assembly       | J09/046                  | Condenser/fan motor assembly       |
| J09/026                  | Evaporator                         | G40/239                  | Condenser fan . motor only         |
| J09/007                  | Service Drier                      | J09/045                  | Evaporator                         |
| X08/057 (2mtr)           | Capillary M60                      | J09/007                  | Service Drier                      |
| G96/049                  | Evaporator Fan                     | X08/057 (3mtr)           | Capillary M90                      |
| G96/052                  | Evaporator Fan 115V                | G96/049                  | Evaporator Fan                     |
| G50/070                  | Fluorescent Light 8W T5            | G96/052                  | Evaporator Fan 115V                |
| S77/049                  | Door Assy LH M60HA with heat trace | G50/071                  | Fluorescent Light 14W T5           |
| S77/036                  | Door Assy RH M60HA with heat trace | S77/044                  | Door Assy LH M90HA with heat trace |
|                          |                                    | S77/043                  | Door Assy RH M90HA with heat trace |

## SPARE PARTS LIST CONT..

| Mistral M135 – Series 11 |                              | Mistral M90SD – Series 11 |                                 |
|--------------------------|------------------------------|---------------------------|---------------------------------|
| Part No                  | Description                  | Part No                   | Description                     |
| A11/275                  | Door Gasket                  | A12/174                   | Brush Strip                     |
| A12/073                  | Pilaster Strip               | A12/073                   | Pilaster Strip                  |
| A12/099                  | Shelf                        | A12/092 Z1                | Shelf                           |
| A12/102                  | Wine Shelf                   | A12/101                   | Wine Shelf                      |
| A12/036                  | Shelf Clip (4 per shelf)     | A12/036                   | Shelf Clip (6 per shelf)        |
| A19/027                  | Glider Foot                  | A19/027                   | Glider Foot                     |
| A21/011                  | Lock, clip & keys            | A21/042                   | Lock, clip & keys               |
| E76/221                  | Access panel                 |                           |                                 |
| G30/420                  | Electronic Controller        | G30/420                   | Electronic Controller           |
| G30/450                  | Electronic Controller 115V   | G30/450                   | Electronic Controller 115V      |
| G42/020                  | Plastic Drip Tray            | G42/020                   | Plastic Drip Tray               |
| G60/348 M1               | Mains Cable                  | G60/348 M1                | Mains Cable                     |
| G60/349                  | Mains cable EU plug          | G60/349                   | Mains cable EU plug             |
| S77/021                  | Refrigeration Pack           | S77/003                   | Refrigeration Pack              |
| S77/021-220              | Refrigeration Pack 220V-60Hz | S77/003-220               | Refrigeration Pack 110V-60Hz    |
| S77/021-115              | Refrigeration Pack 115V-60Hz | S77/003-115               | Refrigeration Pack 115V-60Hz    |
| J09/054                  | Condenser/fan motor assembly | J09/046                   | Condenser/fan motor assembly    |
|                          |                              | G40/239                   | Condenser fan . motor only      |
| J09/026                  | Evaporator                   | J09/045                   | Evaporator                      |
| J09/007                  | Service Drier                | J09/007                   | Service Drier                   |
| X08/057 (1.4mtr)         | Capillary M135               | X08/057 (3mtr)            | Capillary M90SD                 |
| G96/049                  | Evaporator Fan               | G42/041                   | Compressor (240V 50Hz)          |
| G96/052                  | Evaporator Fan 115V          | G96/049                   | Evaporator Fan                  |
|                          |                              | G96/052                   | Evaporator Fan 115V             |
| G50/072                  | Fluorescent Light 21W T5     | G50/071                   | Fluorescent Light 14W T5        |
| S77/026                  | Door Assembly RH M135        | S77/209                   | Door Assembly LH M90SD          |
| S77/025                  | Door Assembly LH M135        | S77/208                   | Door Assembly RH M90SD          |
|                          |                              | L77/012                   | Door Runner Guide               |
|                          |                              | A29/010                   | Wire for Weights (self closing) |

## SPARE PARTS LIST CONT..

| <b>Mistral TC60 – Series 11</b> |                            |
|---------------------------------|----------------------------|
| <b>Part No</b>                  | <b>Description</b>         |
| A11/264                         | Door Gasket                |
| A12/055                         | Pilaster Strip             |
| A12/041 Z1                      | Shelf                      |
| A12/082                         | Wine Shelf                 |
| A12/036                         | Shelf Clip (4 per shelf)   |
| A21/011                         | Lock, clip & keys          |
| G30/420                         | Electronic Controller      |
| G30/450                         | Electronic Controller 115V |
| G60/348 M1                      | Mains Cable                |
| G60/349                         | Mains cable EU plug        |
| S67/052                         | Refrigeration Pack         |
| S67/145                         | Door assembly              |
| E67/154                         | Door handle                |
| J09/025                         | Condenser                  |
| G96/017                         | Condenser Fan Blade        |
| G96/040                         | Condenser Fan Motor        |
| J09/027                         | Evaporator                 |
| J09/007                         | Service Drier              |
| X08/057 (1.6mtr)                | Capillary TC60             |
| G42/003                         | Compressor                 |
| G96/020                         | Evaporator Fan             |
| G50/037                         | Fluorescent Light tube     |
| G50/038                         | Ballast                    |
| G50/026                         | Starter holder             |
| G50/027                         | Starter FSU                |
| G50/053                         | Lamp holder                |
| G45/097                         | Light switch               |

# Mistral



Imperial Machine Company Limited  
Unit 1, Abbey Road  
Wrexham Industrial Estate  
Wrexham LL13 9RF  
Tel: +44 (0)1978 661155  
Fax: +44 (0)1978 729990  
Spares Fax: +44 (0)1978 667759  
E-mail: [service@imco.co.uk](mailto:service@imco.co.uk)  
E-mail: [sales@imco.co.uk](mailto:sales@imco.co.uk)  
Website: [www.imco.co.uk](http://www.imco.co.uk)